



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Removing and installing engine	2
1.2 Notes on removing	2
1.3 Notes on installing	3
1.4 Tightening torques	5
1.5 Assembly mountings	5
1.6 Aligning engine and gearbox	7
1.7 Renewing engine carrier rubber mounting	7
1.8 Additional information and removal instructions for vehicles with air conditioner	8
13 - Crankshaft group	10
1 Dismantling and assembling engine	10
1.1 Dismantling and assembling engine	10
1.2 Removing and installing ribbed belt	20
1.3 Removing and installing toothed belt	21
1.4 Checking semi-automatic toothed belt tensioning roller	23
2 Removing and installing sealing flange and flywheel	24
2.1 Removing and installing sealing flange and flywheel	24
2.2 Renewing crankshaft oil seal - pulley end -	26
3 Removing and installing crankshaft	28
3.1 Removing and installing crankshaft	28
3.2 Crankshaft dimensions	30
4 Dismantling and assembling pistons and conrods	31
4.1 Dismantling and assembling pistons and conrods	31
4.2 Piston and cylinder dimensions	36
15 - Cylinder head, Valve gear	37
1 Removing and installing cylinder head	37
1.1 Removing and installing cylinder head	37
1.2 Removing and installing cylinder head	40
1.3 Checking compressions	42
2 Servicing valve gear	43
2.1 Servicing valve gear	43
2.2 Reworking valve seats	48
2.3 Removing and installing camshaft oil seal	50
2.4 Checking hydraulic bucket tappets	51
2.5 Removing and installing camshaft	52
2.6 Checking valve guides	54
2.7 Renewing valve guides	54
2.8 Renewing valve stem seals	56
17 - Lubrication	58
1 Removing and installing parts of the lubrication system	58
1.1 Removing and installing parts of the lubrication system	58
1.2 Checking oil pressure and oil pressure switch	65



19 - Cooling system	67
1 Removing and installing parts of cooling system	67
1.1 Removing and installing parts of cooling system	67
1.2 Parts of cooling system body side	68
1.3 Parts of cooling system - engine side	71
1.4 Dismantling and assembling coolant pump	74
1.5 Draining and filling cooling system	75
1.6 Removing and installing radiator and radiator fan	77
20 - Fuel supply system	79
1 Removing and installing parts of fuel supply system	79
1.1 Removing and installing parts of fuel supply system	79
1.2 Removing and installing fuel tank with its attachments	80
1.3 Safety precautions when working on the fuel supply system	86
1.4 Rules for cleanliness	86
1.5 Adjusting throttle cable	86
1.6 Removing and installing fuel delivery unit	87
1.7 Checking fuel pump	88
1.8 Removing and installing parts of the activated charcoal filter system	92
1.9 Checking fuel tank breather	94
26 - Exhaust system	96
1 Removing and installing parts of exhaust system	96
1.1 Removing and installing parts of exhaust system	96