



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	3
1.3 Notes on installing	5
1.4 Tightening torques	6
1.5 Assembly mountings	7
1.6 Aligning engine and gearbox	8
1.7 Renewing engine carrier rubber mounting	9
1.8 Additional information and removal instructions for vehicles with air conditioner	9
13 - Crankshaft group	11
1 Dismantling and assembling engine	11
1.1 Dismantling and assembling engine	11
1.2 Removing and installing ribbed belt	22
1.3 Removing and installing toothed belt	25
2 Removing and installing sealing flange and pressure plate/drive plate	28
2.1 Removing and installing sealing flange and pressure plate/drive plate	28
2.2 Renewing crankshaft oil seal - pulley end -	31
2.3 Removing and installing drive plate	32
3 Removing and installing crankshaft	36
3.1 Removing and installing crankshaft	36
3.2 Crankshaft dimensions	38
4 Dismantling and assembling pistons and conrods	39
4.1 Dismantling and assembling pistons and conrods	39
4.2 Piston and cylinder dimensions	45
15 - Cylinder head, Valve gear	46
1 Removing and installing cylinder head	46
1.1 Removing and installing cylinder head	46
1.2 Removing and installing cylinder head	53
1.3 Checking compressions	54
2 Servicing valve gear	56
2.1 Servicing valve gear	56
2.2 Reworking valve seats	62
2.3 Removing and installing camshaft oil seal	64
2.4 Removing and installing camshaft	65
2.5 Checking hydraulic bucket tappets	66
2.6 Checking valve guides	67
2.7 Renewing valve guides	68
2.8 Renewing valve stem seals	69
17 - Lubrication	71
1 Removing and installing parts of the lubrication system	71
1.1 Removing and installing parts of the lubrication system	71
1.2 Checking oil pressure and oil pressure switch	77



19 - Cooling system	78
1 Removing and installing parts of cooling system	78
1.1 Removing and installing parts of cooling system	78
1.2 Parts of cooling system body side	79
1.3 Parts of cooling system - engine side	82
1.4 Dismantling and assembling coolant pump	85
1.5 Draining and filling cooling system	86
1.6 Removing and installing radiator and radiator fan	88
20 - Fuel supply system	90
1 Removing and installing parts of fuel supply system	90
1.1 Removing and installing parts of fuel supply system	90
1.2 Removing and installing fuel tank with its attachments and fuel filter	91
1.3 Safety precautions when working on the fuel supply system	96
1.4 Rules for cleanliness	97
1.5 Adjusting throttle cable	97
1.6 Removing and installing fuel delivery unit	99
1.7 Checking fuel pump	100
1.8 Servicing the activated charcoal filter system	105
1.9 Checking fuel tank breather	108
26 - Exhaust system	111
1 Removing and installing parts of exhaust system	111
1.1 Removing and installing parts of exhaust system	111