



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	4
1.3 Notes on installing	7
1.4 Tightening torques	9
1.5 Assembly mountings	9
1.6 Aligning engine and gearbox	10
1.7 Renewing engine carrier rubber mounting	12
1.8 Additional information and removal instructions for vehicles with air conditioner	13
13 - Crankshaft group	15
1 Dismantling and assembling engine	15
1.1 Dismantling and assembling engine	15
1.2 Removing and installing ribbed belt	35
1.3 Checking valve timing	36
1.4 Adjusting valve timing	39
2 Removing and installing sealing flanges and flywheel/drive plate	46
2.1 Removing and installing sealing flanges and flywheel/drive plate	46
2.2 Renewing crankshaft oil seal - vibration damper end -	51
2.3 Removing and installing drive plate	52
3 Removing and installing crankshaft	54
3.1 Removing and installing crankshaft	54
4 Dismantling and assembling pistons and conrods	57
4.1 Dismantling and assembling pistons and conrods	57
4.2 Piston and cylinder dimensions	64
15 - Cylinder head, Valve gear	65
1 Removing and installing cylinder head	65
1.1 Removing and installing cylinder head	65
1.2 Removing and installing cylinder head cover	72
1.3 Installing cylinder head	73
1.4 Checking compressions	74
2 Servicing valve gear	75
2.1 Servicing valve gear	75
2.2 Reworking valve seats	82
2.3 Removing and installing camshafts	83
2.4 Checking hydraulic bucket tappets	86
2.5 Checking valve guides	87
2.6 Renewing valve guides	87
2.7 Renewing valve stem seals	89
17 - Lubrication	91
1 Removing and installing parts of the lubrication system	91
1.1 Removing and installing parts of the lubrication system	91
1.2 Dismantling and assembling oil filter housing	97
1.3 Dismantling and assembling oil pump	100



1.4	Checking oil pressure and oil pressure switch	103
19	- Cooling system	105
1	Removing and installing parts of cooling system	105
1.1	Removing and installing parts of cooling system	105
1.2	Parts of cooling system body side	106
1.3	Parts of cooling system engine side	109
1.4	Dismantling and assembling coolant thermostat housing	113
1.5	Draining and filling cooling system	116
1.6	Removing and installing radiator and radiator fan	118
1.7	Removing and installing coolant pump	119
1.8	Checking coolant continued circulation pump and radiator fan run-on	122
20	- Fuel supply system	124
1	Removing and installing parts of fuel supply system	124
1.1	Removing and installing parts of fuel supply system	124
1.2	Removing and installing fuel tank with its attachments and fuel filter, front wheel drive	125
1.3	Removing and installing fuel tank with its attachments and fuel filter, four wheel drive	131
1.4	Safety precautions when working on the fuel supply system	137
1.5	Rules for cleanliness	137
1.6	Adjusting throttle cable	138
1.7	Removing and installing fuel delivery unit	140
1.8	Checking fuel pump	142
1.9	Removing and installing parts of the activated charcoal filter system	148
1.10	Checking fuel tank breather	150
26	- Exhaust system	153
1	Removing and installing parts of exhaust system, front wheel drive	153
1.1	Removing and installing parts of exhaust system, front wheel drive	153
1.2	Exhaust manifold, front exhaust pipe and catalyst with attachments	154
1.3	Removing and installing parts of exhaust system, front wheel drive	157
1.4	Removing and installing parts of exhaust system, four wheel drive	161
1.5	Exhaust manifold, front exhaust pipe and catalyst with attachments	162
1.6	Silencer with mountings	164
1.7	Removing and installing front exhaust pipe and catalyst with attachments	165