



## Contents

<b>01 - Self diagnosis . . . . .</b>	<b>1</b>
1 <b>Self diagnosis . . . . .</b>	1
1.1   Self diagnosis . . . . .	1
1.2   Function . . . . .	1
1.3   Technical data of self diagnosis . . . . .	1
1.4   Connecting fault reader V.A.G 1551 and selecting engine electronics control unit . . . . .	2
1.5   Interrogating and erasing fault memory . . . . .	3
1.6   Fault table . . . . .	5
1.7   Final control diagnosis . . . . .	7
1.8   Read measured value block and basic settings . . . . .	11
1.9   Display group overview . . . . .	11
<b>24 - Mixture preparation, Injection . . . . .</b>	<b>14</b>
1 <b>Digifant injection and ignition system . . . . .</b>	14
1.1   Digifant injection and ignition system . . . . .	14
1.2   Fitting locations overview . . . . .	14
1.3   Servicing injection part . . . . .	17
1.4   Dismantling and assembling intake manifold upper part . . . . .	24
1.5   Dismantling and assembling intake manifold lower part . . . . .	27
1.6   Dismantling and assembling air cleaner . . . . .	29
1.7   Safety precautions . . . . .	31
1.8   Rules for cleanliness . . . . .	31
1.9   Technical data . . . . .	31
1.10   Performing basic setting . . . . .	32
1.11   Checking Lambda probe and Lambda control . . . . .	33
1.12   Checking idling stabilization . . . . .	36
1.13   Checking engine operating mode . . . . .	37
1.14   Checking throttle valve potentiometer . . . . .	38
1.15   Checking coolant temperature sender . . . . .	41
1.16   Checking intake air temperature sender . . . . .	44
1.17   Checking engine speed sender . . . . .	46
1.18   Checking and adjusting idling switch . . . . .	48
1.19   Checking control unit voltage supply . . . . .	51
1.20   Matching engine electronic control unit to electronic immobilizer . . . . .	53
1.21   Checking Lambda probe heating . . . . .	54
1.22   Checking starter signal . . . . .	55
1.23   Checking injectors . . . . .	55
1.24   Checking fuel pressure regulator and holding pressure . . . . .	58
1.25   Checking intake air system for leaks (unmetered air) . . . . .	59
1.26   Checking intake air preheating . . . . .	60
<b>28 - Ignition system . . . . .</b>	<b>62</b>
1 <b>Digifant injection and ignition system . . . . .</b>	62
1.1   Digifant injection and ignition system . . . . .	62
1.2   Servicing ignition part . . . . .	62
1.3   Dismantling and assembling distributor . . . . .	66
1.4   Safety precautions . . . . .	67
1.5   Test data, spark plugs . . . . .	68
1.6   Checking ignition timing control . . . . .	68
1.7   Checking No. 1 Cyl. recognition sender . . . . .	69
1.8   Checking knock sensors . . . . .	70
1.9   Checking ignition transformer . . . . .	71
1.10   Checking ignition transformer output stage . . . . .	71
1.11   Renewing rotor arm . . . . .	74