



Contents

01 - Self diagnosis	1
1 Self diagnosis	1
1.1 Self diagnosis	1
1.2 Function	1
1.3 Technical data of self diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	1
1.5 Interrogating fault memory	3
1.6 Fault table	4
1.7 Erasing fault memory	5
1.8 Final control diagnosis	6
1.9 Reading measured value block	10
23 - Mixture preparation, Injection	12
1 Servicing fuel injection system	12
1.1 Servicing fuel injection system	12
1.2 Injection pump with two-part sprocket	16
1.3 Servicing fuel filter	18
1.4 Rules for cleanliness	19
1.5 Checking fuel system for leaks	20
1.6 Actuator controlled, load-dependent injection timing	21
1.7 Removing and installing injection pump	21
1.8 Checking and adjusting injection pump timing	28
1.9 Checking valve timing	32
1.10 Adjusting idling speed, idling speed boost and engine governed speed	33
1.11 Residual volume basic setting	36
1.12 Idling speed boost actuator	37
1.13 Checking commencement of injection valve	37
1.14 Checking engine temperature sender	38
1.15 Resistance figures for engine temperature sender	38
1.16 Checking idling speed boost valve	39
1.17 Removing and installing injectors	39
1.18 Servicing injectors	40
2 Servicing injection pump	42
2.1 Servicing injection pump	42
2.2 Removing and installing throttle lever or return spring	48
2.3 Renewing pump cover throttle lever bush, pump cover gasket and throttle lever shaft O-ring	52
2.4 Renewing fuel delivery adjusting screw O-ring	54
2.5 Renewing idling speed boost shaft O-ring	55
2.6 Renewing injection timing device cover O-ring	55
2.7 Renewing CSA lever/cover O-ring	56
2.8 Sealing injection pump connections	56
28 - Glow plug system	58
1 Checking glow plug system	58
1.1 Checking glow plug system	58
1.2 Checking glow plug current consumption with V.A.G 1315A	58
1.3 Checking glow plugs	58
1.4 Glow plugs with burned electrodes	59