



Contents

01 - Self-diagnosis	1
1 Self diagnosis	1
1.1 Self diagnosis	1
1.2 Function	1
1.3 Technical data of self diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	2
1.5 Interrogating fault memory	3
1.6 Fault table	4
1.7 Erasing fault memory	10
1.8 Final control diagnosis	11
1.9 Reading measured value block	14
1.10 Display group overview	15
1.11 Evaluating measured value blocks, engine codes 1Z and AHU	17
1.12 Evaluating measured value blocks, engine code AFN	28
23 - Mixture preparation, Injection	40
1 Servicing Diesel direct injection system	40
1.1 Servicing Diesel direct injection system	40
1.2 Safety precautions	40
1.3 Rules for cleanliness	40
1.4 Fitting locations overview	41
1.5 Servicing injection pump	45
1.6 Servicing fuel filter	49
1.7 Servicing accelerator linkage	51
1.8 Setting engine to number 1 cylinder with engine removed	53
1.9 Removing, installing and adjusting accelerator position sender	53
1.10 Checking sender adjustment	54
1.11 Removing and installing injection pump	55
1.12 Dynamically checking and adjusting commencement of injection	58
1.13 Checking valve timing	59
1.14 Removing and installing injectors	61
1.15 Servicing injectors	61
1.16 Removing and installing fuel temperature sender	62
1.17 Renewing injection timing device cover O-ring	62
1.18 Wiring and component check with test box V.A.G 1598/18	63
1.19 Checking engine speed sender	63
1.20 Checking intake manifold pressure sender and altitude sender	64
1.21 Checking coolant temperature sender	66
1.22 Checking brake light switch and brake pedal switch	68
1.23 Checking intake manifold sender	70
1.24 Checking Diesel direct injection system current supply	72
1.25 Checking fuel temperature sender	73
1.26 Checking modulating piston movement sender and quantity adjuster	74
1.27 Checking needle lift sender	77
1.28 Checking injection adjuster control range	78
1.29 Checking charge pressure control	80
1.30 Hose connection diagram for charge pressure control, engine code AFN	86
1.31 Checking exhaust gas recirculation and air mass meter function	87
1.32 Checking speedometer sender	91
1.33 Checking accelerator position sender	92
2 Replacing, coding and matching engine control unit	94
2.1 Replacing, coding and matching engine control unit	94
2.2 Replacing engine control unit	94
2.3 Coding engine control unit	94



2.4	Matching engine electronic control unit to electronic immobilizer96
28	- Glow plug system98
1	Checking glow plug system98
1.1	Checking glow plug system98
1.2	Checking glow plugs98