



## Contents

<b>1</b>	<b>Engine list</b>	<b>1</b>
<b>2</b>	<b>Service work</b>	<b>8</b>
2.1	Service tables	8
2.2	Delivery inspection	11
2.3	Oil change service	12
2.4	Inspection service every 12 months for vehicles ►1999	14
2.5	Inspection service every 30,000 km for vehicles ►1999	16
2.6	Additional work / vehicles ►1999	18
2.7	Inspection service for vehicles 2000►	21
2.8	Time or distance dependent additional work, vehicles 2000►	23
<b>3</b>	<b>General information</b>	<b>28</b>
3.1	Sticker	28
3.2	Connecting vehicle diagnostic tester	29
3.3	Severe operating conditions	32
3.4	Raising vehicle	33
3.5	Vehicle identification number	34
3.6	Vehicle data sticker	34
3.7	Information on long-life service or time or distance dependent service 2000►	34
3.8	Countries where diesel has a high sulphur content	37
3.9	Engine code and engine number	37
3.10	RME fuel (biodiesel)	37
3.11	Identification plate	38
<b>4</b>	<b>Descriptions of work:</b>	<b>39</b>
4.1	8-way memory seat: initialising (activation)	41
4.2	Rear final drive: checking oil level	41
4.3	Additive container: extracting and replenishing new additive	42
4.4	Diesel particulate filter: reading ash load level	47
4.5	Swivel joints: inspecting	48
4.6	Automatic gearbox: checking front wheel drive oil level	48
4.7	Automatic gearbox: checking ATF level	48
4.8	Battery: checking battery terminal clamps for secure seating	48
4.9	Battery: checking using battery tester with printer VAS 5097A	49
4.10	Changing brake fluid	49
4.11	Brake fluid level: checking	54
4.12	Tyres: checking condition, wear pattern, inflation pressure, tread depth	55
4.13	Brake system: inspecting for leaks and damage	62
4.14	Front and rear brake pads/linings: checking thickness	62
4.15	Renewing diesel particulate filter	65
4.16	Electric windows: initialising (activation)	65
4.17	Carry out vehicle system test	66
4.18	Boots: inspecting	67
4.19	V-belt: renewing (4-cylinder petrol engine)	67
4.20	Poly V-belt: checking condition	69
4.21	Fuel filter: renewing (diesel engine)	70
4.22	Fuel filter: draining water (diesel engine)	73
4.23	Checking crankcase pressure	73
4.24	Cooling system: checking frost protection and coolant level	75
4.25	Air filter: cleaning housing and renewing filter element	77
4.26	Engine oil level: checking	79
4.27	Engine oil: draining or extracting and replenishing; renewing oil filter	79
4.28	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	86
4.29	Engine cover panel -top-: removing and installing	86



4.30	Engine cover -bottom- (noise insulation): removing and installing	90
4.31	Road test: performing (driving behaviour, noises, air conditioner etc.)	91
4.32	Wheel securing bolts: tightening to specified torque	91
4.33	Radio/radio-navigation system: activating anti-theft coding	93
4.34	Tyre repair set	95
4.35	Dash panel insert: adapting to required language	95
4.36	Manual gearbox/final drive: checking oil level	96
4.37	Window wash/wipe system and headlight washer system: checking function	96
4.38	Windscreen wiper blades: checking park position, if wiper blades »judder«: checking setting angle	101
4.39	Headlight adjustment: checking	103
4.40	Sunroof: checking function, cleaning and greasing guide rails	112
4.41	Sliding sunroof drains: checking for blockage, cleaning if necessary	113
4.42	Power assisted steering: checking fluid level	114
4.43	Service interval display: resetting	115
4.44	Service interval display: recoding	125
4.45	Track rod ends: checking clearance, firm seating and boots	132
4.46	Dust and pollen filter: renewing filter element	133
4.47	Door arrester: lubricating	133
4.48	Track control link front axle: checking	133
4.49	Transport locks: removing blocking pieces from front axle springs (if fitted)	134
4.50	Clock: setting to correct time	134
4.51	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	135
4.52	Front axle (Passat Protect): renewing	135
4.53	Cleaning plenum chamber	135
4.54	Camshaft drive toothed belt: renewing (4-cylinder TDI engines)	136
4.55	Camshaft drive toothed belt and toothed belt tensioning roller: renewing (4-cylinder TDI unit injector engines)	136
4.56	Camshaft drive toothed belt and toothed belt tensioning roller: renewing (6-cylinder TDI engines)	137
4.57	Toothed belt for injection pump: renewing (6-cylinder TDI engines)	137
4.58	Camshaft drive and injection pump toothed belts: checking condition (6-cylinder TDI engines)	137
4.59	Camshaft drive toothed belt and toothed belt tensioning roller: renewing (V6 petrol engines)	138
4.60	Camshaft drive toothed belt: renewing (1.8l 4-cylinder 5-valve petrol engines)	138
4.61	Camshaft drive toothed belt: renewing (2.0 l 4-cylinder 5-valve petrol engines)	139
4.62	Camshaft drive toothed belt: checking condition and tension (diesel engine code AHH)	139
4.63	Toothed belt: checking for wear (diesel engine)	140
4.64	Camshaft drive toothed belt: checking (4-cylinder petrol engine)	140
4.65	Spark plugs: renewing	141
4.66	Rear lid: lubricating left and right multi-joint hinge	152
4.67	Driver and front passenger airbags: visual check of airbag units	154
<b>5</b>	<b>Exhaust emissions test</b>	<b>156</b>
5.1	Exhaust emissions test for petrol engines without OBD	156
5.2	Exhaust emissions test for petrol engines with OBD	172
5.3	Procedures for vehicles with diesel engine without OBD	174
5.4	Procedures for vehicles with diesel engine and OBD	180
<b>6</b>	<b>Glossary</b>	<b>184</b>