



## Contents

<b>27 - Starter, current supply, CCS</b> .....	<b>1</b>
<b>1 Battery A</b> .....	<b>1</b>
1.1 General information on batteries .....	1
1.2 Types of batteries .....	1
1.3 Warning notices and safety regulations .....	1
1.4 Battery terminal connection .....	1
<b>2 Checking battery</b> .....	<b>2</b>
<b>3 Charging battery</b> .....	<b>3</b>
<b>4 Disconnecting and reconnecting battery A</b> .....	<b>4</b>
4.1 Procedure after reconnecting battery .....	5
<b>5 Removing and installing battery A</b> .....	<b>6</b>
<b>6 Specified torques: battery A</b> .....	<b>8</b>
<b>7 Starter B</b> .....	<b>9</b>
7.1 Checking starter .....	9
7.2 Removing and installing starter on vehicles with 4, 5 and 6-cylinder engines .....	10
7.3 Removing and installing starter on vehicles with 8-cylinder engines .....	12
<b>8 Specified torques: starter</b> .....	<b>14</b>
<b>9 Alternator C</b> .....	<b>15</b>
9.1 Characteristics of compact alternator .....	15
9.2 Checking V-belt .....	17
9.3 Checking poly V-belt .....	18
9.4 Checking poly V-belt (8-cylinder petrol engine) .....	18
9.5 Checking alternator .....	18
9.6 4-cylinder petrol engine (vehicles ▶ 04.99) .....	20
9.7 4-cylinder petrol engine (vehicles 05.99 ▶) .....	22
9.8 5-cylinder petrol engine (vehicles ▶ 04.99) .....	23
9.9 5-cylinder petrol engine (vehicles 05.99 ▶) .....	24
9.10 6-cylinder petrol engine (vehicles ▶ 04.99) .....	25
9.11 6-cylinder petrol engine (vehicles 05.99 ▶) .....	26
9.12 Alternator, 8-cylinder petrol engine .....	27
9.13 4-cylinder diesel engine (vehicles ▶ 04.99) .....	31
9.14 4-cylinder diesel engine (vehicles 05.99 ▶) .....	32
9.15 6-cylinder diesel engine (vehicles ▶ 04.99) .....	33
9.16 6-cylinder diesel engine (vehicles 05.99 ▶) .....	34
9.17 Poly V-belt drives .....	35
9.18 Testing carbon brushes for alternator C (vehicles ▶ 04.99) .....	39
9.19 Testing carbon brushes for alternator C (vehicles 05.99 ▶) .....	40
9.20 Removing and installing voltage regulator C1 for alternator C (vehicles ▶ 04.99) .....	40
9.21 Removing and installing voltage regulator C1 for alternator C (vehicles ▶ 05.99) .....	40
9.22 Removing and installing poly V-belt pulley on alternator C .....	41
9.23 Installing poly V-belt pulley with freewheel .....	42
<b>10 Specified torques: alternator</b> .....	<b>45</b>
<b>11 Removing and installing cruise control system (CCS) (vehicles with no electronic throttle)</b> .....	<b>46</b>
11.1 Cruise control system (CCS) (vehicles with diesel or 5-cylinder petrol engine) .....	46
11.2 Cruise control system (CCS) (vehicles with 4 or 6-cylinder petrol engine) .....	46
11.3 Adjusting rods on positioning element .....	46
11.4 Removing positioning element .....	47
11.5 Removing and installing vacuum pump .....	48
11.6 Removing and installing breather valve .....	49
11.7 Checking vacuum system for leaks .....	49



12	Removing and installing cruise control system (CCS) (in vehicles with electronic accelerator pedal) .....	50
<b>90</b>	<b>- Gauges, instruments .....</b>	<b>51</b>
1	<b>Dash panel insert .....</b>	<b>51</b>
1.1	Renewing dash panel insert .....	51
1.2	Removing and installing dash panel insert .....	52
1.3	Renewing bulbs in dash panel insert .....	54
1.4	Pin assignment of connections on dash panel insert (vehicles ▶ 04.99) .....	56
1.5	Pin assignment of connections on dash panel insert (vehicles 05.99 ▶ 04.01) .....	58
1.6	Pin assignment of connections on dash panel insert (vehicles 05.01 ▶) .....	61
1.7	Warning lamp symbols in dash panel insert (vehicles 11.03 ▶) .....	64
1.8	Description of instruments .....	65
2	<b>Service interval display .....</b>	<b>66</b>
2.1	Resetting service interval display .....	66
<b>92</b>	<b>- Windscreen wash/wipe system .....</b>	<b>67</b>
1	<b>Windscreen wiper system .....</b>	<b>67</b>
1.1	Removing and installing windscreen wiper system .....	67
1.2	Removing and installing wiper arms .....	72
1.3	Adjusting windscreen wiper park position .....	73
1.4	Removing and installing wiper rubber blade .....	74
1.5	Removing and installing aerodynamic wipers .....	74
1.6	Removing and installing rain sensor G213 .....	76
1.7	Fitting a new adhesive pad to rain sensor (Valeo) .....	77
2	<b>Windscreen washer system .....</b>	<b>82</b>
2.1	Assembly overview - windscreen washer system .....	82
2.2	Removing and installing reservoir for windscreen and headlight washer systems .....	83
2.3	Removing and installing windscreen and rear window washer pump V59 .....	85
2.4	Removing and installing windscreen spray jets .....	86
2.5	Adjusting windscreen washer system spray jets .....	86
3	<b>Rear window wiper system .....</b>	<b>88</b>
3.1	Assembly overview - rear window wiper system .....	88
3.2	Removing and installing rear window wiper .....	88
3.3	Adjusting rear window wiper park position .....	90
3.4	Renewing wiper blade .....	91
4	<b>Rear window washer system .....</b>	<b>92</b>
4.1	Assembly overview - rear window washer system .....	92
4.2	Renewing spray jet .....	93
4.3	Adjusting spray jet .....	93
5	<b>Headlight washer system .....</b>	<b>94</b>
5.1	Assembly overview - headlight washer system .....	94
5.2	Removing and installing headlight washer system pump V11 .....	95
5.3	Removing and installing pop-up spray jet cylinder .....	96
5.4	Renewing pop-up cylinder cover cap (vehicles 10.00 ▶) .....	97
5.5	Adjusting headlight washer system spray jets .....	97
5.6	Bleeding headlight washer system .....	97
6	<b>Washer fluid line hose couplings .....</b>	<b>99</b>
7	<b>Hose repair .....</b>	<b>100</b>
8	<b>Specified torques: window wash/wipe system .....</b>	<b>101</b>
<b>94</b>	<b>- Lights, bulbs, switches - exterior .....</b>	<b>102</b>
1	<b>Headlight .....</b>	<b>102</b>
1.1	Assembly overview - headlight (vehicles ▶ 09.00) .....	102



1.2	Assembly overview - headlight (vehicles 10.00 ▶)	103
1.3	Removing and installing headlight (vehicles ▶ 09.00)	103
1.4	Removing and installing headlight (vehicles 10.00 ▶)	106
1.5	Removing and installing front fog light (vehicles 10.00 ▶)	106
1.6	Repairing side guide pins for headlight (vehicles ▶ 09.00)	107
1.7	Repairing headlight retaining tabs (vehicles 10.00 ▶)	108
1.8	Renewing headlight bulbs (vehicles ▶ 09.00)	112
1.9	Renewing headlight bulbs (vehicles 10.00 ▶)	114
1.10	Removing and installing left headlight range control motor V48 or right headlight range control motor V49 (vehicles ▶ 09.00)	116
1.11	Removing and installing left headlight range control motor V48 or right headlight range control motor V49 (vehicles ▶ 10.00)	117
1.12	Converting headlights for use when driving on the left or right (vehicles ▶ 09.00)	118
1.13	Converting headlights for use when driving on the left or right (vehicles 10.00 ▶)	119
1.14	Adjusting headlights (vehicles ▶ 09.00)	119
<b>2</b>	<b>Headlight with left gas discharge lamp L13 and/or right gas discharge lamp L14</b>	<b>120</b>
2.1	Procedure and safety notes for gas discharge bulbs	120
2.2	Assembly overview of headlight with left gas discharge lamp L13 and/or right gas discharge lamp L14 (vehicles ▶ 09.00)	122
2.3	Assembly overview of headlight with left gas discharge lamp L13 and/or right gas discharge lamp L14 (vehicles 10.00 ▶)	124
2.4	Renewing bulbs for gas discharge lamp headlights (vehicles ▶ 09.00)	125
2.5	Renewing bulbs for gas discharge lamp headlights (vehicles 10.00 ▶)	128
2.6	Removing and installing left headlight range control motor V48 or right headlight range control motor V49	132
2.7	Removing and installing control unit for left gas discharge lamp J343 and/or control unit for right gas discharge lamp J344 (vehicles ▶ 09.00)	133
2.8	Control unit for left gas discharge lamp J343 and/or control unit for right gas discharge lamp J344 (vehicles 10.00 ▶)	135
2.9	Removing and installing control units for headlight range control	135
2.10	Removing and installing front left vehicle level sensor G78 (vehicles 10.00 ▶)	136
2.11	Removing and installing rear left vehicle level sensor G76 (vehicles 10.00 ▶)	136
2.12	Converting headlight for driving on left / right (vehicles with gas discharge lamp headlights ▶ 09.00)	137
2.13	Converting headlight for driving on left / right (vehicles with gas discharge lamp headlights 10.00 ▶)	138
2.14	Adjusting headlight with gas discharge lamps	139
<b>3</b>	<b>Front turn signals</b>	<b>140</b>
3.1	Removing and installing front turn signals (vehicles ▶ 09.00)	140
3.2	Renewing front left turn signal bulb M5 or front right turn signal bulb M7	141
<b>4</b>	<b>Removing and installing side repeater turn signal bulb or mirror turn signal bulb</b>	<b>142</b>
4.1	Left side repeater turn signal bulb M18 or right side repeater turn signal bulb M19 (vehicles ▶ 10.03)	142
4.2	Driver side mirror turn signal light L131 or passenger side mirror turn signal light L132 (vehicles 11.03 ▶)	142
<b>5</b>	<b>Tail lights</b>	<b>144</b>
5.1	Assembly overview - tail lights (vehicles ▶ 09.00)	144
5.2	Assembly overview - tail lights for saloon (vehicles 10.00 ▶)	145
5.3	Assembly overview - tail lights for Variant (vehicles 10.00 ▶)	146
5.4	Removing and installing tail light (vehicles ▶ 09.00)	146
5.5	Removing and installing tail light (saloon 10.00 ▶)	147
5.6	Removing and installing tail light (Variant 10.00 ▶)	147
5.7	Removing and installing tail light bulb holder (vehicles ▶ 09.00)	148
5.8	Removing and installing tail light bulb holder (saloon 10.00 ▶)	148
5.9	Removing and installing tail light bulb holder (Variant 10.00 ▶)	149
<b>6</b>	<b>Removing and installing number plate light X , vehicles ▶ 09.00</b>	<b>150</b>
<b>7</b>	<b>Removing and installing number plate light X , vehicles 10.00 ▶</b>	<b>151</b>



<b>8</b>	<b>High-level brake light bulb M25</b>	<b>152</b>
8.1	High-level brake light bulb M25 (saloon ▶ 09.00)	152
8.2	High level brake light M25 (Variant ▶ 09.00)	153
8.3	High level brake light M25 (saloon 10.00 ▶)	153
8.4	High level brake light M25 (Variant 10.00 ▶)	154
<b>9</b>	<b>Removing and installing steering column switch</b>	<b>155</b>
9.1	Pin assignment on steering column switch	157
<b>10</b>	<b>Ignition/starter switch D and lock cylinder</b>	<b>160</b>
10.1	Removing and installing lock cylinder	160
10.2	Removing and installing ignition/starter switch D	161
10.3	Pin assignment of connection on ignition switch D	162
<b>11</b>	<b>Parking aid</b>	<b>163</b>
11.1	Assembly overview - parking aid (saloon)	163
11.2	Assembly overview - parking aid (Variant)	164
11.3	Removing and installing parking aid control unit J446	164
11.4	Removing and installing parking aid senders	166
11.5	Removing and installing rear parking aid warning buzzer H15 (saloon)	166
<b>96 - Lights, bulbs, switches - interior</b>		<b>168</b>
<b>1</b>	<b>Immobilizer</b>	<b>168</b>
1.1	Renewing immobilizer control unit J362	168
1.2	Removing and installing immobilizer control unit J362	168
1.3	Removing and installing immobilizer reader coil D2	169
1.4	Transponder	169
<b>2</b>	<b>Interior lights and switches</b>	<b>170</b>
2.1	Removing and installing glove compartment light W6	170
2.2	Removing and installing interior light	170
2.3	Removing and installing luggage compartment light W3	171
2.4	Rear right reading light W12 and rear left reading light W11	171
2.5	Removing and installing rear reading lights with sensors for interior monitor W12 and W11 and sensors G273 and G274	173
2.6	Removing and installing warning lamp for front passenger side airbag deactivated K145	174
2.7	Removing and installing headlight range control regulator E102 and E20 with bulb in headlight range control regulator L54	175
2.8	Removing and installing light switch E1 and front and rear fog light switches E23 with bulb for light switch illumination L9	176
2.9	Removing and installing window regulator switch	177
2.10	Removing and installing luggage compartment light switch F5 with rear lid release switch E165 (Variant)	179
2.11	Removing and installing mirror adjustment switch E43 with mirror adjustment change-over switch E48 with mirror adjustment switch illumination bulb L78	180
2.12	Removing and installing fuel tank flap release button E319 , (vehicles ▶ 09.00)	181
2.13	Removing and installing fuel tank flap release button E319 and rear lid remote release switch E188 with illumination for remote release button L104 (vehicles 10.00 ▶)	181
2.14	Removing and installing switches in centre of dash panel	182
2.15	Removing and installing door contact switch	183
2.16	Removing and installing sliding sunroof adjustment regulator E139	183
2.17	Removing and installing key operated switch to deactivate front passenger side airbag E224	184
2.18	Removing and installing rear lid handle release button E234 (vehicles 10.00 ▶)	185
2.19	Removing and installing rear lid central locking motor V53 (saloon 10.00 ▶)	186
2.20	Removing and installing rear lid central locking motor V53 (Variant 10.00 ▶)	187
<b>3</b>	<b>Anti-theft alarm system (ATA) with interior monitoring (IM)</b>	<b>189</b>
3.1	Assembly overview	189
3.2	Convenience system central control unit J393	191



---

3.3	Removing and installing right interior monitoring sensor G273 and left interior monitoring sensor G274	193
3.4	Removing and installing interior monitoring deactivation switch E267 with interior monitoring deactivation switch illumination L118	193
3.5	Removing and installing alarm horn H12	194
3.6	Removing and installing anti-theft alarm H8	195
<b>97</b>	<b>- Wiring</b>	<b>196</b>
<b>1</b>	<b>Vehicle diagnosis, testing and information systems</b>	<b>196</b>
1.1	Connecting vehicle diagnosis, testing and information system VAS 5051A	196
<b>2</b>	<b>Removing and installing fuse holder and relay carrier</b>	<b>198</b>
2.1	Removing and installing fuse holder	198
2.2	Removing and installing relay plate and 13 position relay carrier	198
2.3	Removing and installing protective housing for control units in plenum chamber	199
2.4	Removing and installing additional relay carrier with additional fuse holder	199
<b>3</b>	<b>Repairing wiring harness and connectors</b>	<b>201</b>

