



Contents

01 - Self-diagnosis	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Tools	1
1.3 Connecting fault reader	2
1.4 Self-diagnosis of immobilizer on vehicles with green dash panel insert background lighting	3
1.5 Performing self-diagnosis of immobilizer	4
1.6 Read measured value block	10
1.7 Matching ignition keys	11
1.8 Lost key procedure	13
1.9 Procedure after changing dash panel insert (Adaption)	14
1.10 Procedure after changing engine control unit (Adaption)	14
1.11 Procedure for immobilizer malfunctions	15
2 Self-diagnosis of immobilizer on vehicles with blue dash panel insert background lighting	17
2.1 Self-diagnosis of immobilizer on vehicles with blue dash panel insert background lighting	17
2.2 Performing self-diagnosis of immobilizer	18
2.3 Reading measured value block	23
2.4 Adapting ignition keys	25
2.5 Lost key procedure	27
2.6 Procedure after changing dash panel insert (Adaption)	28
2.7 Procedure after changing engine control unit (Adaption)	28
2.8 Procedure for immobilizer malfunctions	29
3 Self-diagnosis of dash panel insert > 04.99	31
3.1 Self-diagnosis of dash panel insert > 04.99	31
3.2 Locations for dash panel insert senders and sensors	32
3.3 Performing self-diagnosis	36
3.4 Final control diagnosis	41
3.5 Coding control unit	44
3.6 Read measured value block	46
3.7 Matching service interval data when changing the dash panel insert	48
3.8 Resetting the service interval display	50
3.9 Reading distance impulse number (K number)	53
3.10 Adapting distance travelled display	55
3.11 Checking fuel gauge (adaption)	57
3.12 Adapting consumption indicator	60
4 Self-diagnosis of dash panel insert 05.99 >	63
4.1 Self-diagnosis of dash panel insert 05.99 >	63
4.2 Locations for dash panel insert senders and sensors	64
4.3 Performing self-diagnosis	68
4.4 Final control diagnosis	75
4.5 Coding control unit	78
4.6 Read measured value block	80
4.7 Display group overview	81
4.8 Adapting service interval data when changing the dash panel insert	87
4.9 Resetting the service interval display	91
4.10 Adapting distance travelled (odometer) display	93
4.11 Reading distance impulse number (K number)	95
4.12 Checking fuel gauge (adaption)	96
4.13 Adapting consumption indicator	99
4.14 Adapting language variants for drivers instructions	101
5 Diagnostic interface for data bus	103



5.1	Diagnostic interface for data bus	103
5.2	Coding control unit	108
5.3	Read measured value block	109
5.4	Display group overview	110
6	Self-diagnosis of automatic headlight range control	113
6.1	Self-diagnosis of automatic headlight range control	113
6.2	Performing self-diagnosis of automatic headlight range control	113
6.3	Final control diagnosis	118
6.4	Reading measured value block	119
6.5	Basic setting	120
6.6	Coding control unit	122