



## Contents

<b>91 - Communication</b> .....	<b>1</b>
<b>1 Communication systems</b> .....	<b>1</b>
1.1 Fault finding .....	1
<b>2 Radio "BETA" ▶ 04.98</b> .....	<b>2</b>
2.1 General notes .....	2
2.2 Removing and installing radio .....	2
2.3 Overview of radio connectors .....	3
2.4 Electronic anti-theft system .....	4
2.5 Fitting radios ▶ 04.98 in vehicles 05.98 ▶ .....	5
<b>3 Radio "GAMMA" ▶ 04.98</b> .....	<b>7</b>
3.1 General notes .....	7
3.2 Removing and installing radio .....	7
3.3 Overview of radio connectors .....	9
3.4 Electronic anti-theft system .....	9
3.5 Fitting radios ▶ 04.98 in vehicles 05.98 ▶ .....	11
<b>4 Radio "BETA" 05.98 ▶</b> .....	<b>12</b>
4.1 General notes .....	12
4.2 Removing and installing radio .....	12
4.3 Overview of radio connectors .....	14
4.4 Electronic anti-theft system .....	15
4.5 Fitting radios 05.98 ▶ in vehicles ▶ 04.98 .....	17
4.6 Adapting radio components .....	18
<b>5 Radio "GAMMA" 05.98 ▶</b> .....	<b>19</b>
5.1 General notes .....	19
5.2 Removing and installing radio .....	19
5.3 Overview of radio connectors .....	21
5.4 Electronic anti-theft system .....	22
5.5 Fitting radios 05.98 ▶ in vehicles ▶ 04.98 .....	24
5.6 Adapting radio components .....	25
<b>6 Radio "DELTA"</b> .....	<b>26</b>
6.1 General notes .....	26
6.2 Removing and installing radio .....	26
6.3 Overview of radio connectors .....	28
6.4 Adapting radio components .....	29
<b>7 "PREMIUM" radio (U.S. only)</b> .....	<b>30</b>
7.1 General notes .....	30
7.2 Removing and installing radio .....	30
7.3 Overview of radio connectors .....	32
7.4 Adapting radio components .....	33
<b>8 Navigation system</b> .....	<b>34</b>
8.1 General notes .....	34
8.2 Functional overview .....	34
8.3 Overview of navigation system .....	36
8.4 Navigation system service instructions .....	36
8.5 Questions for customer who has complaints .....	37
8.6 Work necessary on navigation system after repairs or changing tyres, navigation system control units with part no. index "B" .....	40
8.7 Work necessary on navigation system after repairs or changing tyres, navigation system control unit with part no. index "D". .....	60
8.8 Starting navigation .....	88
8.9 Interrogating navigation system for level of operating electronics .....	90
8.10 Removing and installing navigation components .....	91



<b>9</b>	<b>Radio/navigation system (RNS) with multi-function display and TV tuner</b>	<b>96</b>
9.1	General notes	96
9.2	Removing and installing radio navigation system	97
9.3	Overview - radio navigation system connections	99
9.4	Electronic anti-theft system	102
9.5	Removing and installing traffic information control unit	103
9.6	Removing and installing TV tuner	103
9.7	Adapting navigation system components	105
9.8	Adapting radio components	106
<b>10</b>	<b>Radio/navigation system (RNS) with monochrome display</b>	<b>107</b>
10.1	General notes	107
10.2	Removing and installing radio navigation system	108
10.3	Overview - radio navigation system connections	109
10.4	Electronic anti-theft system	112
10.5	Adapting navigation system components	114
10.6	Adapting radio components	115
<b>11</b>	<b>CD changer/CD player</b>	<b>116</b>
11.1	General notes	116
11.2	CD changer	117
11.3	CD player	118
<b>12</b>	<b>Multi-media system RSE (Rear Seat Entertainment)</b>	<b>120</b>
12.1	General description	120
12.2	Overview of the multi-media system	121
12.3	Removing and installing the multi-media system	122
12.4	Deactivating the system lock via the electronic anti-theft system	123
12.5	Connection jacks for additional equipment	124
12.6	Changing headphone batteries	124
12.7	Changing remote control batteries	125
<b>13</b>	<b>Telematics system</b>	<b>127</b>
13.1	General description	127
13.2	Overview of telematics system	127
13.3	Removing and installing operating unit	128
13.4	Removing and installing control unit	129
13.5	Removing and installing aerial filter	130
13.6	Fault finding on telematics system	131
<b>14</b>	<b>Telematics system (USA only, model year 2004 ▶)</b>	<b>135</b>
14.1	General notes	135
14.2	Overview of telematics system	136
14.3	Removing and installing telematics operating unit	137
14.4	Removing and installing telematics control unit	138
14.5	Removing and installing telematics system microphone	146
14.6	Fault finding on telematics system	146
14.7	Coding telematics system	148
14.8	Deactivating transport mode	149
<b>15</b>	<b>Loudspeaker systems</b>	<b>150</b>
15.1	Overview of loudspeaker systems	150
15.2	Removing and installing front treble loudspeakers	150
15.3	Removing and installing rear treble loudspeakers	151
15.4	Removing and installing bass loudspeaker	151
<b>16</b>	<b>Digital Sound System (DSP)</b>	<b>152</b>
16.1	General notes	152
16.2	Removing and installing amplifier	152
16.3	Removing and installing operating unit in centre console	153
16.4	Adapting Digital Sound System	155



<b>17</b>	<b>Telephone system</b>	<b>156</b>
17.1	General notes	156
17.2	Telephone system for vehicles ▶ 09.00	156
17.3	Telephone systems for vehicles 10.00 ▶	159
17.4	Telephone system microphone	162
<b>18</b>	<b>Aerial systems</b>	<b>164</b>
18.1	General notes	164
18.2	Overview of roof mounted radio aerial	164
18.3	Overview of roof mounted radio and telephone aerial	166
18.4	Roof mounted aerial for radio, telephone, telematics and navigation system	167
18.5	Aerial system for TV reception	169
18.6	Aerial system with diversity function (only on Passat W8 with diversity antenna)	172
18.7	Renewal of aerial cable	177
<b>19</b>	<b>Multi-function steering wheel</b>	<b>178</b>
19.1	General notes	178
19.2	Overview of multi-function steering wheel	178
19.3	Removing and installing steering wheel operating unit	179
19.4	Removing and installing multi-function steering wheel control unit	180
19.5	Overview of connectors on multi-function steering wheel control unit	181
19.6	Adapting multi-function steering wheel	182
<b>20</b>	<b>Notes on operating mobile telephones and two-way radios</b>	<b>183</b>
20.1	General notes	183
20.2	Note on performing repair work	183
20.3	Overview - battery, transmitter/receiver unit, fuse and cable harness	185
20.4	Transmitting power and aerial fitting locations	186
<b>21</b>	<b>Suppression</b>	<b>187</b>
21.1	Suppression measures	187

