



Contents

68 - Interior equipment	1
1 Interior mirror	1
1.1 Automatic anti-dazzle interior mirror	1
1.2 Removing interior mirror	2
1.3 Installing interior mirror	2
1.4 Bonding retaining plate for interior mirror	2
1.5 Removing and installing interior mirror on vehicles with a rain sensor	3
1.6 Bonding on interior mirror base with rain sensor	4
2 Compartments, covers and trims	6
2.1 Removing and installing centre console ▶ 09.00	6
2.2 Removing and installing centre console 10.00 ▶	8
2.3 Removing front ashtray	10
2.4 Removing and installing rear ashtray ▶ 09.00	11
2.5 Removing centre armrest ▶ 09.00	11
2.6 Removing and installing selector lever cover	12
2.7 Removing trim for front drinks holder	13
2.8 Removing driver side storage compartment	13
2.9 Removing front passenger side storage compartment	14
2.10 Removing and installing glove compartment lock cylinder	15
2.11 Removing exterior mirror cover	17
2.12 Removing sun visor	17
3 Grab handles	18
3.1 Removing roof grab handle	18
4 Sill panel entry strips	19
4.1 Removing and installing sill panel entry strip	19
5 Net partition	22
5.1 Assembly overview	22
5.2 Retrofitting net partition	23
69 - Passenger protection	27
1 Seat belts	27
1.1 Safety regulations for belt tensioners	27
1.2 Disposal of belt tensioner units	27
1.3 Assembly overview - front seat belt with belt tensioner ▶ 09.00	27
1.4 Assembly overview - front seat belt with belt tensioner 10.00 ▶	28
1.5 Removing and installing belt latch	29
1.6 Assembly overview - rear seat belts with belt tensioner	30
1.7 Assembly overview - centre seat belt	35
1.8 Installing anchor fitting for child seat (saloon)	37
1.9 Installing anchor fitting for child seat (Variant)	38
2 Inspecting seat belts	39
2.1 Points to check	39
3 Checking child seat anchors (ISOFIX) after an accident	43
3.1 Points to check	43
4 Airbag	44
4.1 Tools	44
4.2 Overview of locations ▶ 09.00	44
4.3 Overview of locations 10.00 ▶	46
4.4 Safety precautions when working on the airbag	46
4.5 Disposal of airbag units	47
4.6 Deactivating the airbag	47
4.7 Renewing airbag units following an accident	48



4.8	Removing and installing driver airbag unit	48
4.9	Removing and installing steering wheel	59
4.10	Removing and installing return spring with slip ring	63
4.11	Removing and installing front passenger airbag unit	64
4.12	Removing and installing airbag control unit (J234)	66
4.13	Removing and installing side airbag on driver and front passenger sides	66
4.14	Removing and installing side airbag on driver and front passenger sides (Recaro seats)	69
4.15	Removing and installing crash sensor for side airbag for driver or front passenger	71
4.16	Removing and installing curtain airbag on driver and passenger side (saloon)	73
4.17	Removing and installing curtain airbag on driver and passenger side (Variant)	75
4.18	Adapting components	77
5	Deformable elements	78
5.1	Tools	78
5.2	Removing and installing side deformable elements, saloon with no sliding/tilting sunroof	78
5.3	Retrofitting deformable elements, moulded headliner, saloon with no sliding/tilting sunroof	81
5.4	Retrofitting moulded headliner deformable element, saloon with sliding/tilting sunroof	83
5.5	Removing and installing C-pillar deformable elements, saloon	85
5.6	Retrofitting assembly unit deformable elements, sliding/tilting sunroof	88
5.7	Removing and installing curtain airbag deformable elements, vehicles with no sliding/tilting sunroof	89
5.8	Removing and installing side deformable elements, Variant with no sliding/tilting sunroof	91
5.9	Retrofitting moulded headliner deformable elements, Variant with sliding/tilting sunroof	94
70	Trim, insulation	96
1	Dash panel	96
1.1	Removing and installing dash panel	96
2	Door trims	104
2.1	Removing and installing driver door trim	104
2.2	Removing and installing front passenger door trim	106
2.3	Removing and installing rear door trim	107
3	Pillar and side trims	110
3.1	Removing and installing upper A-pillar trim	110
3.2	Removing and installing lower A-pillar trim	112
3.3	Removing and installing upper B-pillar trim	112
3.4	Removing and installing lower B-pillar trim	118
3.5	Removing and installing upper C/D-pillar trim (saloon)	119
3.6	Removing and installing C-pillar upper trim (Variant)	122
3.7	Removing and installing lower C-pillar trim	124
3.8	Removing and installing upper D-pillar trim (Variant)	125
3.9	Removing and installing rear shelf	127
4	Luggage compartment trims	130
4.1	Tools	130
4.2	Removing and installing luggage compartment trim	130
4.3	Removing and installing rear lock carrier cover	132
4.4	Removing and installing rear lid trim ▶ 09.00	134
4.5	Removing and installing rear lid trim 10.00 ▶	137
4.6	Removing and installing rear lid trim with internal emergency release (only US vehicles) 10.00 ▶	140
4.7	Removing and installing luggage compartment trim (Variant)	141
4.8	Assembly overview	141
4.9	Removing and installing rear lock carrier cover (Variant)	143
4.10	Removing and installing luggage compartment/load area cover	145



4.11	Removing and installing rear lid trim (Variant) ▶ 09.00	148
4.12	Removing and installing rear lid trim (Variant) 10.00 ▶	149
4.13	Removing luggage compartment floor covering (Variant)	150
5	Roof trims	151
5.1	Removing and installing moulded headliner with sliding/tilting sunroof (saloon)	151
5.2	Removing and installing moulded headliner with sliding/tilting sunroof (Variant)	155
72	- Seat frames	159
1	Front seats	159
1.1	Tools	159
1.2	Removing and installing front seat	159
1.3	Removing and installing front backrest	162
1.4	Removing and installing lumbar support	164
1.5	Removing 8-way seat trim	168
1.6	Removing 8-way seat control unit	169
1.7	Removing 8-way seat operating unit	170
1.8	Removing 8-way seat longitudinal adjustment	171
1.9	Removing 8-way seat front height adjustment drive	172
1.10	Removing 8-way seat rear height adjustment drive	173
1.11	Removing 8-way seat backrest adjustment drive	174
2	Front Recaro seat	176
2.1	Tools	176
2.2	Removing and installing Recaro seat	176
2.3	Removing and installing backrest fittings, trim	178
2.4	Removing and installing seat extension	180
2.5	Removing and installing spring cover	182
2.6	Removing and installing seat part	183
2.7	Removing and installing seat side trim	185
2.8	Removing and installing backrest	186
2.9	Removing and installing backrest shell	188
2.10	Removing and installing 2-way lumbar support	189
2.11	Removing and installing 2-way lumbar support motor with gearbox	190
2.12	Removing and installing seat height adjustment motor	192
2.13	Removing and installing backrest motor with gearbox	194
2.14	Removing and installing switch unit	196
3	Rear seats	198
3.1	Removing and installing rear bench seat (saloon)	198
3.2	Removing and installing rear bench seat (Variant)	200
3.3	Removing and installing rear seat backrest (one-piece)	200
3.4	Removing and installing rear backrest (two-piece)	204
3.5	Removing and installing rear seat backrest (W8 saloon)	206
3.6	Removing and installing left backrest lock	210
3.7	Retrofitting seat cushion with integrated child seat	211
3.8	Retrofitting seat cushion with integrated child seat	215
3.9	Retrofitting seat cushion with integrated child seat (Variant)	218
3.10	Retrofitting seat cushion with integrated child seat (Variant)	223
3.11	Retrofitting retaining bracket for child seat "-Bobsy G1 ISOFIX-"	225
74	- Seat - padding, covers	227
1	Front seat covers and padding	227
1.1	Required special tools, workshop equipment, test and measuring devices and auxiliary items	227
1.2	Removing and installing front seat cover and padding	227
1.3	Removing and installing front backrest cover and padding	230
2	Covers and padding, Recaro seat	236



2.1	Removing and installing cover and padding from seat part	236
2.2	Removing and installing seat extension cover and padding	237
2.3	Removing and installing backrest cover and padding	238
2.4	Removing and installing head restraint cover and padding	239
3	Rear seat covers and padding	241
3.1	Removing and installing seat bench cover	241
3.2	Removing and installing centre armrest	244
3.3	Removing and installing centre armrest cover	246
3.4	Removing and installing right backrest cover	248
4	Seat heater elements	252
4.1	Removing seat heater element	252
4.2	Removing and installing heater element for backrest	252
4.3	Removing and installing heater element for Recaro seat	254