



Contents

50 - Body - front	1
1 Lock carrier	1
1.1 Tools	1
1.2 Assembly overview - Lock carrier with add-on parts ▶ 09.00	2
1.3 Removing and refitting lock carrier with add-on parts ▶ 09.00	3
1.4 Lock carrier - Service position ▶ 09.00	4
1.5 Unbolting hydraulic oil cooler	6
1.6 Assembly overview - Lock carrier add-on parts 10.00 ▶	6
1.7 Removing and refitting lock carrier with add-on parts 10.00 ▶	7
1.8 Assembly overview - Lock carrier, service position 10.00 ▶	8
1.9 Service position 10.00 ▶	10
2 Wing	12
2.1 Tools	12
2.2 Assembly overview - Front wing ▶ 09.00	12
2.3 Removing and refitting front wing ▶ 09.00	14
2.4 Removing and refitting closing piece	15
2.5 Assembly overview - Front wing 10.00 ▶	15
2.6 Removing and refitting front wing 10.00 ▶	17
3 Noise insulation	19
3.1 Tools	19
3.2 Assembly overview - Noise insulation	19
55 - Bonnet, rear lid	21
1 Bonnet lid	21
1.1 Tools	21
1.2 Assembly overview - Bonnet lid	21
1.3 Removing and refitting bonnet lid	23
1.4 Adjusting bonnet	24
1.5 Removing gas strut	26
1.6 Releasing gas from gas strut	26
1.7 Assembly overview- Bowden cable for bonnet lock	26
1.8 Disconnecting Bowden cable	27
1.9 Assembly overview- Bonnet lock	28
1.10 Removing and refitting bonnet lock	29
1.11 Adjusting bonnet lock	30
1.12 Assembly overview- Bonnet seal	31
1.13 Removing and refitting insulation	31
2 Rear lid, saloon	34
2.1 Tools	34
2.2 Assembly overview - Rear lid	34
2.3 Removing gas strut	35
2.4 Adjusting rear lid ▶ 09.00	35
2.5 Adjusting rear lid 10.00 ▶	37
2.6 Assembly overview- Rear lid lock ▶ 09.00	37
2.7 Removing and refitting lock cylinder carrier	39
2.8 Assembly overview - Rear lid lock and lock cylinder carrier 10.00 ▶	40
2.9 Assembly overview- Rear lid lock and lock cylinder carrier (US vehicles with interior emergency release) 10.00 ▶	41
2.10 Assembly overview- Lock cylinder housing 10.00 ▶	42
3 Rear lid, Estate	43
3.1 Tools	43
3.2 Assembly overview - Rear lid	43
3.3 Removing gas strut	44



3.4	Assembly overview- Rear lid lock, Estate ▶ 09.00	45
3.5	Removing and refitting lock cylinder carrier, Estate ▶ 09.00	46
3.6	Removing and refitting lock cylinder, Estate ▶ 09.00	47
3.7	Assembly overview - Rear lid lock and lock cylinder carrier 10.00 ▶	48
3.8	Assembly overview- Lock cylinder housing 10.00 ▶	49
4	Tank flap unit	50
4.1	Tools	50
4.2	Assembly overview - Tank flap unit	50
4.3	Removing and refitting tank flap unit	51
57	- Front doors, door components, central locking	54
1	Front door	54
1.1	Tools	54
1.2	Assembly overview - Front door	55
1.3	Removing and refitting front door	57
1.4	Adjusting front door	58
1.5	Assembly overview - Door handle and door lock	59
1.6	Removing and refitting lock cylinder housing	60
1.7	Removing and refitting door handle	61
1.8	Removing and refitting door lock	63
1.9	Vehicles with electric windows	66
1.10	Removing inner release handle	67
1.11	Door seals	67
1.12	Removing and refitting door inner seal	68
1.13	Removing and refitting locking knob for locking rod	68
2	Central locking	71
2.1	Location overview - Central locking components	71
2.2	Removing and refitting batteries for key (non-folding type) with remote-control unit	73
2.3	Removing and refitting batteries for key (folding type) with remote control ▶ 07.00	75
2.4	Assembly overview - Battery for key (folding type) with remote control 08.00 ▶	76
2.5	Assembly overview - Batteries for main key (foldable type) with remote control 11.00 ▶	77
2.6	Removing and refitting batteries for main key (foldable type) with remote-control unit 11.00 ▶	78
2.7	Configuring keys with remote-control	79
58	- Rear doors, door components	80
1	Rear door	80
1.1	Tools	80
1.2	Assembly overview - Rear door	81
1.3	Removing and refitting rear door	82
1.4	Adjusting rear door	82
1.5	Assembly overview - Door handle and door lock	83
1.6	Removing and refitting door handle	85
1.7	Removing and refitting door lock	87
1.8	Fitting door window to window actuator	92
1.9	Removing inner release handle	92
1.10	Door seals	92
1.11	Removing and refitting door inner seal	93
60	- Sunroof	94
1	Sliding/tilting sunroof with glass panel ▶ 07.98	94
1.1	Tools	94
1.2	Assembly overview- Sliding/tilting sunroof with glass panel	94
1.3	Removing glass panel for sliding/tilting sunroof	96
1.4	Refitting glass panel for sliding/tilting sunroof	96
1.5	Adjusting sliding/tilting sunroof glass panel height	97



1.6	Adjusting panel seal	98
1.7	Replacing panel seal	98
1.8	Removing wind deflector	99
1.9	Removing sun shield	99
1.10	Removing drive for sliding/tilting sunroof	100
1.11	Adjusting drive for sliding/tilting sunroof (zeroising)	100
1.12	Removing pre-selector rotary switch for sliding/tilting sunroof	100
1.13	Checking parallel running	101
1.14	Adjusting parallel running	101
1.15	Removing and refitting sliding/tilting sunroof carrier unit	102
1.16	Operating without current	102
1.17	Removing guide rail	103
1.18	Cleaning water drain hoses	104
2	Sliding/tilting sunroof with glass panel 08.98 ▶	107
2.1	Tools	107
2.2	Function	107
2.3	Assembly overview- Sliding/tilting sunroof with glass panel	108
2.4	Removing and refitting bellows	110
2.5	Removing glass panel for sliding/tilting sunroof	111
2.6	Refitting glass panel for sliding/tilting sunroof	112
2.7	Adjusting sliding/tilting sunroof glass panel height	113
2.8	Adjusting panel height	114
2.9	Replacing panel seal	115
2.10	Removing and refitting wind deflector	115
2.11	Removing sun shield	116
2.12	Removing and refitting sliding/tilting sunroof drive	117
2.13	Adjusting drive for sliding/tilting sunroof (zeroising)	117
2.14	Removing pre-selector rotary switch for sliding/tilting sunroof	118
2.15	Checking parallel running	118
2.16	Adjusting parallel running	119
2.17	Removing and refitting assembly unit	119
2.18	Operating without current	122
2.19	Removing guide rail	122
2.20	Cleaning water drain hoses	123
3	Sliding/tilting sunroof with solar panel	127
3.1	Tools	127
3.2	Function	127
3.3	Assembly overview- Sliding/tilting sunroof with solar panel	128
3.4	Removing sliding/tilting sunroof solar panel	129
3.5	Refitting sliding/tilting sunroof solar panel	129
3.6	Adjusting sliding/tilting roof solar panel height	130
3.7	Checking parallel running of solar panel	131
3.8	Adjusting parallel running of solar panel	131
3.9	Replacing panel seal	132
3.10	Removing wind deflector	132
3.11	Removing solar panel trim	132
3.12	Removing drive for sliding/tilting sunroof	132
3.13	Adjusting drive for sliding/tilting sunroof (zeroising)	133
3.14	Removing pre-selector rotary switch for sliding/tilting sunroof	134
3.15	Removing DC converter	134
3.16	Removing solar contact in solar panel	135
3.17	Removing solar contact from roof carrier unit	135
3.18	Removing and refitting assembly unit	135
3.19	Operating without current	138
3.20	Cleaning water drain hoses	138



63 - Bumpers	142
1 Front bumper	142
1.1 Tools	142
1.2 Assembly overview - Front bumper cover ▶ 09.00	142
1.3 Removing and refitting front bumper cover ▶ 09.00	144
1.4 Removing release lever	145
1.5 Adjusting guide	145
1.6 Assembly overview - Front bumper cover 10.00 ▶	145
1.7 Removing and refitting front bumper cover 10.00 ▶	147
1.8 Assembly overview - Front bumper cover add-on parts 10.00 ▶	148
1.9 Removing and refitting bumper strip	149
1.10 Refitting number plate panel (US vehicles only).	149
1.11 Assembly overview - Front bumper cover, underbody parts 10.00 ▶	149
1.12 Assembly overview- Bumper carrier and impact damper (US vehicles only) 10.00 ▶	151
2 Rear bumper	152
2.1 Tools	152
2.2 Assembly overview - Rear bumper cover ▶ 09.00	152
2.3 Removing and refitting rear bumper cover ▶ 09.00	154
2.4 Assembly overview - Rear bumper cover 10.00 ▶	155
2.5 Removing and refitting rear bumper cover 10.00 ▶	156
2.6 Assembly overview - Rear bumper cover, add-on parts 10.00 ▶	157
2.7 Removing and refitting bumper strip	157
2.8 Assembly overview - Rear bumper cover, underbody parts 10.00 ▶	158
2.9 Assembly overview- Bumper carrier and impact damper (4 Motion, all US vehicles) 10.00 ▶	159
2.10 Assembly overview - Towing bracket	160
2.11 Assembly overview - Towing bracket (4 Motion)	161
3 Rear bumper Estate	162
3.1 Tools	162
3.2 Assembly overview - Rear bumper cover ▶ 09.00	162
3.3 Removing and refitting rear bumper cover ▶ 09.00	164
3.4 Assembly overview - Rear bumper cover 10.00 ▶	165
3.5 Removing and refitting rear bumper cover 10.00 ▶	166
3.6 Assembly overview - Rear bumper cover, add-on parts 10.00 ▶	167
3.7 Removing and refitting bumper strip	167
3.8 Attaching transparent film	168
3.9 Assembly overview - Rear bumper cover, underbody parts 10.00 ▶	168
3.10 Assembly overview- Bumper carrier and impact damper (4 Motion, all US vehicles) 10.00 ▶	169
64 - Glazing	170
1 Flush bonded windows	170
1.1 Tools	170
1.2 Materials	171
1.3 Assembly overview - Windscreen	172
1.4 Removing and refitting plenum chamber cover	173
1.5 Removing windscreen	174
1.6 Refitting windscreen	176
1.7 Preparing windscreen with viewing hole for chassis number for vehicles without chassis number	176
1.8 Assembly overview- Side window, Estate ▶ 09.00	176
1.9 Assembly overview- Side window, Estate 10.00 ▶	178
1.10 Removing undamaged side window	178
1.11 Removing broken side window	180
1.12 Assembly overview- Side window, Saloon ▶ 09.00	180



1.13	Assembly overview- Side window, Saloon 10.00 ▶	181
1.14	Removing undamaged side window	181
1.15	Removing broken side window	182
1.16	Refitting side window	182
1.17	Assembly overview- Rear window, Estate	183
1.18	Removing undamaged rear window (Estate)	184
1.19	Assembly overview - Rear window	185
1.20	Removing undamaged rear window	186
1.21	Removing broken rear window	187
1.22	Refitting rear window	187
1.23	Preparing old undamaged window for glazing	188
1.24	Preparing new window for glazing	188
1.25	Preparing new window without precoating for glazing	189
1.26	Preparing body flange for glazing	190
1.27	Installation instructions	191
1.28	Curing time	192
1.29	Touching up paint damage	192
1.30	Cleaning off excess adhesive sealing material	192
2	Front door windows	193
2.1	Assembly overview- Front door window	193
2.2	Removing front door window	194
2.3	Adjusting door window	194
2.4	Removing and refitting assembly carrier	195
3	Rear door windows	197
3.1	Assembly overview- Rear door window	197
3.2	Removing rear door window	198
3.3	Fitting door window to window lifter	199
3.4	Removing and refitting assembly carrier	199
3.5	Removing and refitting window motor or assembly carrier with window actuator	201
66	Exterior equipment	204
1	Wheelarch liner	204
1.1	Tools	204
1.2	Assembly overview - Front wheelarch liner	204
1.3	Assembly overview - Rear wheelarch liner	206
2	Rear-view mirror	207
2.1	Tools	207
2.2	Assembly overview - Rear-view mirror	207
2.3	Removing mirror housing	208
2.4	Removing and refitting mirror housing with indicator	209
3	Roof railing	211
3.1	Assembly overview - Roof railing	211
4	Roof mouldings	213
4.1	Assembly overview- Roof moulding	213
4.2	Assembly overview- Outer roof moulding	214
4.3	Assembly overview - Water deflector	215
5	Radiator grille	216
5.1	Assembly overview- Radiator grille ▶ 09.00	216
5.2	Assembly overview- Radiator grille 10.00 ▶	217
5.3	Removing release lever	217
6	Protective strips	218
6.1	Tools	218
6.2	Assembly overview- Protective side strips	218
6.3	Removing and refitting protective side strips	219
6.4	Assembly overview- Door sill trim	222



6.5	Assembly overview - Door strips	223
6.6	Replacing stone-chip protective film	224
6.7	Replacing kick plate protective film	225