



## Contents

<b>80 - Heating</b>	<b>1</b>
<b>1 Heating</b>	<b>1</b>
1.1 Repairing heating system	1
1.2 Removing fresh air blower V2	3
1.3 Removing controls for fresh and heated air	3
1.4 Removing side window vent	3
1.5 Removing driver or front passenger vent	3
1.6 Removing centre vents	5
1.7 Removing and installing dust and pollen filter, vehicles 10.00 ▶	5
1.8 Checking ventilation	6
1.9 Checking auxiliary air heater element Z35	7
1.10 Removing auxiliary heating heater element contact switch F268	10
<b>2 Dismantling and assembling heater unit</b>	<b>13</b>
2.1 Dismantling and assembling heater unit	13
2.2 Installing and adjusting lever for centre flap	14
2.3 Removing and installing fresh air and air recirculation flap control motor V154	14
2.4 Removing auxiliary air heater element Z35	14
2.5 Removing and installing heater unit	15
2.6 Removing coolant hoses to heat exchanger	17
2.7 Removing and installing heat exchanger	17
<b>3 Dismantling and assembling heated air and fresh air controls</b>	<b>19</b>
<b>4 Installing and adjusting cables</b>	<b>20</b>
4.1 Installing and adjusting cables on heater	21
<b>82 - Supplementary heating</b>	<b>22</b>
<b>1 Glow plugs - supplementary heating</b>	<b>22</b>
1.1 Glow plugs - supplementary heating in cooling system circuit	22
<b>87 - Air conditioning system</b>	<b>23</b>
<b>1 Notes on repair work to vehicles with air conditioning and on handling refrigerant</b>	<b>23</b>
<b>2 Temperature measurement</b>	<b>24</b>
<b>3 Air conditioning system with manual controls</b>	<b>26</b>
3.1 Air conditioning and heating - passenger compartment	26
3.2 Renewing fresh air blower series resistor with overheating fuse N24	29
3.3 Removing and installing fresh air blower V2	29
3.4 Installation note for securing bolt on dash panel cross member and left side member	29
3.5 Removing and installing water drain funnel	30
3.6 Removing and installing fresh air and air recirculation flap control motor V154	30
3.7 Removing and installing heating and air conditioning controls	31
3.8 Dismantling and assembling heating and air conditioning controls	32
3.9 Installing heating and air conditioning cables	34
3.10 Removing and installing temperature flap cable and central flap cable	35
3.11 Air conditioning and heating system - engine compartment	35
3.12 Checking water drain valve	37
3.13 Renewing air conditioning system pressure switch F129 , Vehicles ▶ 09.00	38
3.14 Renewing air conditioning system pressure switch F129 or high-pressure sender G65 , Vehicles 10.00 ▶	38
3.15 Repairing Zexel air conditioner magnetic clutch N25	38
3.16 Repairing Denso magnetic clutch for air conditioning system N25	42
<b>4 Climatronic air conditioning with automatic regulation</b>	<b>47</b>
4.1 Procedure for checking and adjusting components	47
4.2 Function of operating and display unit for Climatronic air conditioning system E87	47



4.3	Connectors on Climatronic control unit J255	49
4.4	Climatronic - passenger compartment	52
4.5	Removing and installing footwell vent temperature sender G192	56
4.6	Removing and installing glove box cooling vent	57
4.7	Removing and installing centre vent temperature sender G191	57
4.8	Removing sunlight penetration photosensor G107	58
4.9	Removing and installing operating and display unit for Climatronic air conditioning system E87 with Climatronic control unit J255	58
4.10	Removing fresh air blower V2 with fresh air blower control unit J126	59
4.11	Removing fresh air blower control unit J126 from fresh air blower V2	59
4.12	Renewing control motors for air conditioning regulation	60
4.13	Removing and installing air flow flap control motor V71 **	60
4.14	Removing and installing temperature flap control motor V68 **	61
4.15	Removing and installing central flap control motor V70 **	62
4.16	Removing and installing footwell and defroster flap control motor V85 **	63
4.17	Climatronic - engine compartment	63
<b>5</b>	<b>Bracket for air conditioner compressor</b>	<b>67</b>
5.1	Removing and installing air conditioner compressor bracket, engine codes ADP AHL, ALZ, ANA and ARM	67
5.2	Removing and installing air conditioner compressor bracket, engine codes ADR, AEB, AFY, AGM, ANB, APT, APU, ARG, AUG, AWM and AWT	69
5.3	Removing and installing air conditioner compressor bracket, engine codes ALT, ASU, AUZ and AZM	70
5.4	Removing and installing poly V-belt for air conditioner compressor	72
5.5	Removing and installing air conditioner compressor bracket, engine codes AGZ and AZX	73
5.6	Removing and installing air conditioner compressor bracket, engine codes ACK, AGE, AHA, ALG, AMX, APR, AQD, ATQ, ATX, AQD and BBG	75
5.7	Removing and installing air conditioner compressor bracket, engine codes AFN, AHH, AHU, AJM, ATJ, AVB, AVF, AWX, BHW and BGW	79
5.8	Removing and installing air conditioner compressor bracket, engine codes AFB, AKN, BAU, BDG and BDH	82
5.9	Removing and installing air conditioner compressor bracket, engine codes BDN and BDP	85
<b>6</b>	<b>Repair work on refrigerant circuit which may be performed only in appropriate workshops by specially trained mechanics</b>	<b>91</b>
6.1	Repairing components of refrigerant circuit, vehicles ▶ 09.00	92
6.2	Repairing components of refrigerant circuit, vehicles 10.00 ▶	96
6.3	Removing evacuating and charging valve, low-pressure side	99
6.4	Removing evacuation and charging valve, high-pressure side	100
6.5	Tasks of reservoir	102
6.6	Checking excess pressure relief valve on compressor	102
6.7	Notes on installing air conditioner compressor, engine codes BDN and BDP	103
6.8	Overview - air conditioner compressor manufacturers	104
6.9	Removing and installing restrictor, function of restrictor	105
6.10	Removing and installing condenser	106
6.11	Removing and installing distribution box and evaporator housing	108
6.12	Dismantling and assembling distribution box and housing	110
<b>7</b>	<b>Capacities</b>	<b>113</b>
7.1	Refrigerant R134a	113
7.2	Refrigerant oil	113