



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Identification code, assembly allocation, ratios, capacities	1
2 Overview - power transmission	9
3 Calculating overall gear ratio "i"	11
4 General repair notes	12
4.1 Components	12
30 - Clutch	15
1 Functional check of clutch master and slave cylinders	15
2 Distinguishing clutch control mechanisms	17
3 Repairing clutch control mechanism (master cylinder secured to clutch pedal with a pin)	18
3.1 Overview	18
3.2 Assembly overview - pedal cluster (LHD vehicles)	19
3.3 Removing and installing clutch pedal and over-centre spring	20
3.4 Assembly overview - pedal cluster (RHD vehicles)	21
3.5 Assembly overview - hydraulic system	23
3.6 Removing and installing master cylinder	24
4 Repairing clutch control mechanism (master cylinder secured to clutch pedal with a plastic retainer)	28
4.1 Overview	28
4.2 Assembly overview - pedal cluster (LHD vehicles)	29
4.3 Removing and installing clutch pedal and over-centre spring	30
4.4 Assembly overview - pedal cluster (RHD vehicles)	31
4.5 Assembly overview - hydraulic system	33
4.6 Removing and installing master cylinder	35
5 Clutch pedal switch	40
5.1 Installing new clutch pedal switch F36 (clutch pedal switch secured in mounting bracket with retaining clip)	40
5.2 Checking and adjusting clutch pedal switch F36	40
5.3 Removing and installing clutch pedal switch F36 (clutch pedal switch secured directly to mounting bracket)	41
6 Bleeding clutch system	43
7 Repairing clutch release mechanism	44
7.1 Removing and installing slave cylinder	46
8 Repairing clutch	50
34 - Controls, housing	53
1 Repairing selector mechanism (gear lever must be pressed down to engage reverse gear)	53
1.1 Installation position of selector mechanism	53
1.2 Repairing gear lever, gear lever mounting, push rod and selector rod	53
1.3 Removing and installing selector mechanism	56
1.4 Adjusting selector mechanism	57
2 Repairing selector mechanism (gear lever cannot be pressed down to engage reverse gear)	60
2.1 Installation position of selector mechanism	60
2.2 Repairing gear lever and gear lever mounting	62
2.3 Repairing selector rod and push rod	63
2.4 Removing and installing gear lever with gear lever mounting	65
2.5 Removing and installing selector mechanism	65



2.6	Adjusting selector mechanism	67
3	Removing and installing gearbox	69
3.1	Removing gearbox	70
3.2	Transporting gearbox	74
3.3	Installing gearbox	75
4	Checking gear oil	82
5	Dismantling and assembling gearbox	83
5.1	Overview - gearbox	83
5.2	Assembly overview	84
5.3	Removing and installing input shaft ball bearing and multifunction sender	85
5.4	Dismantling and assembling input shaft, pinion shaft, selector rods and gearbox cover	87
5.5	Dismantling and assembling procedure	89
6	Dismantling and assembling selector mechanism on gearbox side	96
6.1	Checking and renewing locking unit for 5th gear and reverse gear	100
35 - Gears, shafts		102
1	Input shaft	102
1.1	Dismantling and assembling input shaft	102
1.2	Modified synchronisation of 3rd and 4th gear from gearbox date 23 06 3	112
1.3	Adjusting input shaft	112
2	Dismantling and assembling pinion shaft through gearbox date 22 06 3	116
2.1	Reinforcement from gearbox date 17 08 8 in vicinity of for 4th gear wheel	130
3	Dismantling and assembling pinion shaft from gearbox date 23 06 3	132
4	Removing and installing reverse gear wheel	147
39 - Final drive - differential		148
1	Renewing oil seals for flange shafts	148
2	Renewing speedometer sender and drive wheel	151
2.1	Replacing speedometer sender	151
2.2	Renewing speedometer drive wheel	151
3	Removing and installing differential	154
4	Dismantling and assembling differential	159
5	Adjusting drive pinion and crown wheel	167
5.1	Adjustment and marking of final drive gear sets	167
5.2	Position of shims	168
5.3	Adjustment overview	168
5.4	Recommended sequence for readjusting final drive gear set	169
5.5	Adjusting drive pinion	169
5.6	Determining shim "S4" thickness when renewing gearbox cover	177
5.7	Adjusting crown wheel	177