



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Gearbox identification</b>	<b>1</b>
1.1 Identification code, assembly allocation, ratios, capacities	1
<b>2 Overview - power transmission</b>	<b>3</b>
<b>3 Calculating overall gear ratio "i"</b>	<b>5</b>
<b>4 General repair notes</b>	<b>6</b>
4.1 Components	6
<b>30 - Clutch</b>	<b>9</b>
<b>1 Functional check of clutch master and slave cylinders</b>	<b>9</b>
<b>2 Distinguishing clutch control mechanisms</b>	<b>11</b>
<b>3 Repairing clutch control mechanism (master cylinder secured to clutch pedal with a pin)</b>	<b>12</b>
3.1 Overview	12
3.2 Assembly overview - pedal cluster (LHD vehicles)	13
3.3 Removing and installing clutch pedal and over-centre spring	14
3.4 Assembly overview - pedal cluster (RHD vehicles)	15
3.5 Assembly overview - hydraulic system	17
3.6 Removing and installing master cylinder	18
<b>4 Repairing clutch control mechanism (master cylinder secured to clutch pedal with a plastic retainer)</b>	<b>22</b>
4.1 Overview	22
4.2 Assembly overview - pedal cluster (LHD vehicles)	23
4.3 Removing and installing clutch pedal and over-centre spring	24
4.4 Assembly overview - pedal cluster (RHD vehicles)	25
4.5 Assembly overview - hydraulic system	27
4.6 Removing and installing master cylinder	29
<b>5 Clutch pedal switch</b>	<b>34</b>
5.1 Installing new clutch pedal switch F36 (clutch pedal switch secured in mounting bracket with retaining clip)	34
5.2 Checking and adjusting clutch pedal switch F36	34
5.3 Removing and installing clutch pedal switch F36 (clutch pedal switch secured directly to mounting bracket)	35
<b>6 Bleeding clutch system</b>	<b>37</b>
<b>7 Repairing clutch release mechanism</b>	<b>38</b>
7.1 Removing and installing slave cylinder	41
<b>8 Repairing clutch</b>	<b>45</b>
8.1 Resetting adjusting ring of self-adjusting pressure plate	47
<b>34 - Controls, housing</b>	<b>50</b>
<b>1 Repairing selector mechanism</b>	<b>50</b>
1.1 Installation position of selector mechanism	50
1.2 Repairing selector lever and selector lever mounting	52
1.3 Repairing selector rod, connecting rod and push rod	54
1.4 Removing and installing selector lever with selector lever mounting	55
1.5 Removing and installing selector mechanism	56
1.6 Adjusting selector mechanism	59
<b>2 Removing and installing gearbox</b>	<b>61</b>
2.1 Removing gearbox	62
2.2 Transporting gearbox	66
2.3 Installing gearbox	66
<b>3 Checking gearbox oil</b>	<b>74</b>



<b>4</b>	<b>Dismantling and assembling gearbox</b>	<b>75</b>
4.1	Overview - gearbox construction	75
4.2	Assembly overview	76
4.3	Assembly overview - removing and installing gearbox cover and selector shaft	77
4.4	Assembly overview - removing and installing 1st, 2nd and reverse gears	79
4.5	Assembly overview - removing and installing input shaft, gear wheels for 3rd through 6th gears, pinion shaft and selector rods	82
4.6	Dismantling and assembling procedure	85
4.7	Renewing deep groove ball bearing with gearbox removed but not dismantled	110
<b>5</b>	<b>Repairing gearbox cover</b>	<b>114</b>
<b>6</b>	<b>Repairing gearbox housing</b>	<b>119</b>
<b>7</b>	<b>Removing and installing locating sleeves for selector shaft with gearbox installed</b>	<b>127</b>
<b>8</b>	<b>Removing and installing selector shaft, seal for selector shaft and reversing light switch F4</b>	<b>130</b>
8.1	Removing and installing selector shaft with gearbox installed	130
8.2	Renewing selector shaft oil seal with gearbox installed	134
8.3	Renewing selector shaft oil seal with gearbox installed	136
8.4	Removing and installing reversing light switch F4	138
<b>35 - Gears, shafts</b>		<b>139</b>
<b>1</b>	<b>Input shaft</b>	<b>139</b>
1.1	Assembly overview - input shaft	139
1.2	Assembly overview - dismantling and assembling input shaft	143
<b>2</b>	<b>Pinion shaft</b>	<b>152</b>
2.1	Assembly overview - pinion shaft	152
2.2	Dismantling and assembling pinion shaft	155
2.3	Redetermining shim "S5" for positioning 4th gear wheel	157
2.4	Redetermining shim "S6" for positioning 2nd gear synchromeshed gear	158
<b>39 - Final drive - differential</b>		<b>162</b>
<b>1</b>	<b>Renewing flange shaft oil seals with gearbox installed</b>	<b>162</b>
1.1	Renewing oil seal for left flange shaft	162
1.2	Renewing seal for right flange shaft	165
<b>2</b>	<b>Removing and installing differential</b>	<b>168</b>
<b>3</b>	<b>Dismantling and assembling differential</b>	<b>172</b>
<b>4</b>	<b>Adjusting pinion shaft and crown wheel</b>	<b>179</b>
4.1	Adjustment and marking of final drive gear sets	179
4.2	Adjusting pinion shaft	182
4.3	Adjusting crown wheel	188