



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1</b> Suggestions and criticism of this workshop manual	<b>1</b>
<b>2</b> Further information on "automatic gearbox 01N"	<b>3</b>
2.1 Self-Study Programme on CD ROM	3
2.2 Design and function of gearbox	3
2.3 Historical development of this gearbox	3
<b>3</b> Gearbox identification	<b>6</b>
<b>4</b> Identification codes, engine allocation, ratios, equipment	<b>7</b>
<b>5</b> Capacities	<b>10</b>
5.1 Planetary gear	10
5.2 Final drive	10
<b>6</b> Repair instructions	<b>11</b>
6.1 Tools	11
6.2 Gearbox	11
6.3 ATF	13
6.4 Seals and sealing rings	13
6.5 Nuts and bolts	14
6.6 Locking devices	14
6.7 Bearings	14
6.8 Piston rings	14
6.9 Inner plates	15
6.10 Shims	15
6.11 Clutches	15
6.12 Valve body	15
6.13 Electrical components	15
6.14 Guided fault finding, vehicle self-diagnosis and testing	16
<b>7</b> Repair with an exchange component	<b>17</b>
7.1 General information	17
7.2 Adjustments	17
7.3 Contents of an exchange component	17
7.4 Components of -B1-	19
7.5 Components of -B2-	19
7.6 Clutches	21
7.7 Valve body with ATF strainer	23
<b>8</b> Fault finding for the automatic 4-speed gearbox	<b>24</b>
8.1 Vehicle cannot drive forwards or backwards	24
8.2 Vehicle will not drive forwards	25
8.3 Vehicle will not reverse	25
8.4 Gearbox oily	25
8.5 Oil or ATF leaks around torque converter	25
8.6 Visible fouling of ATF and/or engine coolant	26
8.7 ATF level too low, final drive oil level too high (or vice versa) - no external leaks in gearbox	26
8.8 Gearbox oily only near breather - no other external leaks in gearbox	26
8.9 ATF escaping from breather (only for longitudinally installed gearbox 01N)	26
8.10 Selector mechanism does not move freely	26
8.11 Not all selector lever positions can be selected; selected drive ranges do not function	27
8.12 Parking lock does not engage	27
8.13 Parking lock disengages "with a jolt" (selector lever sometimes difficult to move from "P" to "R")	27
8.14 Final drive noisy	27
8.15 Performance - jolting in neutral or during certain engine and gearbox movements	28



8.16	Engine speed drops when driving range is selected	28
8.17	Vehicle does not start or also starts in "R-D-3-2-1"	28
8.18	Vehicle does not start or engine stalls after a short time	29
8.19	Selector lever can be moved from "N" or "P" without brake being operated	29
8.20	Selector lever cannot be moved from "N" or "P" although brake is operated	29
8.21	Shifts occur sporadically or not at all	29
8.22	All shifts are "hard or jolting"	30
8.23	One particular shift is "hard or jolting"	31
8.24	Shift from 3rd to 4th gear takes "too long" in vehicles through 12.92 having economy/sport switch	31
8.25	Shifts take "too long"	31
8.26	Hard shifts immediately after repair	32
8.27	Gearbox downshifts at constant vehicle speed without apparent reason	32
8.28	Gearbox does not downshift for kickdown	32
8.29	Gearbox does not shift until it warms up	33
8.30	Gearbox switches to emergency running	33
8.31	Selector lever position "1", gearbox does not shift to 1st gear (no power transfer in 1st gear)	33
8.32	Selector lever position "D", "3" or "2", gearbox does not shift to 1st gear (no power transfer)	34
8.33	Selector lever position "D", "3" or "2", automatic gearbox does not shift to 2nd gear (no power transfer)	34
8.34	Selector lever position "D" or "3" does not shift to 3rd gear, hydraulic (3H)	34
8.35	Selector lever position "D" or "3" does not shift to 3rd gear, mechanical (3M)	35
8.36	Selector lever position "D" or "3" does not shift to 3rd gear (not gearbox 001)	35
8.37	Selector lever position "D" does not shift to 4th gear	35
8.38	Selector lever position "D" does not shift to 4th gear, mechanical (4M)	36
8.39	Selector lever position "R", automatic gearbox does not shift to reverse gear	36
<b>32</b>	<b>- Torque converter</b>	<b>37</b>
<b>1</b>	<b>Torque converter</b>	<b>37</b>
1.1	Assembly overview	37
1.2	Identification of torque converter	37
1.3	Allocation of torque converter	38
1.4	Removing sleeve bearing from turbine shaft	38
1.5	Draining torque converter	39
1.6	Removing and installing torque converter seal	41
1.7	Checking torque converter	42
1.8	Installing torque converter	42
<b>37</b>	<b>- Controls, housing</b>	<b>43</b>
<b>1</b>	<b>Connecting Volkswagen tester and selecting functions</b>	<b>43</b>
<b>2</b>	<b>Carry out basic setting</b>	<b>45</b>
<b>3</b>	<b>Electrical and electronic components and their locations</b>	<b>46</b>
<b>4</b>	<b>Repairing selector mechanism</b>	<b>54</b>
4.1	Checking selector mechanism	54
4.2	Checking operation of the ignition key withdrawal lock	55
4.3	Removing and installing selector lever handle	56
4.4	Dismantling and assembling shift mechanism	57
4.5	Removing and installing selector mechanism cover	59
4.6	Dismantling and assembling selector mechanism cover	60
4.7	Removing and installing pull rod upper part	62
4.8	Removing and installing selector lever lock solenoid N110 and wiring for selector lever illumination	63
4.9	Removing and installing selector mechanism	64
4.10	Removing and installing selector lever cable	65



4.11	Checking and adjusting selector lever cable	68
4.12	Removing, installing and adjusting locking cable	69
<b>5</b>	<b>Measuring main pressure</b>	<b>75</b>
<b>6</b>	<b>Removing and installing gearbox</b>	<b>79</b>
6.1	Removing gearbox	81
6.2	Installing gearbox	86
6.3	Transporting automatic gearbox	91
6.4	Securing gearbox to assembly stand	92
6.5	Removing and installing left and right gearbox support	94
<b>7</b>	<b>Checking ATF level and topping up</b>	<b>100</b>
7.1	Checking ATF level	101
7.2	Topping up ATF	103
7.3	Draining and filling ATF	103
<b>8</b>	<b>Gearbox with selector elements</b>	<b>105</b>
<b>9</b>	<b>Dismantling and assembling gearbox</b>	<b>107</b>
9.1	Removing and installing ATF lines	107
9.2	Cleaning ATF lines and ATF cooler	111
9.3	Overview - dismantling and assembling planetary gearbox	111
9.4	I - Removing and installing ATF pump to support tube	112
9.5	II - Removing and installing reverse clutch -K2- to large sun gear	114
9.6	III - Removing and installing freewheel and reverse gear brake -B1-	115
9.7	IV - Planet carrier and gearbox housing with input gear and cover	116
9.8	Dismantling planetary gearbox	118
9.9	Assembling planetary gearbox	125
9.10	Installing exchange component	134
9.11	Overview - all planetary gearbox adjustments	144
9.12	Adjusting planet carrier	146
9.13	Adjusting reverse gear brake -B1-	150
9.14	Adjusting clutch play between -K1- and -K2-	153
9.15	Adjusting 2nd and 4th gear brake -B2-	157
<b>38 - Gears, control</b>		<b>165</b>
1	Dismantling and assembling ATF pump	165
2	Dismantling and assembling freewheel with -B1- piston	167
3	Dismantling and assembling 1st to 3rd gear clutch -K1-	169
4	Dismantling and assembling reverse gear clutch -K2-	172
5	Dismantling and assembling 3rd and 4th gear clutch -K3- with turbine shaft	175
6	Removing and installing oil pan	178
7	Removing and installing ATF strainer	180
8	Removing and installing valve body	181
8.1	Assembly overview	181
8.2	Dismantling and assembling procedure	185
9	Removing and installing gearbox oil temperature sender G93	190
10	Dismantling and assembling parking lock	192
11	Renewing speedometer sender G22 or driving speed sender G68	197
<b>39 - Final drive - differential</b>		<b>198</b>
1	Checking gear oil in final drive	198
2	Renewing oil seal for left or right flange shaft	200
2.1	Renewing oil seal for left flange shaft	200
2.2	Renewing right drive flange oil seal	202
2.3	Removing and installing deep groove ball bearing for output shaft of drive flange	204
3	Dismantling and assembling final drive	207



3.1	Overview - final drive repair	207
3.2	Removing and installing input gear	208
3.3	Removing and installing pinion shaft	212
3.4	Removing and installing differential	219
3.5	Assembly overview - dismantling and assembling differential	222
3.6	Dismantling and assembling differential (procedure)	227
<b>4</b>	<b>Adjusting final drive</b>	<b>229</b>
4.1	Overview of adjustments	229
4.2	Adjustments to be completed after renewing individual components	229
4.3	Adjusting input gear	230
<b>5</b>	<b>Adjusting pinion shaft and crown wheel</b>	<b>233</b>
5.1	General notes	233
5.2	Adjustment and marking of final drive gear sets	233
5.3	Recommended sequence for new adjustment of final drive gear set	234
5.4	Adjusting pinion shaft	237
5.5	Adjusting crown wheel	242