



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
2 Notes on 5-speed automatic gearbox 01V four-wheel drive	2
2.1 Notes on 5-speed automatic gearbox 01V four-wheel drive	2
3 Codes, engine allocations	3
4 Identifying rear final drive	6
4.1 Identifying rear final drive	6
4.2 Codes, gearbox allocations, ratios	6
5 Capacities	8
5.1 Capacities	8
6 General repair notes	10
6.1 General repair notes	10
6.2 »Vorsprung durch Technik«	13
32 - Torque converter	14
1 Torque converter	14
1.1 Assembly overview - torque converter	14
1.2 Identification of torque converter	15
1.3 Checking torque converter	15
1.4 Draining torque converter	15
1.5 Removing and installing torque converter oil seal	16
1.6 Installing torque converter	17
37 - Controls, housing	19
1 Connecting VAS 5051 and selecting functions	19
1.1 Connecting tester	19
2 Electrical and electronic components and their locations	21
3 Repairing selector mechanism	29
3.1 Checking selector mechanism	29
3.2 Checking and adjusting selector lever cable	30
3.3 Checking operation of the ignition key withdrawal lock	33
3.4 Removing and installing selector lever handle	34
3.5 Removing and installing selector mechanism	36
3.6 Assembly overview - dismantling and assembling selector mechanism	38
3.7 Dismantling and assembling selector mechanism - Assembly sequence	43
3.8 Removing and installing selector lever lock solenoid N110	49
3.9 Removing and installing selector lever cable	50
3.10 Removing and installing locking cable	54
3.11 Adjusting locking cable	57
4 Removing, dismantling and assembling selector mechanism cover	59
4.1 Assembly overview - Dismantling and assembling selector mechanism cover	59
4.2 Removing and installing selector mechanism cover	60
4.3 Dismantling and assembling selector mechanism cover	61
5 Removing and installing gearbox	64
5.1 Removing and installing gearbox for vehicles with 4-cylinder TDI engine with unit injectors	64
5.2 Removing and installing gearbox for vehicles with 5-cylinder engines	79
5.3 Installing and removing gearbox for vehicles with V6 TDI engines	91
5.4 Removing and installing gearbox for vehicles with V6 petrol engine	108
5.5 Removing and installing gearbox (vehicles with 8-cylinder engine)	124
5.6 Transporting automatic gearbox	141



5.7	Securing gearbox to assembly stand	142
5.8	Removing and installing left and right gearbox support	144
6	Checking ATF level and topping up	151
6.1	Checking ATF level	151
6.2	Topping up ATF	154
6.3	Renewing ATF	155
6.4	Additional ATF check in vehicles with additional ATF cooler	156
7	Overview - all-wheel drive power train	158
7.1	Position of selector elements with hydraulic control E17	159
7.2	Position of selector elements with hydraulic control E18/2	160
8	Dismantling and assembling gearbox	161
8.1	Removing and installing ATF lines in vehicles with 4-cylinder engines	161
8.2	Removing and installing ATF lines in vehicles with 5-cylinder 110 kW engine	162
8.3	Removing and installing ATF lines in vehicles with 5-cylinder 125 kW engine	163
8.4	Removing and installing ATF lines in vehicles with V6 TDI engine	164
8.5	Removing and installing ATF lines in vehicles with V6 petrol engine	165
8.6	Removing and installing ATF lines in vehicles with 8-cylinder fuel injection engine	166
8.7	Removing and installing additional ATF cooler	166
8.8	Cleaning ATF lines and ATF cooler	169
38 - Gears, control		170
1	Removing and installing oil pan	170
1.1	Removing and installing oil pan	170
2	Removing and installing ATF strainer	172
2.1	Removing and installing ATF strainer	172
3	Removing and installing valve body	173
3.1	Assembly overview - valve body for gearbox with hydraulic control E17	173
3.2	Assembly sequence of valve body for gearbox with hydraulic control E17	175
3.3	Assembly overview - valve body for gearbox with hydraulic control E18/2	180
3.4	Assembly sequence for valve body for gearbox with hydraulic control E18/2	182
3.5	Removing and installing internal oil pipe	187
3.6	Renewing gearbox speed sender G38 or gearbox output speed sender G195	188
3.7	Renewing gearbox input speed sender G182	189
3.8	Removing and installing wiring harness in gearbox	191
3.9	Renewing gearbox oil temperature sender (ATF) G93	193
4	Renewing oil seal for selector shaft	194
4.1	Renewing oil seal for selector shaft	194
5	Renewing multifunction switch F125	197
5.1	Renewing multifunction switch F125	197
6	Replacing speedometer sender G22 or vehicle speed sender G68	199
6.1	Renewing sender	199
39 - Final drive - rear differential		201
1	Removing and installing propshaft	201
1.1	Assembly overview	201
1.2	Dismantling and assembling procedure	203
1.3	Adjusting propshaft	208
2	Renewing oil seals for flange shafts (rear final drive installed)	212
2.1	Renewing oil seals for flange shafts	212
3	Renewing oil seal for propshaft flange (rear final drive installed)	217
3.1	Renewing oil seal for propshaft flange	217
4	Measuring and marking radial run-out on propshaft flange	223
4.1	Measuring radial run-out on propshaft flange	223



5	Measuring and marking radial run-out on propshaft flange (vehicles without threaded hole in front side of rear final drive)	225
5.1	Measuring radial run-out on propshaft flange	225
6	Removing and installing rear final drive	227
6.1	Removing and installing rear final drive	227
7	Checking gear oil in rear final drive	231
7.1	Checking gear oil in rear final drive	231
8	Dismantling and assembling rear final drive	232
8.1	Overview - gearbox	232
9	Removing and installing differential	233
9.1	Removing and installing differential	233
10	Dismantling and assembling differential	237
10.1	Dismantling and assembling differential	237
11	Removing and installing pinion gear and dismantling and assembling	246
11.1	Removing and installing pinion gear and dismantling and assembling	246
12	Adjusting pinion shaft and crown wheel	257
12.1	General notes	257
12.2	Adjustment and marking of final drive gear sets	257
12.3	Position of shims	259
12.4	Adjustment overview	259
12.5	Recommended sequence for new adjustment of final drive gear set	260
12.6	Adjusting drive pinion	260
12.7	Adjusting crown wheel	264
13	Definitions:	270
39 - Final drive - front differential		275
1	Checking oil in front final drive	275
1.1	Checking oil in front final drive	275
2	Repairing front final drive	277
2.1	Renewing seal for right flange shaft	278
2.2	Renewing oil seal for left flange shaft	282
2.3	Replacing front final drive/gearbox housing sealing ring	289
2.4	Renewing O-ring on cover for front final drive	294
3	Axle oil in transfer box	298
3.1	Checking axle oil in transfer box and replenishing	298
3.2	Draining axle oil in transfer box or filling after repairs	299
4	Repairing transfer box	301
4.1	Removing and installing transfer box	304
4.2	Renewing seal for rear flange shaft	307
4.3	Renewing seal on intermediate flange for front final drive	310
4.4	Renewing seal in intermediate flange for front final drive	312
4.5	Renewing oil seal in input pinion	313
4.6	Renewing needle bearing for gear wheel 2	315

