



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Technical data .....	1
1.2 Engine number .....	1
1.3 Engine data .....	1
<b>10 - Removing and installing engine</b> .....	<b>3</b>
<b>1 Removing and installing engine</b> .....	<b>3</b>
1.1 Removing and installing engine .....	3
1.2 Notes on removing .....	5
1.3 Notes on installing .....	9
1.4 Tightening torques .....	11
1.5 Front engine mounting .....	11
1.6 Additional information and removal instructions for vehicles with air conditioner .....	12
<b>13 - Crankshaft group</b> .....	<b>13</b>
<b>1 Dismantling and assembling engine</b> .....	<b>13</b>
1.1 Dismantling and assembling engine .....	13
1.2 Removing and installing ribbed belt for air conditioner compressor .....	23
1.3 Removing and installing ribbed belt .....	24
<b>2 Removing and installing sealing flanges and flywheel/drive plate</b> .....	<b>25</b>
2.1 Removing and installing sealing flanges and flywheel/drive plate .....	25
2.2 Renewing crankshaft oil seal -belt pulley end .....	29
2.3 Removing and installing front sealing flange .....	33
2.4 Removing and installing drive plate .....	37
<b>3 Removing and installing crankshaft</b> .....	<b>39</b>
3.1 Removing and installing crankshaft .....	39
3.2 Crankshaft dimensions .....	43
3.3 Pulling needle bearing out of crankshaft and driving in .....	44
<b>4 Dismantling and assembling pistons and conrods</b> .....	<b>46</b>
4.1 Dismantling and assembling pistons and conrods .....	46
4.2 Piston and cylinder dimensions .....	52
<b>15 - Cylinder head, Valve gear</b> .....	<b>53</b>
<b>1 Removing and installing cylinder head</b> .....	<b>53</b>
1.1 Removing and installing cylinder head .....	53
1.2 Removing, installing and tensioning toothed belts .....	57
1.3 Removing and installing cylinder head .....	63
1.4 Checking compression pressure .....	66
<b>2 Servicing valve gear</b> .....	<b>68</b>
2.1 Servicing valve gear .....	68
2.2 Reworking valve seats .....	76
2.3 Renewing camshaft oil seal .....	78
2.4 Checking hydraulic bucket tappets .....	83
2.5 Removing and installing camshaft .....	85
2.6 Checking valve guides .....	92
2.7 Replacing valve stem seals .....	93
<b>17 - Lubrication</b> .....	<b>98</b>
<b>1 Removing and installing parts of the lubrication system</b> .....	<b>98</b>
1.1 Removing and installing parts of the lubrication system .....	98
1.2 Dismantling and assembling oil filter housing .....	105
1.3 Dismantling and assembling oil pump with balancer shaft gear assembly .....	108



1.4	Removing and installing oil pump with balancer shaft gear assembly . . . . .	111
1.5	Removing and installing sump . . . . .	116
1.6	Checking oil pressure and oil pressure switch . . . . .	122
<b>19</b>	<b>- Cooling system . . . . .</b>	<b>124</b>
<b>1</b>	<b>Removing and installing parts of cooling system . . . . .</b>	<b>124</b>
1.1	Removing and installing parts of cooling system . . . . .	124
1.2	Parts of cooling system body side . . . . .	125
1.3	Parts of cooling system engine side . . . . .	129
1.4	Coolant hose connection diagram . . . . .	134
1.5	Removing and installing compact bracket . . . . .	136
1.6	Draining and filling cooling system . . . . .	139
1.7	Removing and installing radiator . . . . .	142
1.8	Removing and installing coolant pump . . . . .	144
1.9	Removing and installing viscous fan coupling . . . . .	146
1.10	Removing and installing viscous fan coupling bearing bush . . . . .	147
1.11	Dismantling and assembling coolant distribution housing . . . . .	149
1.12	Electronically regulated cooling system . . . . .	150
1.13	Checking thermostat for map-controlled engine cooling . . . . .	151
<b>20</b>	<b>- Fuel supply system . . . . .</b>	<b>153</b>
<b>1</b>	<b>Removing and installing parts of fuel supply system . . . . .</b>	<b>153</b>
1.1	Removing and installing parts of fuel supply system . . . . .	153
1.2	Removing and installing fuel tank with its attachments and fuel filter . . . . .	154
1.3	Safety precautions when working on the fuel supply system . . . . .	161
1.4	Rules for cleanliness . . . . .	162
1.5	Removing and installing fuel delivery unit . . . . .	163
1.6	Removing and installing fuel gauge sender . . . . .	165
1.7	Removing and installing fuel tank . . . . .	166
1.8	Crash fuel shut-off . . . . .	168
1.9	Checking fuel pump . . . . .	168
<b>2</b>	<b>Servicing parts of electronic power control (EPC) . . . . .</b>	<b>176</b>
2.1	Servicing parts of electronic power control (EPC) . . . . .	176
2.2	Function of EPC system . . . . .	177
<b>3</b>	<b>Activated charcoal filter system . . . . .</b>	<b>177</b>
3.1	Activated charcoal filter system . . . . .	177
3.2	Function . . . . .	177
3.3	Servicing parts of the activated charcoal filter system . . . . .	178
3.4	Checking fuel tank breather . . . . .	181
<b>24</b>	<b>- Mixture preparation, Injection . . . . .</b>	<b>184</b>
<b>1</b>	<b>Servicing injectors . . . . .</b>	<b>184</b>
1.1	Servicing injectors . . . . .	184
1.2	General notes on injection . . . . .	184
1.3	Removing and installing parts of the injection system . . . . .	185
1.4	Dismantling and assembling intake manifold . . . . .	191
1.5	Dismantling and assembling air cleaner . . . . .	195
1.6	Dismantling and assembling intake hose . . . . .	197
1.7	Dismantling and assembling fuel rail with injectors . . . . .	199
1.8	Safety precautions . . . . .	200
1.9	Rules for cleanliness . . . . .	202
1.10	Technical data . . . . .	202
<b>2</b>	<b>Checking components . . . . .</b>	<b>203</b>
2.1	Checking components . . . . .	203
2.2	Checking injector delivery and checking injectors for leaks . . . . .	203
2.3	Checking fuel pressure regulator and holding pressure . . . . .	205
2.4	Checking intake manifold change-over . . . . .	208



<b>3</b>	<b>Engine control unit</b> .....	<b>.209</b>
3.1	Engine control unit .....	.209
3.2	Replacing engine control unit .....	.209
3.3	Adapting components .....	.210
3.4	Interrogating and erasing engine control unit fault memory .....	.210
<b>26</b>	<b>- Exhaust system</b> .....	<b>.212</b>
<b>1</b>	<b>Removing and installing parts of exhaust system</b> .....	<b>.212</b>
1.1	Removing and installing parts of exhaust system .....	.212
1.2	Exhaust manifold, front exhaust pipe and catalyst with attachments .....	.213
1.3	Silencer with mountings .....	.217
<b>28</b>	<b>- Ignition system</b> .....	<b>.220</b>
<b>1</b>	<b>Servicing ignition system</b> .....	<b>.220</b>
1.1	Servicing ignition system .....	.220
1.2	General notes on ignition system .....	.220
1.3	Removing and installing parts of the ignition system .....	.221
1.4	Safety precautions .....	.223
1.5	Test data, spark plugs .....	.224

