



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Engine number .....	1
1.2 Engine data .....	1
<b>10 - Removing and installing engine</b> .....	<b>2</b>
<b>1 Removing and installing engine</b> .....	<b>2</b>
1.1 Notes on removing .....	3
1.2 Notes on installing .....	7
1.3 Front engine mounting .....	9
1.4 Additional information and assembly work for vehicles with air conditioner .....	10
<b>13 - Crankshaft group</b> .....	<b>12</b>
<b>1 Dismantling and assembling engine</b> .....	<b>12</b>
1.1 Assembly overview .....	12
1.2 Removing and installing air conditioner compressor poly V-belt .....	16
1.3 Removing and installing poly V-belt .....	16
<b>2 Removing and installing sealing flanges and flywheel or drive plate</b> .....	<b>18</b>
2.1 Renewing crankshaft oil seal on belt pulley end .....	19
2.2 Removing and installing front sealing flange .....	22
2.3 Removing and installing drive plate .....	25
<b>3 Removing and installing crankshaft</b> .....	<b>28</b>
3.1 Crankshaft dimensions .....	29
3.2 Pulling needle roller bearing out of and driving into crankshaft .....	30
<b>4 Dismantling and assembling pistons and conrods</b> .....	<b>32</b>
4.1 Piston and cylinder dimensions .....	34
<b>15 - Cylinder head, valve gear</b> .....	<b>35</b>
<b>1 Removing and installing cylinder head</b> .....	<b>35</b>
1.1 Removing, installing and tensioning toothed belt .....	37
1.2 Removing and installing cylinder head .....	41
1.3 Checking compression .....	44
<b>2 Repairing valve gear</b> .....	<b>47</b>
2.1 Reworking valve seats .....	49
2.2 Renewing camshaft oil seals .....	51
2.3 Checking hydraulic bucket tappets .....	55
2.4 Removing and installing camshaft .....	56
2.5 Checking valve guides .....	65
2.6 Renewing valve stem seals .....	66
<b>17 - Lubrication</b> .....	<b>71</b>
<b>1 Removing and installing parts of lubrication system</b> .....	<b>71</b>
1.1 Dismantling and assembling oil filter housing .....	74
1.2 Dismantling and assembling oil pump with balancer shaft gear assembly .....	75
1.3 Removing and installing oil pump with balancer shaft gear assembly .....	76
1.4 Removing and installing oil sump .....	79
1.5 Checking oil pressure and oil pressure switch .....	84
<b>19 - Cooling</b> .....	<b>87</b>
<b>1 Removing and installing parts of cooling system</b> .....	<b>87</b>
1.1 Parts of cooling system, body side .....	87
1.2 Parts of cooling system, engine side .....	89



1.3	Coolant hose schematic diagram	91
1.4	Removing and installing compact bracket	92
1.5	Draining and filling coolant	93
1.6	Removing and installing radiator	96
1.7	Removing and installing coolant pump	98
1.8	Removing and installing viscous fan coupling	100
1.9	Removing and installing viscous fan mounting bush	101
1.10	Dismantling and assembling coolant distribution housing	102
1.11	Electronically regulated cooling system	103
1.12	Checking map-controlled engine cooling thermostat	104
<b>20</b>	<b>- Fuel supply system</b>	<b>105</b>
<b>1</b>	<b>Removing and installing parts of fuel supply system</b>	<b>105</b>
1.1	Removing and installing fuel tank with attachments and fuel filter	105
1.2	Safety precautions when working on fuel supply system	108
1.3	Rules for cleanliness	109
1.4	Removing and installing fuel delivery unit	109
1.5	Removing and installing fuel gauge sender	111
1.6	Removing and installing fuel tank	112
1.7	Crash fuel shut-off	113
1.8	Checking fuel pump	113
<b>2</b>	<b>Repairing parts of electronic power control (EPC)</b>	<b>120</b>
2.1	Function of EPC system	120
<b>3</b>	<b>Activated charcoal filter system</b>	<b>122</b>
3.1	Function	122
3.2	Repairing parts of activated charcoal filter system	122
3.3	Checking fuel tank breather	123
<b>24</b>	<b>- Mixture preparation - injection</b>	<b>126</b>
<b>1</b>	<b>Repairing injection system</b>	<b>126</b>
1.1	General notes on injection	126
1.2	Removing and installing parts of the injection system	126
1.3	Dismantling and assembling intake manifold	129
1.4	Dismantling and assembling air filter	130
1.5	Dismantling and assembling intake hose	131
1.6	Dismantling and assembling fuel rail with injectors	132
1.7	Safety precautions	132
1.8	Rules for cleanliness	133
1.9	Technical data	134
<b>2</b>	<b>Checking components</b>	<b>135</b>
2.1	Checking injectors for leaks and injection rate	135
2.2	Checking fuel pressure regulator and holding pressure	137
2.3	Checking intake manifold change-over	139
<b>3</b>	<b>Engine control unit</b>	<b>141</b>
3.1	Renewing engine control unit	141
3.2	Adapting components	141
3.3	Reading and erasing engine control unit fault memory	142
<b>26</b>	<b>- Exhaust system</b>	<b>144</b>
<b>1</b>	<b>Removing and installing parts of exhaust system</b>	<b>144</b>
1.1	Exhaust manifold, front exhaust pipe and catalytic converter with attachments	144
1.2	Silencer with mountings	146
<b>28</b>	<b>- Ignition system</b>	<b>148</b>
<b>1</b>	<b>Repairing ignition system</b>	<b>148</b>



---

1.1	General notes on ignition system .....	148
1.2	Removing and installing parts of ignition system .....	148
1.3	Safety precautions .....	149
1.4	Test data, spark plugs .....	150

