



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Notes on removing	5
1.2 Notes on installing	8
1.3 Specified torques	10
13 - Crankshaft group	12
1 Dismantling and assembling engine	12
1.1 Part I - Assembly overview	14
1.2 Part II - Assembly overview	15
1.3 Part III: assembly overview - old toothed belt tensioner	16
1.4 Part IV: assembly overview - new toothed belt tensioner	18
1.5 Removing and installing air conditioner compressor poly V-belt	19
1.6 Removing and installing poly V-belt	20
2 Removing and installing sealing flanges and flywheel or drive plate	21
2.1 Assembly overview - sealing flanges and flywheel	21
2.2 Renewing crankshaft oil seal - pulley end	22
2.3 Removing and installing drive plate	24
3 Removing and installing crankshaft	26
3.1 Assembly overview - crankshaft	26
3.2 Pulling needle roller bearing out of and driving into crankshaft	28
3.3 Crankshaft dimensions	29
4 Dismantling and assembling pistons and conrods	30
4.1 Assembly overview - pistons and conrods	30
4.2 Checking pistons, piston rings and cylinder bores	31
15 - Cylinder head, valve gear	33
1 Cylinder head	33
1.1 Assembly overview - cylinder head	33
1.2 Removing and installing cylinder head	35
1.3 Removing, installing and tensioning toothed belt	38
1.4 Checking compression	46
2 Repairing valve gear	48
2.1 Assembly overview - valve gear	48
2.2 Checking camshaft axial clearance	50
2.3 Reworking valve seats	51
2.4 Renewing camshaft oil seals	52
2.5 Checking hydraulic bucket tappets	57
2.6 Removing and installing camshafts	58
2.7 Checking valve guides	62
2.8 Renewing valve stem seals	63
17 - Lubrication	66
1 Parts of lubrication system	66
1.1 Engine oil	66
1.2 Assembly overview - parts of lubrication system	67
1.3 Removing and installing oil sump	71



1.4	Checking oil pressure and oil pressure switch	75
19	- Cooling	78
1	Parts of cooling system	78
1.1	Assembly overview - parts of cooling system, body side	78
1.2	Assembly overview - parts of cooling system, engine side	80
1.3	Assembly overview - coolant pump and compact bracket	82
1.4	Assembly overview - coolant pump	84
1.5	Coolant hose schematic diagram	84
1.6	Draining and filling coolant	87
1.7	Removing and installing radiator	90
1.8	Removing and installing viscous fan coupling	92
1.9	Removing and installing viscous fan mounting bush	92
1.10	Removing and installing coolant pump V-belt	94
20	- Fuel supply system	96
1	Removing and installing parts of fuel supply system	96
1.1	Assembly overview - fuel tank with attachments	96
1.2	Safety precautions when working on fuel supply system	102
1.3	Rules for cleanliness	102
1.4	Removing and installing fuel delivery unit, front-wheel drive vehicles	103
1.5	Removing and installing fuel delivery unit, four-wheel drive vehicles	105
1.6	Removing and installing fuel tank	107
1.7	Checking fuel pump	110
2	Activated charcoal filter system	117
2.1	Function	117
2.2	Assembly overview - activated charcoal filter system	117
2.3	Checking fuel tank breather	118
3	Assembly overview - electronic power control (EPC)	121
4	Accelerator mechanism (throttle cable)	122
4.1	Assembly overview - accelerator mechanism	122
4.2	Adjusting accelerator cable	123
21	- Turbocharging/supercharging	126
1	Charge air system with turbocharger (engine codes AEB, ANB, APU, AWT only)	126
1.1	Rules for cleanliness	126
1.2	Safety precautions	126
1.3	Assembly overview - turbocharger with attachments	127
1.4	Assembly overview - charge air cooling	130
1.5	Schematic diagram of turbocharging system	130
2	Checking charge pressure system	134
2.1	Checking charge pressure control, vehicles without EPC system	134
2.2	Checking vacuum unit for charge pressure control valve	135
2.3	Checking overrun shut-off valve	136
2.4	Checking charge air system for leaks	137
24	- Mixture preparation - injection	139
1	Repairing injection system	139
1.1	General notes on injection	139
1.2	Overview of fitting locations	139
1.3	Assembly overview - parts of injection system	143
1.4	Assembly overview - air filter	147
1.5	Assembly overview - fuel rail with injectors	149
1.6	Assembly overview - intake manifold change-over	149
1.7	Assembly overview - throttle valve control module	151



1.8	Safety precautions	152
1.9	Rules for cleanliness	154
1.10	Technical data	154
2	Checking components	156
2.1	Checking components with vehicle diagnosis, test and information system VAS 5051A or vehicle diagnosis and service information system VAS 5052	156
2.2	Checking intake manifold change-over	156
2.3	Checking injectors for leaks and quantity injected	156
2.4	Checking fuel pressure regulator and holding pressure	159
3	Engine control unit	162
3.1	Renewing engine control unit	162
3.2	Adapting functions and components	162
3.3	Reading and erasing engine control unit fault memory	163
26	- Exhaust system	165
1	Parts of exhaust system	165
1.1	Assembly overview - front-wheel drive vehicles	165
1.2	Assembly overview - four-wheel drive vehicles	169
2	Secondary air system	171
2.1	Function	171
2.2	Assembly overview - secondary air system	171
2.3	Checking combination valve	172
2.4	Checking secondary air inlet valve	173
28	- Ignition system	174
1	Repairing ignition system	174
1.1	General notes on ignition system	174
1.2	Assembly overview - ignition system	174
1.3	Safety precautions	179
1.4	Test data, spark plugs	180

