



Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Notes on removing	5
1.2 Notes on installing	10
1.3 Specified torques	12
1.4 Assembly overview - front engine mounting	12
1.5 Additional information and assembly work for vehicles with air conditioner	13
13 - Crankshaft group	15
1 Dismantling and assembling engine	15
1.1 Assembly overview	15
1.2 Removing and installing air conditioner compressor poly V-belt	19
1.3 Removing and installing poly V-belt	20
2 Removing and installing sealing flanges and flywheel or drive plate	21
2.1 Assembly overview	21
2.2 Renewing crankshaft oil seal - pulley end	22
2.3 Removing and installing front sealing flange	24
2.4 Removing and installing drive plate	27
3 Removing and installing crankshaft	30
3.1 Assembly overview	30
3.2 Pulling needle roller bearing out of and driving into crankshaft	32
3.3 Crankshaft dimensions	33
4 Dismantling and assembling pistons and conrods	35
4.1 Assembly overview	35
4.2 Piston and cylinder dimensions	38
15 - Cylinder head, valve gear	39
1 Removing and installing cylinder head	39
1.1 Assembly overview	39
1.2 Removing, installing and tensioning toothed belt	41
1.3 Removing and installing cylinder head	45
1.4 Checking compression	48
2 Repairing valve gear	51
2.1 Assembly overview	51
2.2 Reworking valve seats	55
2.3 Renewing inlet camshaft oil seal	57
2.4 Renewing exhaust camshaft oil seal	59
2.5 Checking hydraulic bucket tappets	62
2.6 Removing and installing camshafts	63
2.7 Checking valve guides	67
2.8 Renewing valve stem seals	68
17 - Lubrication	71
1 Removing and installing parts of lubrication system	71
1.1 Engine oil	71
1.2 Assembly overview	72
1.3 Removing and installing oil sump	76
1.4 Checking oil pressure and oil pressure switch	81



19 - Cooling	84
1 Removing and installing parts of cooling system	84
1.1 Assembly overview - parts of cooling system, body side	84
1.2 Assembly overview - parts of cooling system, engine side	86
1.3 Assembly overview - compact bracket	88
1.4 Coolant hose schematic diagram	89
1.5 Draining and filling coolant	91
1.6 Checking cooling system for leaks	94
1.7 Removing and installing radiator	96
1.8 Removing and installing coolant pump	98
1.9 Removing and installing viscous fan coupling	99
1.10 Removing and installing viscous fan mounting bush	100
1.11 Removing and installing thermostat	101
1.12 Removing and installing lower coolant pipe	103
20 - Fuel supply system	105
1 Removing and installing parts of fuel supply system - front wheel drive vehicles	105
1.1 Safety precautions when working on fuel supply system	105
1.2 Rules for cleanliness	106
1.3 Assembly overview - fuel tank with attachments: engine code AWT	106
1.4 Draining fuel tank: engine code AWT	109
1.5 Removing and installing fuel delivery unit: engine code AWT	110
1.6 Removing and installing fuel gauge sender: engine code AWT	112
1.7 Assembly overview - fuel tank with attachments: engine codes AUG, AWM	113
1.8 Draining fuel tank: engine codes AUG, AWM	116
1.9 Removing and installing fuel delivery unit: engine codes AUG, AWM	117
1.10 Removing and installing fuel gauge sender: engine codes AUG, AWM	122
1.11 Removing and installing fuel tank	122
1.12 Crash fuel shut-off	124
1.13 Checking fuel pump	124
2 Removing and installing parts of fuel supply system - four wheel drive vehicles	130
2.1 Assembly overview - fuel tank with attachments: engine code AWT	130
2.2 Assembly overview - fuel tank with attachments: engine codes AUG, AWM	133
2.3 Assembly overview - fuel filter	138
2.4 Emptying fuel tank	139
2.5 Removing and installing fuel delivery unit	141
2.6 Removing and installing fuel gauge sender G	146
2.7 Removing and installing fuel gauge sender 2 G169	147
2.8 Removing and installing fuel gauge sender 3 G237	149
2.9 Removing, installing and checking suction-jet pumps	151
2.10 Removing and installing fuel tank	152
2.11 Checking fuel pump	154
3 Electronic power control (EPC)	160
3.1 Function of EPC system	160
3.2 Assembly overview	160
4 Active charcoal filter system: engine code AWT	162
4.1 Function	162
4.2 Assembly overview - parts of activated charcoal filter system	162
4.3 Schematic diagram of activated charcoal filter system	164
4.4 Checking fuel tank breather	164
5 Activated charcoal filter system: engine codes AUG, AWM	166
5.1 Description of leakage diagnosis	166
5.2 Assembly overview - parts of activated charcoal filter system	166
5.3 Schematic diagram of activated charcoal filter system	168



5.4	Checking fuel system for leaks	168
21	- Turbocharging/supercharging	171
1	Charge air system with turbocharger	171
1.1	Safety precautions	171
1.2	Rules for cleanliness	172
1.3	Assembly overview - turbocharger with attachments	172
1.4	Removing and installing turbocharger	174
1.5	Assembly overview - parts of charge air cooling	179
1.6	Schematic diagram of turbocharging system	181
2	Checking charge pressure system	183
2.1	Checking vacuum unit for charge pressure control valve	183
2.2	Checking overrun shut-off valve	183
2.3	Checking charge air system for leaks	184
24	- Mixture preparation - injection	187
1	Repairing injection system	187
1.1	General notes on injection	187
1.2	Safety precautions	187
1.3	Rules for cleanliness	188
1.4	Overview of fitting locations	188
1.5	Assembly overview - air filter	191
1.6	Assembly overview - fuel rail with injectors	192
1.7	Assembly overview - intake manifold	193
1.8	Removing and installing intake manifold	193
1.9	Technical data	196
2	Removing and installing air mass meter G70	198
2.1	Removing air mass meter G70 (with no housing)	198
2.2	Removing air mass meter G70 (with housing)	198
2.3	Installing air mass meter G70	198
3	Checking components	200
3.1	Checking injectors	200
3.2	Checking fuel pressure regulator and holding pressure	202
4	Engine control unit	205
4.1	Reading and erasing engine control unit fault memory	205
4.2	Adapting functions and components	206
4.3	Renewing engine control unit	207
26	- Exhaust system	208
1	Removing and installing parts of exhaust system	208
1.1	Assembly overview - parts of exhaust system: front-wheel drive vehicles	210
1.2	Assembly overview - parts of exhaust system: four-wheel drive vehicles	212
2	Secondary air system	215
2.1	Function	215
2.2	Assembly overview: parts of secondary air system	215
2.3	Checking combination valve	217
28	- Ignition system	219
1	Repairing ignition system	219
1.1	General notes on ignition system	219
1.2	Safety precautions	219
1.3	Assembly overview - parts of ignition system	219
1.4	Removing and installing ignition coils with output stage	221
1.5	Test data, spark plugs	222

