



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	4
1.3 Notes on installing	8
1.4 Tightening torques	9
1.5 Additional information and removal instructions for vehicles with air conditioner	10
13 - Crankshaft group	11
1 Dismantling and assembling engine	11
1.1 Dismantling and assembling engine	11
1.2 Removing and installing ribbed belt for air conditioner compressor	19
1.3 Removing and installing ribbed belt	20
2 Removing and installing sealing flanges and flywheel/drive plate	21
2.1 Removing and installing sealing flanges and flywheel/drive plate	21
2.2 Renewing crankshaft oil seal -belt pulley end	24
2.3 Removing and installing front sealing flange	27
2.4 Removing and installing drive plate	29
3 Removing and installing crankshaft	32
3.1 Removing and installing crankshaft	32
3.2 Colour markings	36
3.3 Pulling needle bearing out of crankshaft and driving in	37
3.4 Crankshaft dimensions	39
4 Dismantling and assembling pistons and conrods	39
4.1 Dismantling and assembling pistons and conrods	39
4.2 Piston and cylinder dimensions	48
15 - Cylinder head, Valve gear	49
1 Removing and installing cylinder head	49
1.1 Removing and installing cylinder head	49
1.2 Removing and installing cylinder head	54
1.3 Removing and installing toothed belt	58
1.4 Checking semi-automatic toothed belt tensioning roller	61
1.5 Checking compression pressure	62
2 Servicing valve gear	64
2.1 Servicing valve gear	64
2.2 Reworking valve seats	69
2.3 Replacing camshaft oil seal	71
2.4 Removing and installing camshaft	74
2.5 Checking hydraulic bucket tappets	77
2.6 Checking valve guides	77
2.7 Renewing valve guides	78
2.8 Renewing valve stem seals	79
17 - Lubrication	82
1 Removing and installing parts of the lubrication system	82
1.1 Removing and installing parts of the lubrication system	82



1.2	Removing and installing sump	91
1.3	Checking oil pressure and oil pressure switch	98
19	- Cooling system	100
1	Removing and installing parts of cooling system	100
1.1	Removing and installing parts of cooling system	100
1.2	Parts of cooling system body side	101
1.3	Parts of cooling system engine side	104
1.4	Removing and installing compact bracket	111
1.5	Coolant hose connection diagram	114
1.6	Draining and filling cooling system	117
1.7	Removing and installing radiator	120
1.8	Removing and installing coolant pump	122
1.9	Removing and installing viscous fan coupling	124
1.10	Removing and installing viscous fan coupling bearing bush	125
20	- Fuel supply system	127
1	Removing and installing parts of fuel supply system	127
1.1	Removing and installing parts of fuel supply system	127
1.2	Removing and installing fuel tank with its attachments and fuel filter	128
1.3	Safety precautions when working on the fuel supply system	135
1.4	Rules for cleanliness	136
1.5	Removing and installing fuel delivery unit	137
1.6	Removing and installing fuel tank	140
1.7	Crash fuel shut-off	142
1.8	Checking fuel pump	142
1.9	Servicing accelerator mechanism	150
1.10	Adjusting throttle cable	153
2	Electronic power control (EPC)	155
2.1	Electronic power control (EPC)	155
2.2	Function of EPC system	155
2.3	Servicing parts of electronic power control (EPC)	156
3	Activated charcoal filter system	157
3.1	Activated charcoal filter system	157
3.2	Servicing parts of the activated charcoal filter system	158
3.3	Checking fuel tank breather	162
24	- Mixture preparation, Injection	166
1	Servicing injection system	166
1.1	Servicing injection system	166
1.2	Fitting locations overview	166
1.3	General notes on injection	176
1.4	Dismantling and assembling intake manifold	177
1.5	Dismantling and assembling air cleaner	184
1.6	Dismantling and assembling intake hose	186
1.7	Dismantling and assembling fuel rail with injectors	190
1.8	Safety precautions	191
1.9	Rules for cleanliness	193
1.10	Technical data	193
2	Checking components	193
2.1	Checking components	193
2.2	Checking spray pattern and checking for leaks	193
2.3	Checking fuel pressure regulator and holding pressure	196
2.4	Checking intake manifold change-over	199
3	Engine control unit	200
3.1	Engine control unit	200



3.2	Replacing engine control unit200
3.3	Adapting functions and components201
3.4	Interrogating and erasing engine control unit fault memory201
26	- Exhaust system203
1	Removing and installing parts of exhaust system203
1.1	Removing and installing parts of exhaust system203
1.2	Exhaust manifold, front exhaust pipe and catalyst with attachments204
1.3	Silencer with mountings210
2	Secondary air system213
2.1	Secondary air system213
2.2	Function213
2.3	Removing and installing parts of the secondary air system214
2.4	Checking combi-valve217
28	- Ignition system219
1	Servicing ignition system219
1.1	Servicing ignition system219
1.2	General notes on ignition system219
1.3	Removing and installing parts of the ignition system220
1.4	Safety precautions222
1.5	Test data, spark plugs223



Passat 1997 ➤

4-cyl. injection engine (1.6 l with bucket tappets) - Edition 09.1999
