



## Contents

<b>00 - Technical data . . . . .</b>	<b>1</b>
1 <b>Technical data . . . . .</b>	1
1.1    Technical data . . . . .	1
1.2    Engine number . . . . .	1
1.3    Engine data . . . . .	1
<b>10 - Removing and installing engine . . . . .</b>	<b>3</b>
1 <b>Removing and installing engine . . . . .</b>	3
1.1    Removing and installing engine . . . . .	3
1.2    Notes on removing . . . . .	5
1.3    Notes on installing . . . . .	8
1.4    Tightening torques . . . . .	9
1.5    Front engine mounting . . . . .	10
1.6    Additional information and removal instructions for vehicles with air conditioner . . . . .	10
<b>13 - Crankshaft group . . . . .</b>	<b>12</b>
1 <b>Dismantling and assembling engine . . . . .</b>	12
1.1    Dismantling and assembling engine . . . . .	12
1.2    Removing and installing ribbed belt for air conditioner compressor . . . . .	19
1.3    Removing and installing ribbed belt . . . . .	20
2 <b>Removing and installing sealing flanges and flywheel . . . . .</b>	21
2.1    Removing and installing sealing flanges and flywheel . . . . .	21
2.2    Renewing crankshaft oil seal -belt pulley end . . . . .	24
2.3    Removing and installing front sealing flange . . . . .	27
3 <b>Removing and installing crankshaft . . . . .</b>	30
3.1    Removing and installing crankshaft . . . . .	30
3.2    Colour markings . . . . .	34
3.3    Pulling needle bearing out of crankshaft and driving in . . . . .	35
3.4    Crankshaft dimensions . . . . .	37
4 <b>Dismantling and assembling pistons and conrods . . . . .</b>	38
4.1    Dismantling and assembling pistons and conrods . . . . .	38
4.2    Piston and cylinder dimensions . . . . .	43
<b>15 - Cylinder head, Valve gear . . . . .</b>	<b>44</b>
1 <b>Removing and installing cylinder head . . . . .</b>	44
1.1    Removing and installing cylinder head . . . . .	44
1.2    Removing and installing cylinder head . . . . .	50
1.3    Removing and installing toothed belt . . . . .	54
1.4    Checking semi-automatic toothed belt tensioning roller . . . . .	57
1.5    Checking compression pressure . . . . .	58
2 <b>Servicing valve gear . . . . .</b>	60
2.1    Servicing valve gear . . . . .	60
2.2    Reworking valve seats . . . . .	65
2.3    Replacing camshaft oil seal . . . . .	67
2.4    Removing and installing camshaft . . . . .	70
2.5    Checking valve guides . . . . .	74
2.6    Renewing valve stem seals . . . . .	75
<b>17 - Lubrication . . . . .</b>	<b>78</b>
1 <b>Removing and installing parts of the lubrication system . . . . .</b>	78
1.1    Removing and installing parts of the lubrication system . . . . .	78
1.2    Removing and installing sump . . . . .	87
1.3    Checking oil pressure and oil pressure switch . . . . .	93



<b>19 - Cooling system . . . . .</b>	<b>95</b>
1 <b>Removing and installing parts of cooling system . . . . .</b>	<b>95</b>
1.1    Removing and installing parts of cooling system . . . . .	95
1.2    Parts of cooling system body side . . . . .	96
1.3    Parts of cooling system engine side . . . . .	99
1.4    Removing and installing compact bracket . . . . .	103
1.5    Coolant hose connection diagram . . . . .	106
1.6    Draining and filling cooling system . . . . .	107
1.7    Removing and installing radiator . . . . .	110
1.8    Removing and installing coolant pump . . . . .	112
1.9    Removing and installing viscous fan coupling . . . . .	113
1.10    Removing and installing viscous fan coupling bearing bush . . . . .	115
<b>20 - Fuel supply system . . . . .</b>	<b>117</b>
1 <b>Removing and installing parts of fuel supply system . . . . .</b>	<b>117</b>
1.1    Removing and installing parts of fuel supply system . . . . .	117
1.2    Removing and installing fuel tank with its attachments and fuel filter . . . . .	118
1.3    Safety precautions when working on the fuel supply system . . . . .	125
1.4    Rules for cleanliness . . . . .	126
1.5    Removing and installing fuel delivery unit . . . . .	126
1.6    Removing and installing fuel gauge sender . . . . .	128
1.7    Removing and installing fuel tank . . . . .	129
1.8    Crash fuel shut-off . . . . .	130
1.9    Checking fuel pump . . . . .	131
2 <b>Electronic power control (EPC) . . . . .</b>	<b>138</b>
2.1    Electronic power control (EPC) . . . . .	138
2.2    Function of EPC system . . . . .	138
2.3    Servicing parts of electronic power control (EPC) . . . . .	139
3 <b>Activated charcoal filter system . . . . .</b>	<b>140</b>
3.1    Activated charcoal filter system . . . . .	140
3.2    Function . . . . .	140
3.3    Servicing parts of the activated charcoal filter system . . . . .	141
3.4    Checking fuel tank breather . . . . .	143
<b>24 - Mixture preparation, Injection . . . . .</b>	<b>146</b>
1 <b>Servicing injection system . . . . .</b>	<b>146</b>
1.1    Servicing injection system . . . . .	146
1.2    Fitting locations overview . . . . .	146
1.3    General notes on injection . . . . .	153
1.4    Dismantling and assembling intake manifold . . . . .	154
1.5    Dismantling and assembling air cleaner . . . . .	158
1.6    Dismantling and assembling intake hose . . . . .	160
1.7    Dismantling and assembling fuel rail with injectors . . . . .	162
1.8    Safety precautions . . . . .	163
1.9    Rules for cleanliness . . . . .	164
1.10    Technical data . . . . .	164
2 <b>Checking components . . . . .</b>	<b>165</b>
2.1    Checking components . . . . .	165
2.2    Checking spray pattern and checking for leaks . . . . .	165
2.3    Checking fuel pressure regulator and holding pressure . . . . .	167
2.4    Checking intake manifold change-over . . . . .	169
3 <b>Engine control unit . . . . .</b>	<b>170</b>
3.1    Engine control unit . . . . .	170
3.2    Replacing engine control unit . . . . .	170
3.3    Adapting functions and components . . . . .	171

---



3.4	Interrogating and erasing engine control unit fault memory .....	172
<b>26 - Exhaust system</b>	.....	<b>174</b>
1	<b>Removing and installing parts of exhaust system</b> .....	174
1.1	Removing and installing parts of exhaust system .....	174
1.2	Exhaust manifold, front exhaust pipe and catalyst with attachments .....	175
1.3	Silencer with mountings .....	179
2	<b>Secondary air system</b> .....	181
2.1	Secondary air system .....	181
2.2	Function .....	182
2.3	Removing and installing parts of the secondary air system .....	182
2.4	Checking combi-valve .....	185
3	<b>Exhaust gas recirculation system</b> .....	187
3.1	Exhaust gas recirculation system .....	187
3.2	Servicing parts of exhaust gas recirculation system .....	187
<b>28 - Ignition system</b>	.....	<b>189</b>
1	<b>Servicing ignition system</b> .....	189
1.1	Servicing ignition system .....	189
1.2	General notes on ignition system .....	189
1.3	Removing and installing parts of the ignition system .....	190
1.4	Safety precautions .....	193
1.5	Test data, spark plugs .....	194



**Passat 1997 ➤**  
**4-cyl. injection engine (1.6 ltr. with roller rocker finger) - Edition 08.2001**

---