



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Notes on removing	4
1.2 Notes on installing	7
1.3 Torque settings	8
1.4 Front engine mounting	8
1.5 Additional information and removal instructions for vehicles with air conditioner	9
13 - Crankshaft group	11
1 Dismantling and assembling engine	11
1.1 Overview	11
1.2 Removing and installing air conditioner compressor poly V-belt	17
1.3 Removing and installing poly V-belt	18
2 Removing and installing sealing flanges and flywheel or drive plate	19
2.1 Assembly overview - sealing flange and flywheel/drive plate	19
2.2 Renewing crankshaft oil seal - pulley end	20
2.3 Removing and installing drive plate	22
2.4 Removing and installing sealing flange - pulley end	23
3 Removing and installing crankshaft	27
3.1 Assembly overview - crankshaft	27
3.2 Pulling needle roller bearing out of and driving into crankshaft	29
3.3 Crankshaft dimensions	30
4 Dismantling and assembling pistons and conrods	31
4.1 Assembly overview - pistons and conrods	31
4.2 Piston and cylinder	32
4.3 Checking piston projection at TDC	34
4.4 Piston and cylinder dimensions	35
15 - Cylinder head, valve gear	36
1 Cylinder head	36
1.1 Assembly overview - cylinder head	36
1.2 Removing, installing and tensioning toothed belts	39
1.3 Removing and installing cylinder head	43
1.4 Checking compression	47
2 Repairing valve gear	50
2.1 Assembly overview - valve gear	50
2.2 Checking valve guides	52
2.3 Renewing valve stem seals	53
2.4 Removing and installing camshaft	54
2.5 Removing and installing camshaft oil seal	58
17 - Lubrication	60
1 Parts of lubrication system	60
1.1 Engine oil	60
1.2 Part I	60
1.3 Part II	62
1.4 Part III	65



1.5	Removing and installing oil pump	66
1.6	Removing and installing balancer shaft module	68
1.7	Converting balancer shaft module to spur gear drive	70
1.8	Assembly overview - oil supply line	76
1.9	Removing and installing sump	77
1.10	Checking oil pressure and oil pressure switch	82
19 - Cooling	85
1	Removing and installing parts of cooling system	85
1.1	Parts of cooling system - body side	85
1.2	Parts of cooling system - engine side	87
1.3	Draining and filling coolant	89
1.4	Removing and installing radiator	92
1.5	Removing and installing coolant pump	94
1.6	Removing and installing thermostat	96
1.7	Removing and installing viscous fan coupling	98
20 - Fuel supply system	100
1	Parts of fuel system	100
1.1	Safety precautions when working on fuel supply system	100
1.2	Rules for cleanliness	101
1.3	Assembly overview - fuel tank	101
1.4	Assembly overview - fuel filter	104
1.5	Removing and installing fuel cooler	105
1.6	Emptying fuel tank	106
1.7	Removing and installing fuel tank	106
1.8	Checking fuel pump	109
1.9	Removing and installing fuel delivery unit	113
1.10	Removing and installing fuel gauge sender	118
1.11	Assembly overview - accelerator mechanism	118
1.12	Checking tandem pump	119
1.13	Removing and installing tandem pump	121
2	Additive container	124
2.1	Safety precautions when working on additive container	124
2.2	Removing and installing additive container	124
2.3	Assembly overview - additive container	125
21 - Turbocharging/supercharging	128
1	Charge air system with turbocharger	128
1.1	Safety precautions	128
1.2	Rules for cleanliness	128
1.3	Hose connections with push-on connectors	129
1.4	Assembly overview - turbocharger	129
1.5	Assembly overview - charge air cooling	131
23 - Mixture preparation - injection	133
1	Repairing diesel direct injection system	133
1.1	Safety precautions	133
1.2	Rules for cleanliness	134
1.3	Assembly overview - intake manifold with intake manifold flap motor	134
1.4	Assembly overview - air filter	136
1.5	Assembly overview - unit injector	136
1.6	Removing and installing unit injector O-rings	137
1.7	Removing and installing unit injector	139
2	Engine control unit	143
2.1	Reading and erasing engine control unit fault memory	143



2.2	Adapting functions and components	144
2.3	Removing and installing engine control unit	145
26 - Exhaust system	146
1	Removing and installing parts of exhaust system	146
1.1	Assembly overview - catalytic converter, particulate filter and front exhaust pipe for engine code BGW	147
1.2	Assembly overview - catalytic converter and front exhaust pipe for engine code BHW	148
1.3	Assembly overview - silencer with mountings	149
2	Exhaust gas recirculation system	151
2.1	Assembly overview - exhaust gas recirculation	151
28 - Glow plug system	153
1	Checking glow plug system	153
1.1	Removing, installing and checking ceramic glow plugs	153



Passat 1997 ➤ , Passat Variant 1997 ➤
4-cylinder diesel engine (2.0 l engine) - Edition 03.2008
