



Contents

00 - Technical data	1
1 Brake allocation via PR No.	1
1.1 Front brake	1
1.2 Rear brake	1
2 Technical data for brakes	3
2.1 Brake master cylinder and brake servo	3
2.2 Front brakes	3
2.3 Rear brakes	4
3 Brake test	6
3.1 General information	6
3.2 Test for vehicles with front-wheel drive	6
3.3 Test for vehicles with four-wheel drive via a Haldex coupling	6
3.4 Testing the electromechanical parking brake	7
45 - Anti-lock brake system	9
1 General notes on anti-lock brake system	9
2 Notes for repair work on anti-lock brake system	10
3 Connecting VAS 5051 and selecting functions	11
4 Electrical/electronic components and fitting locations	13
4.1 ABS TRW (ABS/EDL/TCS/ESP)	13
5 Fault display via warning lamps	16
6 Assembly overview - hydraulic unit	18
6.1 ABS TRW (ABS/EDL/TCS/ESP)	18
7 Removing and installing parts of ABS system on front and rear axle	26
7.1 Removing and installing parts of ABS system on front axle	26
7.2 Removing and installing parts of anti-lock brake system on rear axle (front-wheel drive)	27
7.3 Removing and installing parts of anti-lock brake system on rear axle (four-wheel drive)	29
8 Removing and installing parts of ESP system	31
8.1 Removing and installing ESP sensor unit G419	31
8.2 Removing and installing steering angle sender G85	32
8.3 Removing and installing brake servo vacuum sender G483	32
46 - Brakes - mechanism	34
1 Repairing front brakes	34
1.1 Assembly overview - front brakes FN 3	34
1.2 Removing and installing brake pads	36
1.3 Removing and installing brake caliper	39
1.4 Assembly overview - front brakes FNR-G	40
1.5 Removing and installing brake pads	42
1.6 Removing and installing brake caliper	45
2 Repairing rear brakes	48
2.1 Assembly overview - repairing rear brakes CII 38 and CII 41	48
2.2 Removing and installing brake pads	50
2.3 Removing and installing brake caliper	53
3 Overview of electromechanical parking brake components	57
3.1 Removing and installing control unit for electromechanical parking brake J540	57
3.2 Removing and installing parking brake motor	58
4 Assembly overview - brake pedal	62
4.1 Separating brake pedal from brake servo	62
47 - Brakes - hydraulics	65



1	Repairing front brake calipers	65
1.1	Assembly overview - brake caliper FN 3	65
1.2	Removing and installing piston for brake caliper FN 3	65
1.3	Assembly overview - brake caliper FNR-G	69
1.4	Removing and installing piston for FNR-G brake caliper	70
2	Repairing rear brake calipers	74
2.1	Assembly overview - repairing brake caliper CII 38 and CII 41	74
2.2	Removing and installing rear brake caliper piston	75
2.3	Pre-bleeding brake caliper	79
3	Pressurised leak test	80
3.1	Prerequisites for testing:	80
4	Bleeding brake system	81
4.1	Bleeding brake system using brake filling and bleeding equipment VAS 5234 or V.A.G 1869	81
4.2	Changing brake fluid	83
5	Assembly overview - brake servo/brake master cylinder	84
5.1	Vacuum pump for brake servo (vehicles with diesel engine)	86
5.2	Vacuum pump for brake servo (vehicles with petrol engine)	87
5.3	Checking brake servo vacuum system	87
5.4	Checking non-return valve:	93
5.5	Removing and installing brake servo pressure sensor G294	93
6	Removing and installing brake light switch F	94
7	Removing and installing brake master cylinder	95
7.1	Removing	95
7.2	Installing	96
8	Removing and installing brake servo	98
8.1	Removing	98
8.2	Installing	102
9	Brake lines	103
9.1	Separating point on underbody	103
9.2	Repairing brake lines	103