



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Checklist for evaluating running gear of accident vehicles</b> .....	<b>1</b>
<b>2 General information</b> .....	<b>3</b>
<b>40 - Front suspension</b> .....	<b>4</b>
<b>1 Appraisal of accident vehicles</b> .....	<b>4</b>
<b>2 Servicing front suspension</b> .....	<b>5</b>
2.1 Overview - front axle .....	5
2.2 Raising wheel suspension to unladen position .....	6
<b>3 Subframe, anti-roll bar, suspension links</b> .....	<b>9</b>
3.1 Assembly overview: subframe, anti-roll bar, suspension links .....	9
3.2 Assembly overview: front left vehicle level sender G78 .....	13
3.3 Removing and installing front left vehicle level sender G78 .....	14
3.4 Repairing thread in longitudinal member .....	15
3.5 Fixing position of subframe .....	15
3.6 Lowering subframe .....	17
3.7 Removing and installing subframe without steering rack .....	21
3.8 Removing and installing subframe with steering rack .....	25
3.9 Repairing subframe .....	30
3.10 Checking swivel joint .....	38
3.11 Removing and installing swivel joint .....	39
3.12 Removing and installing suspension link with mounting bracket .....	42
3.13 Removing and installing suspension link with mounting bracket (left side for vehicles with DSG or automatic gearboxes) .....	45
3.14 Renewing bonded rubber bush for suspension link .....	50
3.15 Renewing mounting bracket with suspension link bush .....	52
3.16 Removing and installing anti-roll bar .....	54
<b>4 Assembly overview: wheel bearing</b> .....	<b>60</b>
4.1 Removing and installing wheel bearing unit .....	62
4.2 Removing and installing wheel bearing housing .....	63
<b>5 Assembly overview: suspension strut</b> .....	<b>69</b>
5.1 Removing and installing suspension strut .....	71
5.2 Repairing suspension strut .....	77
<b>6 Removing and installing drive shafts</b> .....	<b>80</b>
6.1 Loosening and tightening drive shaft hexagon bolt .....	80
6.2 Loosening and tightening twelve-point head bolt, with ribbing, securing drive shaft .....	81
6.3 Loosening and tightening twelve-point head bolt, without ribbing, securing drive shaft .....	82
6.4 Removing and installing drive shaft with constant velocity joint .....	84
6.5 Removing and installing drive shafts with triple roller joint AAR2600i and AAR3300i (pushed on) .....	88
6.6 Removing and installing drive shafts with triple roller joint AAR3300i (bolted on) .....	92
<b>7 Repairing drive shaft - overview of drive shafts</b> .....	<b>97</b>
7.1 Heat shields for drive shafts .....	98
<b>8 Assembly overview: drive shaft with VL100 constant velocity joint</b> .....	<b>99</b>
8.1 Dismantling and assembling drive shaft with VL100 constant velocity joint .....	101
8.2 Checking outer constant velocity joint .....	105
8.3 Checking inner constant velocity joint .....	106
<b>9 Assembly overview: drive shaft with VL107 constant velocity joint</b> .....	<b>109</b>
9.1 Dismantling and assembling drive shaft with VL107 constant velocity joint .....	111
<b>10 Assembly overview: drive shaft with triple roller joint AAR2600i</b> .....	<b>116</b>
10.1 Dismantling and assembling drive shaft with triple roller joint AAR2600i .....	118



11	<b>Assembly overview: drive shaft with triple roller joint AAR3300i</b>	123
11.1	Dismantling and assembling drive shaft with triple roller joint AAR3300i	125
12	<b>Assembly overview: drive shaft with triple roller joint AAR3300i for 6-speed automatic gearbox 09M, four-wheel drive</b>	130
12.1	Dismantling and assembling drive shaft with triple roller joint AAR3300i for 6-speed automatic gearbox 09M, four-wheel drive	132
<b>42</b>	<b>- Rear suspension</b>	<b>137</b>
1	<b>Appraisal of accident vehicles</b>	<b>137</b>
2	<b>Repairing rear suspension (front-wheel drive)</b>	<b>138</b>
2.1	Overview - rear axle	138
2.2	Rear axle in unladen position	140
3	<b>Assembly overview: subframe (front-wheel drive)</b>	<b>143</b>
3.1	Removing and installing rear axle	143
3.2	Repairing subframe	147
4	<b>Assembly overview: transverse link, track rod (front-wheel drive)</b>	<b>152</b>
4.1	Assembly overview: rear left vehicle level sender G76 , front-wheel drive up to model year 2007	155
4.2	Assembly overview: rear left vehicle level sender G76 , front-wheel drive from model year 2008	156
4.3	Removing and installing rear left vehicle level sender G76 up to model year 2007	156
4.4	Removing and installing rear left vehicle level sender G76 from model year 2008	157
4.5	Removing and installing upper transverse link	158
4.6	Removing and installing lower transverse link	160
4.7	Removing and installing track rod	162
5	<b>Allocation of track rods to trailing arms (front- and four-wheel drive)</b>	<b>166</b>
6	<b>Assembly overview: wheel bearing housing, trailing arm (front-wheel drive)</b>	<b>168</b>
6.1	Removing and installing wheel bearing housing	169
6.2	Renewing bonded rubber bush for wheel bearing housing	173
6.3	Removing and installing wheel bearing/wheel hub unit	176
6.4	Removing and installing trailing arm with mounting bracket	180
6.5	Repairing trailing arm	183
7	<b>Assembly overview: shock absorber, coil spring (front-wheel drive)</b>	<b>186</b>
7.1	Converting to Nivomat	187
7.2	Converting to heavy-duty running gear	187
7.3	Removing and installing coil spring	187
7.4	Removing and installing shock absorbers	188
7.5	Repairing shock absorber	190
8	<b>Assembly overview: anti-roll bar (front-wheel drive)</b>	<b>193</b>
8.1	Removing and installing anti-roll bar	193
9	<b>Repairing rear suspension (four-wheel drive)</b>	<b>196</b>
9.1	Overview - rear axle	196
9.2	Rear axle in unladen position	198
10	<b>Assembly overview: subframe, final drive (four-wheel drive)</b>	<b>201</b>
10.1	Preparatory work for when installing a steel subframe	202
10.2	Removing and installing rear axle	203
10.3	Repairing aluminium subframe	208
10.4	Repairing steel subframe	212
11	<b>Assembly overview: transverse link, track rod (four-wheel drive)</b>	<b>220</b>
11.1	Rear left vehicle level sender G76 , four-wheel drive up to model year 2007	223
11.2	Rear left vehicle level sender G76 , four-wheel drive from model year 2008	224
11.3	Removing and installing rear left vehicle level sender G76 , four-wheel drive up to model year 2007	224
11.4	Removing and installing rear left vehicle level sender G76 , four-wheel drive from model year 2008	225



11.5	Removing and installing upper transverse link	226
11.6	Removing and installing lower transverse link	228
11.7	Removing and installing track rod	230
<b>12</b>	<b>Assembly overview: wheel bearing housing, trailing arm (four-wheel drive)</b>	<b>233</b>
12.1	Removing and installing wheel bearing housing	235
12.2	Renewing bonded rubber bush for wheel bearing housing	238
12.3	Removing and installing wheel bearing/wheel hub unit	241
12.4	Removing and installing trailing arm with mounting bracket	242
12.5	Repairing trailing arm	246
<b>13</b>	<b>Assembly overview: shock absorber, coil spring (four-wheel drive)</b>	<b>250</b>
13.1	Converting to Nivomat	251
13.2	Converting to heavy-duty running gear	251
13.3	Removing and installing coil spring	251
13.4	Removing and installing shock absorbers	252
13.5	Repairing shock absorber	254
<b>14</b>	<b>Assembly overview: anti-roll bar (four-wheel drive)</b>	<b>257</b>
14.1	Removing and installing anti-roll bar	257
<b>15</b>	<b>Assembly overview: drive shaft</b>	<b>261</b>
15.1	Loosening and tightening drive shaft hexagon bolt	263
15.2	Loosening and tightening twelve-point head bolt, with ribbing, securing drive shaft	264
15.3	Loosening and tightening twelve-point head bolt, without ribbing, securing drive shaft	265
15.4	Removing and installing drive shaft	267
15.5	Dismantling and assembling drive shaft	270
15.6	Checking outer constant velocity joint	275
15.7	Checking inner constant velocity joint	276
<b>43</b>	<b>Self-levelling suspension</b>	<b>278</b>
<b>1</b>	<b>Appraisal of accident vehicles</b>	<b>278</b>
<b>2</b>	<b>Components of adaptive chassis control DCC and fitting locations</b>	<b>279</b>
2.1	Shock absorber damping adjustment button E387	280
2.2	Removing and installing front left body acceleration sender G341	280
2.3	Removing and installing front right body acceleration sender G342	281
2.4	Renewing bracket for front left/right body acceleration sender G341/G342	282
2.5	Assembly overview: front left/right vehicle level sender G78/G289 for adaptive chassis control DCC	284
2.6	Removing and installing front left/right vehicle level sender G78/G289	285
2.7	Assembly overview: rear left vehicle level sender G76 for adaptive chassis control DCC, front-wheel drive	286
2.8	Removing and installing rear left vehicle level sender G76 for adaptive chassis control DCC, front-wheel drive	287
2.9	Assembly overview: rear left vehicle level sender G76 for adaptive chassis control DCC, four-wheel drive	288
2.10	Removing and installing rear left vehicle level sender G76 for adaptive chassis control DCC, four-wheel drive	289
2.11	Removing and installing electronically controlled damping control unit J250	290
2.12	Basic setting of adaptive chassis control DCC	290
2.13	Cable routing left front axle	291
2.14	Cable routing right front axle	292
2.15	Cable routing rear axle	293
<b>3</b>	<b>Assembly overview: suspension strut for adaptive chassis control DCC</b>	<b>294</b>
3.1	Removing and installing suspension strut for adaptive chassis control DCC	296
<b>4</b>	<b>Assembly overview: shock absorber for adaptive chassis control DCC (front-wheel drive)</b>	<b>304</b>
4.1	Removing and installing rear body acceleration sender G343 (front-wheel drive)	305
4.2	Removing and installing shock absorber for adaptive chassis control DCC (front-wheel drive)	306



4.3	Repairing shock absorber for adaptive chassis control DCC (front-wheel drive)	309
<b>5</b>	<b>Assembly overview: shock absorber for adaptive chassis control DCC (four-wheel drive)</b>	<b>311</b>
5.1	Removing and installing rear body acceleration sender G343 (four-wheel drive)	312
5.2	Removing and installing shock absorber for adaptive chassis control DCC (four-wheel drive)	313
5.3	Repairing shock absorber for adaptive chassis control DCC (four-wheel drive)	316
<b>44</b>	<b>Wheels, tyres, vehicle geometry</b>	<b>318</b>
<b>1</b>	<b>Appraisal of accident vehicles</b>	<b>318</b>
<b>2</b>	<b>Torque settings for wheels</b>	<b>319</b>
<b>3</b>	<b>Position of anti-theft wheel bolts for steel wheels</b>	<b>320</b>
<b>4</b>	<b>Fitting wheel and tyre</b>	<b>321</b>
4.1	General information	321
4.2	Fittings instructions	321
<b>5</b>	<b>Removing and fitting tyres (wheels with tyre pressure monitoring)</b>	<b>323</b>
5.1	Notes on safety and conditions for removing and fitting tyres (wheels with tyre pressure monitoring system)	323
5.2	Wheel change	323
5.3	Pressing tyre off wheel rim	324
5.4	Removing tyre from wheel	325
5.5	Fitting tyre to wheel rim	325
<b>6</b>	<b>Removing and fitting tyres with run-flat properties to wheel rims</b>	<b>327</b>
6.1	Safety information	327
6.2	Fittings instructions	327
6.3	Pressing tyre off wheel rim	328
6.4	Removing tyre from wheel	329
6.5	Fitting tyre to wheel rim	330
<b>7</b>	<b>Self-sealing tyres "ContiSeal"</b>	<b>333</b>
7.1	Explanation for mobility tyres	333
7.2	Handling mobility tyres	334
<b>8</b>	<b>Tyre pressure monitor display</b>	<b>335</b>
<b>9</b>	<b>Tyre pressure monitoring system (TPMS)</b>	<b>337</b>
9.1	Button behaviour	337
9.2	Assembly overview: tyre pressure sensor	338
9.3	Removing and installing tyre pressure sensor	339
<b>10</b>	<b>Vehicle alignment check</b>	<b>341</b>
10.1	General information	341
10.2	Conditions for testing	343
10.3	Test preparations	343
10.4	Wheel alignment specifications	344
10.5	Overview - wheel alignment procedure	347
10.6	Correcting front axle camber	348
10.7	Adjusting camber on rear axle	349
10.8	Adjusting toe at rear axle	351
10.9	Adjusting front axle toe	351
10.10	Basic setting of steering angle sensor G85	352
10.11	Vehicle data sticker	352
<b>11</b>	<b>Adaptive Cruise Control (ACC)</b>	<b>354</b>
11.1	General information on ACC calibration	354
11.2	ACC calibration during vehicle alignment	354
11.3	ACC calibration without prior vehicle alignment	356
<b>12</b>	<b>Lane departure warning</b>	<b>359</b>
12.1	General information about lane departure warning	359



12.2	Calibrating the lane departure warning	360
<b>13</b>	<b>Wheels, tyres</b>	<b>367</b>
13.1	Models with breakdown set	367
13.2	Tyre sealant	367
13.3	Removing a tyre	367
13.4	Fitting a new tyre	368
13.5	Tyre sealant disposal	368
<b>14</b>	<b>Instructions for changing or fitting wheels</b>	<b>369</b>
14.1	Fitting wheels	370
<b>15</b>	<b>Protecting wheel centring seat against corrosion</b>	<b>371</b>
<b>16</b>	<b>Vibration due to wheels/tyres - causes and rectification</b>	<b>372</b>
16.1	Causes of rough running	372
16.2	Balancing wheels	372
16.3	Conducting a road test before balancing wheels	372
16.4	Balancing wheels on stationary wheel balancing machine	373
16.5	Vibration control system VAS 6230 A	376
16.6	Finish balancer	376
16.7	Radial and lateral runout of wheels and tyres	377
16.8	Checking radial and lateral runout on wheels and tyres with tyre gauge V.A.G 1435	377
16.9	Checking radial and lateral run-out on wheel rim	378
16.10	Matching	379
16.11	Flat spots caused by storage or handling	380
<b>48</b>	<b>Steering</b>	<b>382</b>
<b>1</b>	<b>Appraisal of accident vehicles</b>	<b>382</b>
<b>2</b>	<b>General repair instructions</b>	<b>383</b>
2.1	Steering rack	383
2.2	Gaskets and seals	383
2.3	Nuts and bolts	383
2.4	Electrical components	384
2.5	Guided Fault Finding, vehicle self-diagnosis and test instruments	384
<b>3</b>	<b>Assembly overview: steering column</b>	<b>385</b>
3.1	Removing and installing steering wheel	386
3.2	Removing and installing steering column	388
3.3	Basic setting for steering angle sensor G85 steering angle sender must be checked after the following repair work:	393
3.4	Handling and transporting steering column	393
3.5	Checking steering column for damage	394
3.6	Removing and installing electronic steering column lock control unit J764	394
3.7	Removing and installing mounting bracket	396
3.8	Removing and installing strut	398
<b>4</b>	<b>Electromechanical steering rack up to model year 2008</b>	<b>400</b>
4.1	Assembly overview - electromechanical steering rack, left-hand drive vehicle (2nd generation) up to model year 2008	400
4.2	Assembly overview - electromechanical steering rack, right-hand drive vehicle (2nd generation) up to model year 2008	402
4.3	Removing and installing steering rack, left-hand drive vehicle (2nd generation) up to model year 2008	404
4.4	Removing and installing steering rack, right-hand drive vehicle (2nd generation) up to model year 2008	412
<b>5</b>	<b>Electromechanical steering rack from model year 2009</b>	<b>422</b>
5.1	Assembly overview - electromechanical steering rack, left-hand drive vehicle (APA) up to model year 2009	422
5.2	Assembly overview - electromechanical steering rack, right-hand drive vehicle (3rd generation) from model year 2009	424



5.3	Removing and installing steering rack, left-hand drive vehicle (APA) from model year 2009	425
5.4	Removing and installing steering rack, 3rd generation, RHD vehicles, as of model year 2009	433
<b>6</b>	<b>Differentiating between 2nd and 3rd generation steering racks</b>	<b>442</b>
<b>7</b>	<b>Repairing electromechanical steering rack, left-hand drive vehicle (2nd generation) up to model year 2008</b>	<b>443</b>
7.1	Removing and installing bellows	443
7.2	Removing and installing track rod	445
<b>8</b>	<b>Repairing electromechanical steering rack, left-hand drive vehicle (APA) from model year 2009</b>	<b>449</b>
8.1	Assembly overview: electromechanical steering rack, left-hand drive vehicle	449
8.2	Renewing bonded rubber bushes for power-assisted steering rack	450
8.3	Removing and installing track rod	452
8.4	Removing and installing track rod ball joint	456
8.5	Removing and installing bellows	457
8.6	Checking play, security and boots of track rod ends	460
8.7	Allocation of track rod ball joints	460
<b>9</b>	<b>Repairing electromechanical steering rack, right-hand drive vehicles</b>	<b>461</b>
9.1	Assembly overview: electromechanical steering rack, RHD vehicle	461
9.2	Removing and installing track rod	462
9.3	Removing and installing track rod ball joint	465
9.4	Removing and installing bellows	466
9.5	Checking play, security and boots of track rod ends	469
9.6	Allocation of track rod ball joints	469