



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Fundamentals for batteries	1
1.2 Types of battery	1
1.3 Warning notices and safety regulations	1
1.4 Battery load test	1
2 Checking battery	2
3 Charging battery	3
4 Disconnecting and connecting battery	4
4.1 Disconnecting and connecting battery, vehicles with battery in engine compartment	4
4.2 Disconnecting and reconnecting battery, vehicles with additional battery in luggage compartment	6
4.3 Disconnecting and reconnecting battery, vehicles with battery in luggage compartment	9
5 Removing and installing battery	11
5.1 Petrol engine vehicles with battery installed in engine compartment	11
5.2 Diesel engine vehicles with battery installed in engine compartment	12
5.3 Vehicles with an additional battery	18
5.4 Vehicles with battery in luggage compartment	20
6 Specified torques: battery	21
6.1 Specified torques: battery in engine compartment	21
6.2 Specified torques: additional battery/battery in luggage compartment	21
7 Pyrotechnical battery isolator	22
7.1 Overview of fitting locations	22
7.2 Safety precautions when working on pyrotechnical battery isolator	23
7.3 Disposal of pyrotechnical battery isolation units	23
7.4 Removing and installing pyrotechnical battery isolator	23
8 Specified torques: pyrotechnic battery isolator	26
8.1 Specified torques: main fuse box	26
9 Jump start point with suppression filter C24	27
9.1 Overview of fitting locations	27
9.2 Removing and installing jump start point with suppression filter C24	27
10 Specified torques: jump start point	29
11 Starter	30
11.1 Checking starter B	30
11.2 Removing and installing starter, automatic gearbox	30
11.3 Removing and installing starter, dual clutch gearbox (DSG)	38
11.4 Removing and installing starter, manual gearbox	45
12 Specified torques: starter	65
13 Starter, vehicles with 1.8 l TSI engine and manual gearbox	66
13.1 Assembly overview	66
13.2 Removing and installing starter, vehicles with 1.8 l TSI engine and manual gearbox	67
14 Alternator	71
14.1 Securing B+ (battery positive) wire to alternator	71
14.2 Checking poly V-belt	71
14.3 Checking alternator C	72
14.4 Alternator, 1.4 l TSI engine	72
14.5 Alternator, 1.8 l TSI engine	77
14.6 Alternator, 1.6 l injection engine	80
14.7 Alternator, 1.6 l FSI engine	86
14.8 Alternator, 2.0 l FSI engine	91
14.9 Alternator, 2.0 l FSI turbocharged engine	97



14.10	Alternator, 3.6 l FSI engine and 3.2 l injection engine	103
14.11	Alternator, 1.6 l TDI engine	108
14.12	Alternator, 1.9 l and 2.0 l TDI engine (2 valves per cylinder)	112
14.13	Alternator, 2.0 l TDI engine (4 valves per cylinder)	118
14.14	Alternator, 2.0 l TDI common rail injection engine	124
14.15	Removing and installing poly V-belt pulley on alternator	128
14.16	Voltage regulator for alternator	132
15	Specified torques: alternator	135
15.1	General specified torques for all vehicles	135
15.2	1.6 l injection engine and 2.0 l FSI engine	135
15.3	2.0 l FSI turbocharged engine	136
15.4	3.6 l FSI engine and 3.2 l injection engine	137
15.5	1.9 l and 2.0 l TDI engine	138
16	Cruise control system (CCS)	140
16.1	Activating and deactivating cruise control system (CCS)	140
17	Adaptive cruise control (ACC)	141
17.1	Assembly overview	141
17.2	Removing and installing adaptive cruise control button E357	142
17.3	Removing and installing adaptive cruise control unit J428	142
17.4	Calibrating adaptive cruise control sensor G550	143
17.5	Initialising adaptive cruise control	143
90	Gauges, instruments	145
1	Dash panel insert	145
1.1	Adapting/renewing dash panel insert	145
1.2	Removing and installing dash panel insert	146
1.3	Dash panel insert final control diagnosis	146
1.4	Description of back of dash panel insert	147
1.5	Pin assignment of connectors on dash panel insert	147
1.6	Warning lamp symbols in dash panel insert	148
2	Service interval display	150
2.1	Resetting service interval display	150
92	Windscreen wash/wipe system	151
1	Windscreen wiper system	151
1.1	Deactivating APP function of wiper motor	151
1.2	Removing and installing windscreen wiper system	152
1.3	Removing and installing wiper arms	156
1.4	Adjusting wiper blade park position	157
1.5	Removing and installing aerodynamic wipers	158
1.6	Removing and installing rain and light sensor G397	160
2	Windscreen washer system	163
2.1	Assembly overview - windscreen washer system	163
2.2	Removing and installing washer fluid reservoir	164
2.3	Removing and installing washer pump V5 or windscreen and rear window washer pump V59	169
2.4	Removing and installing windscreen washer fluid level sender G33	170
2.5	Removing and installing windscreen washer system spray jets	170
2.6	Adjusting windscreen washer system spray jets	171
3	Rear window wiper system	172
3.1	Assembly overview - rear window wiper system	172
3.2	Removing rear window wiper	173
3.3	Adjusting rear window wiper park position	175
3.4	Removing and installing aerodynamic wipers	175
4	Rear window washer system	177



4.1	Assembly overview - rear window washer system	177
4.2	Renewing spray jet	178
4.3	Adjusting spray jet	178
5	Headlight washer system	179
5.1	Assembly overview - headlight washer system	179
5.2	Removing and installing headlight washer system pump V11	181
5.3	Removing and installing pop-up cylinder with spray jet	181
5.4	Removing and installing spray jet retainer	182
5.5	Adjusting spray jets	182
5.6	Bleeding headlight washer system	183
5.7	Adapting headlight washer system	183
6	Washer fluid line hose couplings	184
6.1	Headlight washer system	184
7	Hose repair	185
8	Specified torques: window wash/wipe system	186
8.1	Specified torques for windscreen wash/wipe system	186
8.2	Specified torques for rear window wash/wipe system	186
8.3	Specified torques for headlight washer system	186
94	Lights, bulbs, switches - exterior	187
1	Headlights	187
1.1	Assembly overview - headlight	187
1.2	Removing and installing headlight	189
1.3	Adjusting headlight installation position	191
1.4	Renewing headlight bulbs, headlight manufacturer Hella	192
1.5	Renewing headlight bulbs, headlight manufacturer Valeo	200
1.6	Removing and installing headlight range control motor (headlight manufacturer Hella)	208
1.7	Removing and installing headlight range control motor (headlight manufacturer Valeo)	209
1.8	Repairing headlight retaining tabs	212
1.9	Converting headlights to drive on the left or the right (manufactured by Hella)	216
1.10	Converting headlights to drive on the left or the right (manufactured by Valeo)	219
1.11	Adjusting headlights	222
2	Headlights with gas discharge bulb and cornering light	223
2.1	Assembly overview - headlight with gas discharge bulb and cornering lights	224
2.2	Removing and installing headlight	225
2.3	Adjusting headlight installation position	225
2.4	Renewing bulbs of headlight with gas discharging bulb and cornering light	226
2.5	Headlight range control motor	234
2.6	Dynamic cornering light control motor	236
2.7	Swivel module position sensor	236
2.8	Dipped beam screen	236
2.9	Power output module for headlight	237
2.10	Removing and installing gas discharge bulb control unit	239
2.11	Cornering light and headlight range control unit J745	240
2.12	Vehicle level sender	241
2.13	Repairing headlight retaining tabs	242
2.14	Converting headlights for use when driving on the left or right	242
2.15	Adjusting headlights	245
3	Fog lights	246
3.1	Assembly overview - fog lights	246
3.2	Removing and installing fog light	247
3.3	Removing and installing fog light bulb	247
3.4	Checking fog lights	248
3.5	Adjusting fog lights	248
4	Front turn signals	249



4.1	Removing and installing front turn signal	249
4.2	Removing and installing turn signal bulb	250
4.3	Checking front turn signal	251
5	Bulb for mirror turn signal and entry light in exterior mirror	252
5.1	Turn signal repeater bulb	252
5.2	Entry light in exterior mirror	253
6	Tail lights	256
6.1	Tail light in side panel (saloon)	256
6.2	Tail light cluster in rear lid (saloon)	259
6.3	Tail light cluster in side panel (estate)	262
6.4	Tail light in rear lid (Variant)	266
6.5	Tail lights for Canada and USA	269
7	Number plate light	270
7.1	Removing and installing bolted number plate light X (saloon)	270
7.2	Removing and installing bolted number plate light X (estate)	271
7.3	Clipped number plate light X	271
7.4	Checking number plate light X	272
8	Additional brake lights	273
8.1	Tools	273
8.2	Removing and installing high-level brake light bulb M25 (saloon)	274
8.3	Removing and installing high-level brake light bulb M25 (Variant)	274
8.4	Removing and installing high-level brake light bulb M25 (Variant R36)	275
8.5	Checking high-level brake light bulb M25	276
9	Steering column switch up to 10/09	277
9.1	Assembly overview - steering column switch	277
9.2	Removing and installing steering column switch	278
9.3	Steering column electronics control unit J527	279
9.4	Airbag coil connector and return ring with slip ring F138	282
9.5	Segment sender for steering angle sensor	283
9.6	Steering column combination switch E595	283
10	Steering column switch, vehicles from 11/09	286
10.1	General description	286
10.2	Assembly overview - steering column switch	286
10.3	Removal and installation sequence of components of steering column switch	287
10.4	Steering column electronics control unit J527	288
10.5	Steering column combination switch E595	292
10.6	Steering column switch carrier	293
11	Ignition/starter switch and lock cylinder.	298
11.1	Ignition/starter switch	298
11.2	Lock cylinder	298
12	Parking aid	299
12.1	General description	299
12.2	Assembly overview - parking aid	300
12.3	Parking aid control unit J446 and park assist steering control unit J791	301
12.4	Front parking aid senders	303
12.5	Rear parking aid senders	304
12.6	Parking aid warning buzzer	305
12.7	Parking aid button E266	306
12.8	Bonding sender retainer for parking aid and park assist steering in cases of repair	306
13	Park assist steering (PAS)	311
13.1	General description	311
13.2	Assembly overview of park assist steering	312
13.3	Park assist steering control unit J791	314
13.4	Front parking aid sender and park assist steering sender	314



13.5	Park assist steering button E581	317
13.6	Front parking aid warning buzzer H22	317
13.7	Rear parking aid warning buzzer H15 (vehicles with park assist steering)	319
14	Entry and start authorisation	320
14.1	General description	320
14.2	Emergency starting when communication between ID sender and control unit is defective	321
14.3	Electronic ignition lock D9	321
14.4	Convenience system central control unit J393	322
14.5	Entry and start authorisation aerials and sensors	323
14.6	Checking entry and start system aerials and sensors	331
14.7	Adapting entry and start authorisation functions	335
15	Specified torques: lights, bulbs, switches - exterior	336
15.1	Specified torques: headlights	336
15.2	Specified torques: fog lights	336
15.3	Specified torques: tail light cluster in side panel (saloon)	336
15.4	Specified torques: tail light cluster in side panel (estate)	336
15.5	Specified torques: tail light cluster in rear lid (saloon)	336
15.6	Specified torques: tail light cluster in rear lid (estate)	336
15.7	Specified torques: steering column switch unit	336
16	Reversing camera system	337
16.1	General description	337
16.2	Assembly overview - reversing camera system	337
16.3	Removing and installing reversing camera	338
16.4	Reversing camera system control unit	341
16.5	Calibrating reversing camera system	342
16.6	Renewing video cable	347
96	Lights, bulbs, switches - interior	349
1	Interior lights and switches	349
1.1	Removing and installing interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360	349
1.2	Footwell lights	350
2	Lights and switches in engine compartment	352
2.1	Removing and installing bonnet contact switch F266	352
3	Lights and switches in dash panel	353
3.1	Removing and installing light switch E1	353
3.2	Removing and installing headlight range control regulator E102 and switch and instrument illumination regulator E20	354
3.3	Removing and installing electromechanical parking brake button E538	354
3.4	Removing and installing front passenger side airbag deactivated warning lamp K145	356
3.5	Removing and installing glove compartment light W6	357
3.6	Removing and installing glove compartment light switch E26	359
3.7	Removing and installing hazard warning light switch E3	359
4	Lights and switches in front doors	361
4.1	Removing and installing driver side switch element	361
4.2	Removing and installing driver side interior locking button for central locking system E308	362
4.3	Removing and installing mirror adjustment switch E43	363
4.4	Removing and installing remote release button for fuel filler flap and rear lid E233	364
4.5	Removing and installing key-operated switch to block release of rear lid remote E232	365
4.6	Central locking SAFELOCK function warning lamp K133	366
4.7	Removing and installing window regulator switch in front passenger door E107	367
4.8	Front left entry light W31 and front right entry light W32	367
4.9	Components - front door locks	369



5	Lights and switches in rear doors	371
5.1	Removing and installing rear window regulator switch E52 and E54	371
5.2	Rear left entry light W33 and rear right entry light W34	372
5.3	Components - rear door locks	372
6	Lights and switches in luggage compartment	373
6.1	Luggage compartment light W3	373
6.2	Rear lid lock unit F256	374
7	Lights and switches in roof trim	375
7.1	Front interior light	375
7.2	Rear interior and reading lights	378
7.3	Illuminated vanity mirrors W20 and W14 with contact switches for vanity mirrors F147 and F148	380
7.4	Garage door opener	381
7.5	Automatic anti-dazzle interior mirror Y7	381
8	Lights and switches in centre console	382
8.1	Removing and installing switches in centre console	382
8.2	Removing and installing front ashtray illumination bulb	383
8.3	Removing and installing cigarette lighter U1	383
8.4	Removing and installing heated rear seat switches E128 and E129 with regulator	383
8.5	Removing and installing storage compartment illumination bulb L120	384
8.6	Removing and installing DC/AC converter with socket, 12 V-230 V U13	386
9	Horn	389
9.1	Removing and installing treble horn H2 and bass horn H7	389
9.2	Checking treble horn H2 and bass horn H7	389
9.3	Horn plate H	389
10	Immobiliser	391
10.1	Immobiliser control unit J362	392
10.2	Immobiliser reader unit D1	392
10.3	Electronic ignition lock D9	392
10.4	Electronic steering column lock (ESL) control unit J764	394
10.5	Ignition key	396
10.6	Online system test	398
11	Anti-theft alarm system (ATAS)	400
11.1	Assembly overview - anti-theft alarm (ATA)	401
11.2	Activating and deactivating anti-theft alarm	402
11.3	Interior monitor deactivation switch E267 and deactivation button for vehicle inclination sender E360	403
11.4	Interior monitoring sensor G273	403
11.5	Interior monitor send and receive module 1 G303	403
11.6	Vehicle inclination sender G384	405
11.7	Central locking and anti-theft alarm system aerial R47	405
11.8	Adapting alarm delay on opening driver door	406
11.9	Alarm horn H12	406
12	Taxi equipment	409
12.1	Onboard supply control unit J519 for special vehicles	409
12.2	Special vehicle control unit J608	409
13	Specified torques: lights, bulbs and switches - interior	411
13.1	Torque settings: alarm horn H12	411
13.2	Specified torques: treble horn H2	411
13.3	Specified torques: bass horn H7	411
97 - Wiring		412
1	Vehicle diagnosis, testing and information systems	412
2	Fuse holder	413



2.1	Removing and installing fuse holder	413
3	Relay carriers	415
3.1	Removing and installing relay carrier on left of dash panel	415
3.2	Removing and installing onboard supply control unit J519	417
4	Electronics boxes	419
4.1	Removing and installing electronics box on left side of engine compartment	419
5	Main fuse box	423
5.1	Removing and installing main fuse holder	423
6	Control units	425
6.1	On-board supply control unit J519	425
6.2	Data bus diagnostic interface J533	430
6.3	Convenience system central control unit J393	433
6.4	Driver door control unit J386	439
6.5	Front passenger door control unit J387	440
6.6	Rear left door control unit J388	442
6.7	Rear right door control unit J389	443
6.8	Trailer detector control unit J345	445
6.9	Special vehicle control unit J608	447
6.10	Electronic steering column lock (ESL) control unit J764	450
7	Specified torques: wiring	451
7.1	Specified torques: fuse holder	451
7.2	Specified torques: electronics box on left side of engine compartment	451
7.3	Specified torques: convenience system central control unit J393	451
7.4	Specified torques: special vehicle control unit J608	451
8	Repairs to wiring harnesses and connectors	452