



## Contents

<b>91 - Communication</b> .....	<b>1</b>
<b>1 Communication systems</b> .....	<b>1</b>
1.1 Fault finding .....	1
<b>2 Radio units and radio navigation systems in general</b> .....	<b>2</b>
2.1 Removing and installing radio units and radio navigation systems .....	2
2.2 Adapting radio components .....	6
2.3 Adapting radio navigation system components .....	7
<b>3</b> .....	<b>8</b>
3.1 General notes .....	8
3.2 Overview of radio system „RCD 300“ .....	9
3.3 Overview of connectors on radio unit „RCD 300“ .....	10
3.4 Anti-theft coding .....	12
<b>4 Radio system „RCD 310“</b> .....	<b>14</b>
4.1 General notes .....	14
4.2 Overview of radio system „RCD 310“ .....	15
4.3 Overview of connectors on radio unit „RCD 310“ .....	16
4.4 Anti-theft coding .....	18
<b>5</b> .....	<b>21</b>
5.1 General description .....	21
5.2 Overview of radio system „RCD 500“ .....	22
5.3 Activating transport protection device of CD changer in „RCD 500“ .....	23
5.4 Overview of connectors on radio unit „RCD 500“ .....	24
5.5 Anti-theft coding .....	25
<b>6 Radio system „RCD 510“</b> .....	<b>27</b>
6.1 General notes .....	27
6.2 Overview of radio system „RCD 510“ .....	28
6.3 Activating/deactivating transport lock for CD changer in „RCD 510“ .....	29
6.4 Overview of connectors on radio „RCD 510“ .....	30
6.5 Anti-theft coding .....	33
<b>7</b> .....	<b>37</b>
7.1 General description .....	37
7.2 Overview of radio system „Sound System“ .....	37
7.3 Overview of connectors on radio unit „Sound System“ .....	39
7.4 Anti-theft coding .....	40
<b>8</b> .....	<b>42</b>
8.1 General description .....	42
8.2 Overview of radio system „Premium Sound System“ .....	43
8.3 Overview of connectors on radio unit „Premium Sound System“ .....	44
8.4 Anti-theft coding .....	46
<b>9</b> .....	<b>48</b>
9.1 General notes .....	48
9.2 Removing and installing radio navigation system .....	49
9.3 Overview of connectors on radio navigation system .....	51
9.4 Anti-theft coding .....	53
9.5 Fault finding on radio navigation system .....	55
<b>10</b> .....	<b>59</b>
10.1 General description .....	59
10.2 Overview of radio navigation system „RNS 300“ .....	60
10.3 Overview of connectors on radio navigation system „RNS 300“ .....	62
10.4 Anti-theft coding .....	64
<b>11</b> .....	<b>66</b>



11.1	General notes	66
11.2	Overview of radio navigation system „RNS 310“	67
11.3	Overview of connectors on radio navigation system „RNS 310“	69
11.4	Anti-theft coding	71
<b>12</b>		<b>76</b>
12.1	General description	77
12.2	Overview of „RNS MFD 2“	78
12.3	Overview of connectors on „RNS MFD 2“	80
12.4	Anti-theft coding	84
<b>13</b>		<b>85</b>
13.1	General description	86
13.2	Overview of radio navigation system „RNS MFD 2 DVD“	86
13.3	Overview of connectors on radio navigation system „RNS MFD 2 DVD“	88
13.4	Anti-theft coding	92
<b>14</b>		<b>94</b>
14.1	General notes	94
14.2	Overview of radio navigation system „RNS 510“	95
14.3	Overview of connectors on radio navigation system „RNS 510“	96
14.4	Anti-theft coding	100
<b>15</b>	<b>Multimedia system RSE (Rear Seat Entertainment)</b>	<b>103</b>
15.1	General description	103
15.2	Overview of multimedia system with DVD player	104
15.3	Removing and installing DVD player	105
15.4	Removing and installing multimedia system control unit	107
15.5	Removing and installing multimedia system display unit	112
15.6	Removing and installing additional connections unit for multimedia system	115
15.7	Fuse for RSE system	116
15.8	Changing remote control batteries	116
15.9	Special features of multimedia system RNS on vehicles 11.07 ►	117
<b>16</b>	<b>Satellite digital radio tuner for vehicles for USA and Canada</b>	<b>118</b>
16.1	General notes	118
16.2	Fault finding	118
16.3	Removing and installing satellite digital radio tuner	118
<b>17</b>	<b>CD changer</b>	<b>120</b>
17.1	Removing and installing CD changer	120
<b>18</b>	<b>USB connection for USB sticks and MP3 player</b>	<b>125</b>
18.1	General notes	125
18.2	Removing and installing storage compartment with USB connection	127
18.3	Overview of connectors on USB connection	130
18.4	Fault finding procedure	131
<b>19</b>	<b>„Apple“ „iPod player“ holder</b>	<b>132</b>
19.1	General notes	132
19.2	Fault finding	132
19.3	Overview of the „iPod player“ holder	132
19.4	Removing and installing holder adapter	133
19.5	Removing and installing „iPod player“ holder	134
19.6	Overview of connectors on „iPod player“ holder	135
19.7	Fault finding procedure	136
<b>20</b>	<b>Connection for external audio sources</b>	<b>137</b>
20.1	Connection for external audio sources	137
20.2	Removing and installing connection for external audio sources R199	137
20.3	Contact assignment on connection for external audio sources R199	138
<b>21</b>	<b>Multimedia system control unit</b>	<b>139</b>
21.1	General notes	139



21.2	Overview of „multimedia system control unit“	139
21.3	Removing and installing multimedia control unit	140
<b>22</b>	<b>Sound system amplifier</b>	<b>142</b>
22.1	General description	142
22.2	Removing and installing amplifier	142
22.3	Pin assignments on connectors of amplifier	144
<b>23</b>	<b>Loudspeaker systems</b>	<b>146</b>
23.1	Removing and installing front bass and mid-range loudspeakers	146
23.2	Removing and installing rear bass loudspeakers	147
23.3	Removing and installing front treble loudspeakers	148
23.4	Removing and installing rear treble loudspeakers	149
<b>24</b>	<b>Telephone system</b>	<b>151</b>
24.1	General notes	151
24.2	Telephone system / universal preparation for mobile telephone	151
24.3	Changing mobile phone cradle from old to new dash panel	156
24.4	Telephone system / premium universal preparation for mobile telephone with Bluetooth technology	158
24.5	Removing and installing telephone system microphone	163
<b>25</b>	<b>Aerial systems</b>	<b>165</b>
25.1	Aerial system, saloon	165
25.2	Aerial system for saloon in USA and Canada versions	171
25.3	Aerial system, Variant	175
25.4	Aerial system for Variant in USA and Canada versions	181
25.5	Removing and installing saloon aerial modules	185
25.6	Removing and installing Variant aerial amplifier	187
25.7	Removing and installing roof aerial	188
25.8	Removing and installing aerial selection control unit	189
25.9	Renewal of aerial wiring	190
<b>26</b>	<b>Multifunction steering wheel</b>	<b>191</b>
26.1	General notes	191
26.2	Removing and installing steering wheel operating unit	191
26.3	Removing and installing multifunction steering wheel control unit	192
26.4	Adapting multifunction steering wheel components	193
<b>27</b>	<b>Notes on operating mobile telephones and two-way radios</b>	<b>194</b>
27.1	General notes	194
27.2	Notes on performing repair work	195
27.3	Overview of battery, transmitter and receiver unit, fuse and wiring harness	196
27.4	Transmitting power and aerial fitting locations	197
<b>28</b>	<b>Suppression measures</b>	<b>199</b>
28.1	Implementation of suppression measures	199