



## Contents

<b>68 - Interior equipment</b> .....	<b>1</b>
<b>1 Interior mirror</b> .....	<b>1</b>
1.1 Automatic anti-dazzle interior mirror .....	1
1.2 Removing and installing interior mirror with rain sensor .....	1
1.3 Bonding on retaining plate for interior mirror with rain sensor .....	2
1.4 Removing and installing interior mirror .....	3
1.5 Bonding on retaining plate for interior mirror without rain sensor .....	4
1.6 Removing and installing interior mirror in vehicles with front camera for driver assist systems .....	5
<b>2 Compartments, covers and trims</b> .....	<b>7</b>
2.1 Tools .....	7
2.2 Removing and installing centre console, basic version, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶ .....	7
2.3 Removing and installing centre console, comfort version, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶ .....	10
2.4 Removing and installing centre console, CC 2010▶ .....	13
2.5 Removing and installing footwell trim .....	16
2.6 Removing and installing front ashtray or front storage tray, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶ .....	17
2.7 Removing and installing front ashtray or front storage tray, CC 2010▶ .....	20
2.8 Removing and installing Infotainment surround, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶ .....	22
2.9 Removing and installing Infotainment surround, CC 2010▶ .....	23
2.10 Removing and installing "Climatronic/Climatic" cover, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶ .....	24
2.11 Removing and installing "Climatronic/Climatic" cover, CC 2010▶ .....	25
2.12 Removing and installing rear trim .....	26
2.13 Removing and installing centre console air duct, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶ .....	27
2.14 Removing and installing centre console air duct, CC 2010▶ .....	28
2.15 Removing and installing storage tray in centre console, basic version, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶ .....	29
2.16 Removing and installing storage tray in centre console, comfort version, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶ .....	31
2.17 Removing and installing storage tray in centre console, CC 2010▶ .....	32
2.18 Removing and installing centre console extension, basic version, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶ .....	33
2.19 Removing and installing centre console extension, comfort version, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶ .....	35
2.20 Removing and installing centre console extension, CC 2010▶ .....	37
2.21 Removing and installing centre console armrest .....	39
2.22 Removing and installing armrest compartment .....	40
2.23 Removing and installing upper part of armrest .....	42
2.24 Removing and installing dash panel end trims .....	43
2.25 Removing and installing steering column trim .....	44
2.26 Removing and installing glove compartment .....	45
2.27 Removing and installing glove compartment lock cylinder .....	47
2.28 Removing and installing footwell cover on driver side .....	48
2.29 Removing and installing centre dash panel trim, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶ .....	49
2.30 Removing and installing dash panel trim, front passenger side, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶ .....	49
2.31 Removing and installing dash panel trim, front passenger side, CC 2010▶ .....	50
2.32 Removing and installing dash panel insert trim, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶ .....	51
2.33 Removing and installing dash panel insert trim, CC 2010▶ .....	52



2.34	Removing and installing analogue clock, CC 2010▶	53
2.35	Removing and installing holder for analogue clock, CC 2010▶	54
2.36	Removing and installing centre storage compartment, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶	55
2.37	Removing and installing centre storage cluster unit, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶	56
2.38	Removing and installing dummy cover carrier, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶	57
2.39	Removing and installing trim on driver side, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶	58
2.40	Removing and installing trim on driver side, CC 2010▶	60
2.41	Removing and installing storage tray in moulded headliner	61
2.42	Removing and installing bench seat storage compartment, Passat CC 2009▶ and CC 2010▶	62
2.43	Removing and installing single sun visor, Passat 2006▶ and Passat Estate 2006▶	63
2.44	Removing and installing double sun visor, Passat 2006▶ and Passat Estate 2006▶	65
2.45	Removing and installing sun visor, Passat CC 2009▶ and CC 2010▶	67
2.46	Removing and installing permit/pass holder	71
<b>3</b>	<b>Sill panel strip</b>	<b>73</b>
3.1	Removing and installing sill panel moulding	73
3.2	Removing and installing illuminated sill panel mouldings	75
3.3	Removing and installing wheel housing liner	78
<b>4</b>	<b>Grab handles</b>	<b>81</b>
4.1	Removing and installing roof grab handles	81
<b>5</b>	<b>Rear shelf/roller sunblind</b>	<b>83</b>
5.1	Removing and installing rear shelf without roller sunblind, Passat 2006▶	83
5.2	Removing and installing rear shelf with roller sunblind, Passat 2006▶	84
5.3	Removing and installing roller sunblind, Passat 2006▶	86
5.4	Removing and installing rear shelf without roller sun blind, Passat CC 2009▶ and CC 2010▶	88
5.5	Removing and installing rear shelf with roller sun blind, Passat CC 2009▶ and CC 2010▶	90
5.6	Removing and installing roller sunblind, rear door trim	93
<b>6</b>	<b>Net partition</b>	<b>97</b>
6.1	Removing and installing net partition	97
6.2	Removing and installing net partition mountings	98
<b>69</b>	<b>Passenger protection</b>	<b>99</b>
<b>1</b>	<b>Seat belts</b>	<b>99</b>
1.1	General safety regulations when working on airbag, belt tensioner and battery isolator units (pyrotechnic components)	100
1.2	Special instructions for belt tensioners	101
1.3	Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	101
1.4	Removing and installing front seat belts, Passat 2006▶ and Passat Estate 2006▶	101
1.5	Removing and installing front seat belts, Passat CC 2009▶ and CC 2010▶, except USA and Canada vehicles	104
1.6	Removing and installing front seat belts, Passat CC 2009▶ and CC 2010▶, USA and Canada vehicles only	107
1.7	Removing and installing front belt height adjuster, Passat 2006▶ and Passat Estate 2006▶	109
1.8	Removing and installing front belt height adjuster, Passat CC 2009▶ and CC 2010▶	111
1.9	Removing and installing front belt buckle	111
1.10	Removing and installing rear outer seat belts with belt tensioners, Passat 2006▶	112
1.11	Removing and installing rear outer seat belts without belt tensioners, Passat 2006▶	115
1.12	Removing and installing rear seat belts, Passat CC 2009▶ and CC 2010▶	118
1.13	Removing and installing rear outer seat belts with belt tensioners, Passat Estate 2006▶	120



1.14	Removing and installing rear outer seat belts without belt tensioners, Passat Estate 2006▶	123
1.15	Removing and installing middle, rear seat belt	126
1.16	Removing and installing rear double belt buckle	127
1.17	Removing and installing rear belt buckles, Passat CC 2009▶ and CC 2010▶	128
<b>2</b>	<b>Inspecting seat belts</b>	<b>129</b>
2.1	Points to check	129
<b>3</b>	<b>Checking child seat anchors (ISOFIX) after an accident</b>	<b>132</b>
3.1	Points to check	132
<b>4</b>	<b>Airbag</b>	<b>133</b>
4.1	Tools	133
4.2	Overview of fitting locations - airbag systems, Passat 2006▶	134
4.3	General safety regulations when working on airbag, belt tensioner and battery isolator units (pyrotechnic components)	136
4.4	Special instructions for driver and front passenger airbag	137
4.5	Special instructions for curtain airbag modules	137
4.6	Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	138
4.7	Deactivating the airbag	138
4.8	Renewing airbag units following an accident	138
4.9	Removing and installing airbag control unit J234	139
4.10	Removing and installing airbag unit on driver side, Passat 2006▶ and Passat Estate 2006▶	141
4.11	Removing and installing airbag unit on driver side, Passat CC 2009▶ and CC 2010▶	144
4.12	Removing and installing airbag coil connector and return spring with slip ring F138	148
4.13	Removing and installing airbag unit on front passenger side	149
4.14	Removing and installing front side-airbag	151
4.15	Removing and installing rear side-airbag	153
4.16	Removing and installing curtain airbag, Passat 2006▶, ▶calendar week 44/2009	155
4.17	Removing and installing curtain airbag, Passat 2006▶, calendar week 44/2009▶	157
4.18	Removing and installing curtain airbag, Passat CC 2009▶ and CC 2010▶	160
4.19	Removing and installing curtain airbag, Passat Estate 2006▶, ▶calendar week 44/2009	162
4.20	Removing and installing curtain airbag, Passat Estate 2006▶, calendar week 45/2009▶	164
4.21	Removing and installing seat occupied sensor, front passenger side G128	167
4.22	Adapting components	173
<b>5</b>	<b>Passat 2006▶ and Passat Variant 2006▶: Seat occupied recognition for front passenger airbag deactivation</b>	<b>174</b>
5.1	Safety precautions when working on seat occupied recognition	174
5.2	Procedure after an accident when belt tensioner and/or airbag was triggered	174
5.3	Assembly overview - seat occupied recognition	175
5.4	Components of repair kit for seat occupied recognition	175
5.5	Removing components of seat occupied recognition (vehicles with manually operated seats)	176
5.6	Installing repair kit for seat occupied recognition (vehicles with manually adjusted seats)	178
5.7	Removing components of seat occupied recognition (vehicles with electrically operated seats)	179
5.8	Installing repair kit for seat occupied recognition (vehicles with electrically operated seats)	182
5.9	Importers reporting obligation	183
<b>6</b>	<b>Seat occupied recognition for front passenger airbag deactivation, Passat CC 2009▶ and CC 2010▶</b>	<b>184</b>
6.1	Tools	184
6.2	Safety precautions when working on seat occupied recognition	184
6.3	Procedure after an accident when belt tensioner and/or airbag was triggered	185
6.4	Importers reporting obligation	185
6.5	Assembly overview - seat occupied recognition	185



6.6	Removing and installing seat occupied recognition	187
6.7	Removing and installing seat position sensor	190
<b>7</b>	<b>Crash sensors</b>	<b>192</b>
7.1	Tools	192
7.2	Removing and installing front airbag crash sensor, driver side G283	192
7.3	Removing and installing front airbag crash sensor for driver side G283 (USA and Canada vehicles only)	193
7.4	Removing and installing front airbag crash sensor for front passenger side G284 (USA and Canada vehicles only)	194
7.5	Removing and installing side-airbag crash sensor, driver side G179	196
7.6	Removing and installing side-airbag crash sensor, front passenger side G180	201
7.7	Removing and installing rear side-airbag crash sensor, driver side G256	208
7.8	Removing and installing rear side-airbag crash sensor, front passenger side G257	209
<b>70</b>	<b>Trim, insulation</b>	<b>211</b>
<b>1</b>	<b>Dash panel</b>	<b>211</b>
1.1	Tools	211
1.2	Removing and installing dash panel, Passat 2006▶, Passat Estate 2006▶ and Passat CC 2009▶	211
1.3	Removing and installing dash panel, CC 2010▶	218
1.4	Removing and installing assembly carrier	224
<b>2</b>	<b>Door trims, Passat 2006▶ and Passat Estate 2006▶</b>	<b>230</b>
2.1	Tools	230
2.2	Removing and installing front door trim on driver side	230
2.3	Removing and installing front door trim on front passenger side	232
2.4	Removing and installing rear door trim	233
2.5	Removing and installing roller sunblind, rear door trim	235
2.6	Removing and installing window winder	235
2.7	Removing and installing front loudspeaker trim	236
<b>3</b>	<b>Door trims, Passat CC 2009▶ and CC 2010▶</b>	<b>238</b>
3.1	Tools	238
3.2	Removing and installing front door trim	238
3.3	Removing and installing rear door trim	242
<b>4</b>	<b>Pillar trims</b>	<b>247</b>
4.1	Tools	247
4.2	Removing and installing upper A-pillar trim, Passat 2006▶ and Passat Estate 2006▶	247
4.3	Removing and installing upper A-pillar trim, Passat CC 2009▶ and CC 2010▶	248
4.4	Removing and installing centre A-pillar trim	250
4.5	Removing and installing lower A-pillar trim	251
4.6	Removing and installing upper B-pillar trim, Passat 2006▶ and Passat Estate 2006▶	252
4.7	Removing and installing upper B-pillar trim, Passat CC 2009▶ and CC 2010▶	255
4.8	Releasing upper B-pillar trim from and securing in mountings, Passat CC 2009▶ and CC 2010▶	257
4.9	Removing and installing lower B-pillar trim	258
4.10	Removing and installing C-pillar trim, Passat 2006▶, vehicles without roller sunblind	259
4.11	Removing and installing C-pillar trim, Passat 2006▶, vehicles with roller sunblind	260
4.12	Removing and installing C-pillar trim, Passat CC 2009▶ and CC 2010▶, vehicles without roller sunblind	262
4.13	Removing and installing C-pillar trim, Passat CC 2009▶ and CC 2010▶, vehicles with roller sunblind	263
4.14	Removing and installing C-pillar trim, Passat Estate 2006▶	265
4.15	Removing and installing D-pillar trim, Passat Estate 2006▶	266
<b>5</b>	<b>Rear lid trim</b>	<b>269</b>
5.1	Tools	269
5.2	Removing and installing warning triangle bracket, Passat 2006▶	270
5.3	Removing and installing rear lid trim, Passat 2006▶	271



5.4	Removing and installing rear lid trim, Passat CC 2009▶ and CC 2010▶	272
5.5	Removing and installing window frame trim, Passat Estate 2006▶	273
5.6	Removing and installing rear lid trim, Passat Estate 2006▶	274
5.7	Removing and installing warning triangle bracket, Passat Estate 2006▶	276
<b>6</b>	<b>Load and luggage compartment trims</b>	<b>277</b>
6.1	Tools	277
6.2	Removing and installing lock carrier cover, Passat 2006▶	277
6.3	Removing and installing lock carrier cover, Passat Estate 2006▶	278
6.4	Removing and installing lock carrier cover, Passat CC 2009▶ and CC 2010▶	279
6.5	Removing and installing load and luggage compartment floor covering, Passat Estate 2006▶	280
6.6	Removing and installing left side trim of luggage compartment, Passat 2006▶	281
6.7	Removing and installing right side trim of luggage compartment, Passat 2006▶	283
6.8	Removing and installing left side trim of luggage compartment, Passat Estate 2006▶	284
6.9	Removing and installing right side trim of luggage compartment, Passat Estate 2006▶	286
6.10	Removing and installing side trim of luggage compartment, Passat CC 2009▶ and CC 2010▶	288
<b>7</b>	<b>Rail system, Passat Estate 2006▶</b>	<b>290</b>
7.1	Removing and installing retaining rails	290
7.2	Removing and installing retainer and carrier for rail system	291
<b>8</b>	<b>Roof trims</b>	<b>294</b>
8.1	Tools	294
8.2	Removing and installing roof end strip, Passat 2006▶	294
8.3	Removing and installing roof end strip, Passat Estate 2006▶	296
8.4	Lowering and installing moulded headliner, Passat 2006▶	297
8.5	Removing and installing moulded headliner, Passat 2006▶	301
8.6	Removing and installing moulded headliner, Passat Estate 2006▶	305
8.7	Lowering and installing moulded headliner, Passat CC 2009▶ and CC 2010▶	307
8.8	Removing and installing moulded headliner, Passat CC 2009▶ and CC 2010▶	310
8.9	Removing and installing roof insulation/reinforcement, Passat 2006▶, Passat CC 2009▶ and CC 2010▶	312
8.10	Removing and installing roof insulation/reinforcement, Passat Estate 2006▶	315
<b>72</b>	<b>Seat frames</b>	<b>319</b>
<b>1</b>	<b>Front seats</b>	<b>319</b>
1.1	Tools	319
1.2	Removing and installing front seat	321
1.3	Removing and installing seat cover cap	324
1.4	Removing and installing lumbar support adjustment wheel	325
1.5	Removing and installing seat height	326
1.6	Removing and installing seat (electric) trim on face side	328
1.7	Removing and installing seat (electric) trims	329
1.8	Removing and installing seat (electric) trim holders	331
1.9	Removing and installing seat (part electric) trim	332
1.10	Removing and installing seat (height adjustable) trim	333
1.11	Removing and installing trims on front passenger seat, seat with pass-through	335
1.12	Removing and installing seat (part electric) trim holder and actuating lever	337
1.13	Removing and installing seat trim (without height adjustment)	338
1.14	Removing and installing seat (without height adjustment) trim holder	339
1.15	Removing and installing front seat backrest	340
1.16	Removing and installing lumbar support (2-way, manual)	343
1.17	Removing and installing electric seat control unit	344
1.18	Removing and installing seat (electric/part electric) switch unit	345
1.19	Removing and installing electric longitudinal seat adjustment	346
1.20	Removing and installing seat pan on electrically adjustable seat	348
1.21	Removing and installing rake adjustment on electrically adjustable seat	350



1.22	Removing and installing height adjustment on electrically adjustable seat	351
1.23	Removing and installing (electric) seat lumbar support	353
1.24	Removing and installing drive for (electric) backrest adjustment	356
1.25	Removing and installing head restraint	356
1.26	Removing and installing seat ventilation switch E655 , Passat CC 2009► and CC 2010►	358
1.27	Removing and installing front seat fan V268 , Passat CC 2009► and CC 2010►	359
1.28	Removing and installing front seat backrest fan V269 , Passat CC 2009► and CC 2010►	362
<b>2</b>	<b>Front sport seats, R36</b>	<b>366</b>
2.1	Tools	366
2.2	Removing and installing R36 sport seat	368
2.3	Removing and installing R36 sport seat trim	371
2.4	Removing and installing R36 sport seat backrest	374
2.5	Removing and installing R36 sport seat switch unit	376
2.6	Removing and installing R36 sport seat longitudinal adjustment	378
2.7	Removing and installing seat pan for R36 sport seat	381
2.8	Removing and installing R36 sport seat rake adjustment	384
2.9	Removing and installing R36 sport seat height adjustment	385
2.10	Pneumatic lumbar support, R36 leather sports seat	387
2.11	Removing and installing motor for backrest adjustment, R36 sport seat	393
2.12	Removing and installing head restraint guides, R36 sport seat	393
<b>3</b>	<b>Rear seats</b>	<b>395</b>
3.1	Tools	395
3.2	Removing and installing bench seat, Passat 2006►, Passat CC 2009► and CC 2010►	395
3.3	Removing and installing bench seat, Passat Estate 2006►	398
3.4	Removing and installing left backrest segment	399
3.5	Removing and installing right backrest segment	400
3.6	Removing and installing fixed rear backrest, Passat CC 2009► and CC 2010►	402
3.7	Removing and installing side padding with side-airbag	403
3.8	Removing and installing side padding with no side-airbag	405
3.9	Assembly overview - locking mechanism for rear seat backrest	407
3.10	Removing and installing trim for locking mechanism	408
3.11	Removing and installing lock cylinder for locking mechanism	409
3.12	Removing and installing locking mechanism	410
3.13	Removing and installing centre armrest	411
3.14	Removing and installing centre armrest drink holder	412
<b>74</b>	<b>Seat - padding, covers</b>	<b>414</b>
<b>1</b>	<b>Front seat covers and padding</b>	<b>414</b>
1.1	Tools	414
1.2	Removing and installing front seat cushion cover and padding	414
1.3	Removing and installing front seat backrest cover and padding (except Trendline)	420
1.4	Removing and installing front seat backrest cover and padding (Trendline)	425
1.5	Renewing heater elements of seat heating	427
<b>2</b>	<b>Covers and padding for R36 sport seat</b>	<b>428</b>
2.1	Tools	428
2.2	Removing and installing front seat cover and padding for R36 sports seat	429
2.3	Removing and installing backrest cover and padding for R36 sports seat	435
2.4	Renewing heater element for seat heater of R36 sport seat	442
<b>3</b>	<b>Rear seat covers and padding</b>	<b>443</b>
3.1	Tools	443
3.2	Removing and installing bench seat cover and padding, Passat 2006►	443
3.3	Removing and installing bench seat cover and padding, Passat Estate 2006►	446
3.4	Removing and installing bench seat cover and padding, Passat CC 2009► and CC 2010►	449



3.5	Removing and installing cover and padding for bench seat with integrated child seat . . . . .	453
3.6	Removing and installing push button with trim for adjusting mechanism of child seat . . . . .	458
3.7	Removing and installing right backrest cover and padding . . . . .	460
3.8	Removing and installing left backrest cover and padding . . . . .	463
3.9	Removing and installing fixed rear backrest cover and padding, Passat CC 2009▶ and CC 2010▶ . . . . .	466