



Contents

50 - Body - front	1
1 Lock carrier	1
1.1 Tools	1
1.2 Assembly overview - lock carrier, service position	2
1.3 Service position	3
1.4 Removing and installing lock carrier with add-on parts	4
1.5 Assembly overview - air deflector elements on lock carrier	6
1.6 Removing and installing pressure hoses	7
2 Wing	9
2.1 Tools	9
2.2 Assembly overview - front wing	9
2.3 Removing and installing wing	10
2.4 Removing and installing wing bracket	12
3 Noise insulation	14
3.1 Tools	14
3.2 Assembly overview - noise insulation (long version)	14
3.3 Assembly overview - noise insulation (short version)	16
4 Underbody cladding	17
4.1 Tools	17
4.2 Assembly overview - underbody cladding	17
4.3 Assembly overview - additional underbody covers (BlueMotion vehicles)	19
5 Fuel tank covers (natural gas vehicles)	20
6 Bulkhead	21
6.1 Tools	21
6.2 Materials	21
6.3 Assembly overview - bulkhead	22
7 Tunnel cross-piece	23
7.1 Tools	23
7.2 Assembly overview - tunnel cross-piece	23
55 - Bonnet, rear lid	25
1 Bonnet	25
1.1 Tools	25
1.2 Assembly overview - bonnet	25
1.3 Removing and installing bonnet	27
1.4 Removing gas strut	29
1.5 Releasing gas from gas strut	29
1.6 Assembly overview - bonnet hinge	29
1.7 Removing and installing bonnet hinge	30
1.8 Assembly overview - insulation	33
1.9 Removing and installing insulation	34
1.10 Assembly overview - bonnet lock and release components	36
1.11 Removing and installing bonnet lock	37
1.12 Disconnecting Bowden cable	38
1.13 Adjusting bonnet	38
1.14 Removing and installing release lever	41
2 Rear lid (Saloon)	42
2.1 Tools	42
2.2 Assembly overview - rear lid	42
2.3 Removing and installing rear lid	43
2.4 Removing gas strut	45
2.5 Installing gas strut	46



2.6	Releasing gas from gas strut	47
2.7	Assembly overview - rear lid hinge	47
2.8	Removing and installing rear lid hinge	48
2.9	Assembly overview - hinge seal	51
2.10	Removing and installing hinge seal	52
2.11	Removing and installing striker pin	54
2.12	Adjusting rear lid	54
2.13	Assembly overview - release element	57
2.14	Removing and installing release element	58
2.15	Removing and installing lid lock	60
2.16	Rear lid seal	61
2.17	Removing and installing rear lid seal	62
3	Rear lid (Variant)	64
3.1	Tools	64
3.2	Assembly overview - rear lid	64
3.3	Removing and installing rear lid	65
3.4	Removing and installing rear lid hinge	67
3.5	Removing and installing lid lock	69
3.6	Removing and installing striker pin	71
3.7	Removing and installing release button (vehicle identification number > 3C-8E108000 / 3C-8P064070)	72
3.8	Removing and installing release button (vehicle identification number 3C-8E108001 / 3C-8P064071 >)	74
3.9	Adjusting rear lid	76
3.10	Removing and installing gas strut	80
3.11	Releasing gas from gas strut	80
3.12	Removing and installing motor in control unit for electrically operated rear lid	80
3.13	Rear lid seal	84
3.14	Removing and installing rear lid seal	84
3.15	Assembly overview - cover	87
4	Tank flap unit	88
4.1	Tools	88
4.2	Assembly overview - tank flap unit and actuator	88
4.3	Assembly overview - tank flap unit for natural gas vehicles	90
4.4	Removing and installing tank flap unit	91
4.5	Removing and installing actuator	93
57	Front doors, door components, central locking	94
1	Front door	94
1.1	Tools	94
1.2	Assembly overview - front door	95
1.3	Assembly overview - door hinges	97
1.4	Removing and installing door	98
1.5	Adjusting door	100
2	Door components	102
2.1	Tools	102
2.2	Assembly overview - assembly carrier	103
2.3	Removing and installing assembly carrier	103
2.4	Assembly overview - door handle and door lock	109
2.5	Removing and installing lock cylinder housing cover cap	110
2.6	Removing and installing lock cylinder housing	111
2.7	Removing and installing door handle	112
2.8	Removing and installing door handle with access and start authorisation	113
2.9	Removing and installing door lock	115
2.10	Removing and installing bearing bracket	119
2.11	Removing and installing retaining bracket	122



2.12	Door inner seal	123
2.13	Removing and installing door inner seal	124
2.14	Removing and installing door outer seal	125
2.15	Assembly overview - insulation	129
3	Central locking	130
3.1	Fitting location overview - central locking components	130
3.2	Adapting remote control keys to remote control	132
3.3	Adapting remote control keys to immobilizer	132
3.4	Removing and installing remote control key battery	132
58	Rear doors, door components	135
1	Rear door (Saloon)	135
1.1	Tools	135
1.2	Assembly overview - rear door	136
1.3	Assembly overview - door hinges	138
1.4	Removing and installing door	139
1.5	Adjusting door	141
2	Rear door (Variant)	143
2.1	Tools	143
2.2	Assembly overview - rear door	144
2.3	Assembly overview - door hinges	145
2.4	Removing and installing door	147
2.5	Adjusting door	149
3	Door components	151
3.1	Tools	151
3.2	Assembly overview - assembly carrier	152
3.3	Removing and installing assembly carrier	152
3.4	Assembly overview - door handle and door lock	159
3.5	Removing and installing lock cylinder housing cover cap	160
3.6	Removing and installing lock cylinder housing	161
3.7	Removing and installing door handle	162
3.8	Removing and installing door handle with access and start authorisation	163
3.9	Removing and installing door lock	165
3.10	Removing and installing bearing bracket	168
3.11	Removing and installing retaining bracket	171
3.12	Door inner seals	172
3.13	Removing and installing door inner seal	173
3.14	Removing and installing door outer seal	174
3.15	Assembly overview - insulation	178
60	Sunroof	179
1	Sliding/tilting sunroof with glass panel (Meritor)	179
1.1	Tools	179
1.2	Function	179
1.3	Assembly overview - sliding/tilting sunroof with glass panel	180
1.4	Removing and installing boot	183
1.5	Removing sliding/tilting sunroof glass panel	184
1.6	Installing sliding/tilting sunroof glass panel	185
1.7	Adjusting height of sliding/tilting sunroof glass panel	185
1.8	Adjusting panel seal	186
1.9	Removing and installing panel seal	187
1.10	Removing and installing wind deflector	187
1.11	Removing and installing sliding headliner	188
1.12	Removing and installing sliding/tilting sunroof glass panel drive	189
1.13	Adjusting drive for sliding/tilting sunroof glass panel ("0" position)	190



1.14	Removing and installing sliding/tilting sunroof glass panel automatic preselection switch	191
1.15	Checking parallel running	191
1.16	Adjusting parallel running	191
1.17	Assembly overview - carrier unit	192
1.18	Removing and installing carrier unit	193
1.19	Operating without current	198
1.20	Removing and installing guide plate	198
1.21	Removing and installing guide plate	199
1.22	Cleaning water drain hoses	200
2	Sliding/tilting sunroof with solar panel (Webasto)	204
2.1	Tools	204
2.2	Function	204
2.3	Assembly overview - sliding/tilting sunroof with solar panel	205
2.4	Removing sliding/tilting sunroof solar panel	206
2.5	Installing sliding/tilting sunroof solar panel	207
2.6	Adjusting sliding/tilting sunroof solar panel height	207
2.7	Checking parallel running of solar panel	208
2.8	Adjusting parallel running of solar panel	209
2.9	Renewing panel seal	209
2.10	Removing wind deflector	209
2.11	Removing solar panel trim	210
2.12	Removing sliding/tilting sunroof drive	210
2.13	Adjusting drive for sliding/tilting sunroof (zero position)	211
2.14	Removing pre-selector control for sliding/tilting sunroof	212
2.15	Removing electrical contact in solar roof	212
2.16	Removing electrical contact for sliding/tilting sunroof solar panel in carrier unit	212
2.17	Removing and installing carrier unit	213
2.18	Operating without current	217
2.19	Cleaning water drain hoses	218
63	Bumpers	222
1	Front bumper cover	222
1.1	Tools	222
1.2	Repairing front bumper cover	222
1.3	Installing bracket for parking aid system	222
1.4	Assembly overview - front bumper cover	227
1.5	Assembly overview - front bumper cover »R36«	227
1.6	Removing and installing front bumper cover	228
1.7	Front bumper cover add-on parts	230
1.8	Add-on parts for front bumper cover »R36«	231
1.9	Front bumper cover substructure parts	232
1.10	Assembly overview - front bumper carrier	233
1.11	Assembly overview - front bumper carrier (USA)	234
1.12	Assembly overview - front bumper bracket »R36« and »R-Line«	234
2	Rear bumper cover (Saloon)	236
2.1	Tools	236
2.2	Repairing rear bumper cover	236
2.3	Installing bracket for parking aid system	236
2.4	Assembly overview - rear bumper cover	241
2.5	Removing and installing rear bumper cover	242
2.6	Rear bumper cover add-on parts	244
2.7	Rear bumper cover substructure parts	247
2.8	Assembly overview - rear bumper carrier	248
2.9	Assembly overview - towing bracket	249
3	Rear bumper cover (Variant)	251



3.1	Tools	251
3.2	Repairing rear bumper cover	251
3.3	Installing bracket for parking aid system	251
3.4	Assembly overview - rear bumper cover	256
3.5	Removing and installing rear bumper cover	257
3.6	Rear bumper cover add-on parts	259
3.7	Rear bumper cover substructure parts	262
3.8	Assembly overview - rear bumper carrier	263
3.9	Assembly overview - towing bracket	264
64	- Glazing	266
1	Flush bonded windows	266
1.1	Tools	266
1.2	Materials	267
1.3	Repairing windscreen	268
1.4	Assembly overview - windscreen	268
1.5	Assembly overview - plenum chamber cover	270
1.6	Removing windscreen	273
1.7	Installing windscreen	275
1.8	Assembly overview - rear window (Saloon)	275
1.9	Removing undamaged rear window (Saloon)	277
1.10	Removing broken rear window (Saloon)	278
1.11	Installing rear window (Saloon)	278
1.12	Assembly overview - rear window (Variant)	278
1.13	Removing undamaged rear window (Variant)	279
1.14	Removing broken rear window (Variant)	280
1.15	Installing rear window (Variant)	281
1.16	Assembly overview - side window (Variant)	281
1.17	Removing undamaged side window (Variant)	282
1.18	Removing broken side window (Variant)	283
1.19	Installing side window (Variant)	283
1.20	Preparing old undamaged window for glazing	284
1.21	Preparing new window without precoating for glazing	284
1.22	Preparing body flange for glazing	285
1.23	Installation instructions	287
1.24	Minimum curing period	289
1.25	Touching up paint damage	290
1.26	Cleaning off excess adhesive sealing material	290
2	Front door window	291
2.1	Tools	291
2.2	Assembly overview	292
2.3	Removing and installing door window	293
2.4	Removing and installing window regulator motor	297
2.5	Removing and installing window channel	298
2.6	Removing and installing window channel trim strip	301
3	Rear door window (Saloon)	303
3.1	Tools	303
3.2	Assembly overview	304
3.3	Removing and installing door window	305
3.4	Removing and installing window regulator motor	309
3.5	Removing and installing window channel	310
3.6	Removing and installing window channel trim strip	312
4	Rear door window (Variant)	314
4.1	Tools	314
4.2	Assembly overview	315



4.3	Removing and installing door window	316
4.4	Removing and installing window regulator motor	321
4.5	Removing and installing window channel	322
4.6	Removing and installing guide rails	323
4.7	Removing and installing window channel trim strip	324
66	- Exterior equipment	326
1	Wheel housing liner	326
1.1	Tools	326
1.2	Assembly overview - front wheel housing liner	326
1.3	Removing and installing front wheel housing liner	327
1.4	Assembly overview - rear wheel housing liner	329
1.5	Removing and installing rear wheel housing liner	330
2	Exterior mirror	332
2.1	Tools	332
2.2	Assembly overview - exterior mirror	332
2.3	Removing and installing mirror glass	333
2.4	Removing and installing mirror housing	334
2.5	Removing and installing trim	335
2.6	Removing and installing turn signal repeater	335
2.7	Removing and installing exterior mirror	336
3	Radiator grille	338
3.1	Tools	338
3.2	Radiator grille	338
3.3	Radiator grille »R36«	342
3.4	Removing and installing VW emblem	344
3.5	Removing and installing VW emblem on vehicles with adaptive cruise control	346
3.6	Assembly overview - number plate carrier	347
3.7	Removing and installing number plate carrier	348
4	Roof railing	350
4.1	Tools	350
4.2	Assembly overview - roof railing	350
4.3	Removing and installing roof railing	351
4.4	Assembly overview - roof railing retaining bracket	354
4.5	Removing and installing roof railing retaining bracket	355
5	Mouldings and trims	358
5.1	Tools	358
5.2	Assembly overview - water deflector	359
5.3	Removing and installing water deflector	359
5.4	Assembly overview - protective side strip	362
5.5	Removing protective side moulding	362
5.6	Installing protective side moulding	364
5.7	Front and rear door mouldings, vehicles up to 05.2007	365
5.8	Front and rear door mouldings - vehicles from 06.2007	368
5.9	Assembly overview - side member extension	372
5.10	Assembly overview - rear lid trim strip (Variant)	373
5.11	Wheel arch trim	374
5.12	»R-Line« and »Exclusive« cover strip	376
6	Special add-on parts	378
6.1	Safety requirements	378
6.2	Tools	378
6.3	Materials	380
6.4	Special add-on parts for Passat »R36« and »R-Line«	381
6.5	Removing and installing front wheel housing extension	382
6.6	Removing and installing rear wheel housing extension	385



6.7	Assembly overview - side member extension	387
6.8	Roof edge spoiler (Variant)	388
6.9	Rear lid spoiler, Saloon	392
6.10	Fitting notes	396
6.11	Preparing add-on parts for bonding	396
6.12	Preparing new add-on part for bonding	396
6.13	Preparing body kit component for bonding	397
6.14	Installation instructions	397
6.15	Minimum curing period	398
6.16	Touching up paint damage	398
6.17	Cleaning off excess adhesive sealing material	398
6.18	Cleaning guidelines	398
7	Lettering	399
7.1	Tools	399
7.2	Fitting notes	399
7.3	Rear lettering - dimensions	400
7.4	Lettering on wing	404
8	Scuff protection film »R36« and »R-Line«	409
8.1	Scuff protection film at front and rear	409