



Contents

00 - Technical data	1
1 Vehicle identification data	1
1.1 Vehicle identification number	1
1.2 Type plate	1
1.3 Vehicle data sticker	1
2 Safety information	2
3 Gas vehicles	3
4 Moulded foam inserts	4
5 Galvanised body parts	5
5.1 Installing	5
5.2 Platform	6
6 Strengthened steel body panels	7
6.1 Installing	7
6.2 Platform	8
7 Laser welding	11
8 Body panel gaps/shut lines	12
8.1 Body - front	12
8.2 Body - rear	15
8.3 Body - rear (Variant)	17
9 Body dimensions	19
9.1 Body - front	19
9.2 Body - centre	23
9.3 Body - centre (Variant)	29
9.4 Body - rear	32
9.5 Body - rear (Variant)	34
9.6 Floor panel - front	36
9.7 Floor panel, centre	38
9.8 Floor panel - rear	39
10 Alignment bracket set	41
10.1 Overview	41
11 Portal gauge	43
11.1 Overview	43
50 - Body - front	45
1 Renewing right bracket	45
1.1 Tools	45
1.2 Removing	45
1.3 Installing	47
2 Renewing left bracket	49
2.1 Tools	49
2.2 Removing	49
2.3 Installing	51
3 Renewing retaining bracket (for subframe)	53
3.1 Removing	53
3.2 Installing	54
4 Renewing bumper bracket	56
4.1 Removing	57
4.2 Installing	58
5 Renewing upper wheel housing longitudinal member	59
5.1 Tools	60



5.2	Removing	61
5.3	Installing	63
6	Renewing front wheel housing	66
6.1	Tools	66
6.2	Removing	67
6.3	Installing	68
7	Renewing front longitudinal member	75
7.1	Tools	75
7.2	Removing	76
7.3	Installing	78
8	Renewing front longitudinal member - part section	85
8.1	Tools	85
8.2	Removing	86
8.3	Installing	89
9	Repairing threads for securing subframe (suspension subframe)	91
9.1	Tools	91
9.2	Contents of thread repair kit	92
9.3	Repairing thread	92
51 - Body - centre		96
1	Renewing roof	96
1.1	Tools	96
1.2	Removing	98
1.3	Installing	99
2	Renewing roof (Variant)	109
2.1	Tools	109
2.2	Removing	111
2.3	Installing	112
3	Renewing roof side member	120
3.1	Tools	120
3.2	Removing	121
3.3	Installing	124
3.4	Foam treating roof side member	127
4	Renewing front cross member for roof	129
4.1	Tools	129
4.2	Removing	130
4.3	Installing	131
5	Renewing roof reinforcement, vehicles with no sliding/tilting sunroof	132
5.1	Tools	132
5.2	Removing	133
5.3	Installing	134
6	Renewing rear roof cross member	135
6.1	Tools	135
6.2	Removing	136
6.3	Installing	137
7	Renewing rear roof cross member (Variant)	138
7.1	Tools	138
7.2	Removing	139
7.3	Installing	140
8	Renewing A-pillar	143
8.1	Tools	143
8.2	Removing	144
8.3	Installing	145
9	Renewing A-pillar reinforcement	150



9.1	Tools	150
9.2	Removing	151
9.3	Installing	152
10	Renewing B-pillar	157
10.1	Tools	157
10.2	Removing	157
10.3	Installing	160
11	Renewing inner B-pillar	167
11.1	Tools	167
11.2	Removing	168
11.3	Installing	169
12	Renewing B-pillar reinforcement	171
12.1	Tools	172
12.2	Removing	172
12.3	Installing	175
13	Renewing side member	184
13.1	Tools	184
13.2	Removing	185
13.3	Installing	186
14	Renewing front side member reinforcement	193
14.1	Tools	193
14.2	Removing	194
14.3	Installing	195
15	Renewing rear side member reinforcement	200
15.1	Tools	200
15.2	Removing	201
15.3	Installing	202
53 - Body - rear		204
1	Renewing cross panel	204
1.1	Tools	205
1.2	Removing	206
1.3	Installing	207
2	Renewing cross panel (Variant)	211
2.1	Tools	211
2.2	Removing	212
2.3	Installing	214
3	Renewing lock carrier	218
3.1	Tools	218
3.2	Removing	218
3.3	Installing	219
4	Renewing tail light mounting	221
4.1	Tools	221
4.2	Removing	221
4.3	Installing	222
5	Renewing tail light mounting (Variant)	225
5.1	Tools	225
5.2	Removing	226
5.3	Installing	227
6	Renewing C-pillar reinforcement (Variant)	229
6.1	Tools	229
6.2	Removing	230
6.3	Installing	231
7	Renewing D-pillar reinforcement - part section	234



7.1	Tools	234
7.2	Removing	235
7.3	Installing	236
8	Renewing inner D-pillar	238
8.1	Tools	238
8.2	Removing	239
8.3	Installing	240
9	Renewing rear longitudinal member - part section	242
9.1	Tools	242
9.2	Removing	243
9.3	Installing	245
10	Renewing side panel - part section	248
10.1	Tools	248
10.2	Removing	249
10.3	Installing	251
11	Renewing side panel - part section (Variant)	256
11.1	Tools	256
11.2	Removing	257
11.3	Installing	259
12	Renewing outer wheel housing liner	264
12.1	Tools	264
12.2	Removing	265
12.3	Installing	266
13	Renewing outer wheel housing liner (Variant)	269
13.1	Tools	269
13.2	Removing	270
13.3	Installing	272
14	Renewing spare wheel well	275
14.1	Removing	276
14.2	Installing	277