



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 General information | 1 |
| 1.1 Starting conditions for auxiliary/supplementary heater Thermo Top V/fleece | 1 |
| 1.2 Notes for vehicles with a start/stop system | 2 |
| 1.3 Rules for cleanliness when working on auxiliary/supplementary heater Thermo Top V/fleece and fuel system | 2 |
| 1.4 Type plates | 3 |
| 2 Safety information | 6 |
| 2.1 Safety precautions when working on vehicles equipped with auxiliary/supplementary heater Thermo Top V/fleece | 6 |
| 2.2 Safety measures when working on vehicles with a start/stop system | 6 |
| 2.3 Safety precautions during work on fuel system | 7 |
| 3 Repair instructions | 8 |
| 3.1 Notes on general repairs to vehicles equipped with auxiliary/supplementary heater Thermo Top V/fleece | 8 |
| | |
| 82 - Supplementary heating | 9 |
| 1 Auxiliary/supplementary heater Thermo Top V/fleece | 9 |
| 1.1 Overview of fitting locations - auxiliary/supplementary heater | 9 |
| 1.2 Assembly overview - auxiliary/supplementary heater, exterior | 12 |
| 1.3 Assembly overview - auxiliary/supplementary heater, interior | 13 |
| 1.4 Removing and installing auxiliary/supplementary heater Thermo Top V/fleece | 16 |
| 1.5 Dismantling and assembling auxiliary/supplementary heater Thermo Top V/fleece | 20 |
| 1.6 Removing and installing air intake silencer | 21 |
| 1.7 Removing and installing circulation pump V55 | 22 |
| 1.8 Removing and installing silencer with bracket | 23 |
| 1.9 Removing and installing exhaust system | 24 |
| 1.10 Removing and installing auxiliary/supplementary heater bracket | 25 |
| 1.11 Removing and installing cover | 26 |
| 1.12 Removing and installing auxiliary heater control unit J364 | 26 |
| 1.13 Removing and installing glow plug with flame monitor Q8 | 27 |
| 1.14 Removing and installing temperature sensor G18 and overheating sensor G189 | 29 |
| 1.15 Dismantling and assembling burner unit | 29 |
| 1.16 Connector pin assignment for auxiliary/supplementary heater Thermo Top V/fleece | 30 |
| 2 Coolant circuit with auxiliary/supplementary heater Thermo Top V/fleece | 38 |
| 2.1 Connection diagram - coolant hoses | 38 |
| 2.2 Removing and installing heater coolant shut-off valve | 52 |
| 3 Fuel supply system | 54 |
| 3.1 Overview of fitting locations - fuel supply system | 54 |
| 3.2 Removing and installing metering pump V54 | 56 |
| 3.3 Checking fuel delivery rate | 60 |
| 4 Regulation of auxiliary/supplementary heater Thermo Top V/fleece | 63 |
| 4.1 Functional description | 63 |
| 5 Other controlling and regulating components | 67 |
| 5.1 Removing and installing ambient temperature sensor G17 | 67 |
| 5.2 Removing and installing remote control receiver for auxiliary coolant heater R149 for auxiliary/supplementary heater Thermo Top V/fleece | 67 |
| 5.3 Functional description of remote control for auxiliary/supplementary heater Thermo Top V/fleece | 69 |