



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Location on gearbox	1
1.2 Identification codes, assembly allocation, capacities, Golf 4 MOTION 2005 ▶	1
1.3 Identification codes, assembly allocation, capacities, Passat 4 MOTION 2006 ▶	3
2 Overview - power transmission	5
3 Calculating overall gear ratio "i"	7
3.1 Notes on performance test	7
4 General repair notes	8
4.1 Components	8
30 - Clutch	11
1 Repairing clutch mechanism, Golf	11
1.1 Overview	11
1.2 Assembly overview - pedal cluster	12
1.3 Removing and installing over-centre spring, Golf	13
1.4 Removing and installing clutch pedal, Golf	17
1.5 Removing and installing mounting bracket, Golf	22
1.6 Removing and installing master cylinder	27
1.7 Removing and installing clutch position sender G476	29
1.8 Assembly overview - hydraulics (LHD)	31
1.9 Assembly overview - hydraulics (RHD)	34
1.10 Removing and installing slave cylinder	35
1.11 Bleeding clutch system	37
2 Repairing clutch mechanism, Passat	39
2.1 Overview	39
2.2 Assembly overview - pedal cluster	40
2.3 Removing and installing mounting bracket	41
2.4 Removing and installing over-centre spring	45
2.5 Removing and installing clutch pedal	46
2.6 Removing and installing master cylinder	48
2.7 Removing and installing clutch position sender G476	50
2.8 Assembly overview - hydraulics (LHD)	52
2.9 Assembly overview - hydraulics (RHD)	55
2.10 Removing and installing slave cylinder	56
2.11 Bleeding clutch system	58
3 Repairing clutch release mechanism	60
4 Repairing clutch	62
4.1 Removing and installing Sachs clutch	62
4.2 Repairing Sachs clutch	64
4.3 Removing and installing LuK clutch	65
4.4 Repairing LuK clutch	67
34 - Controls, housing	69
1 Repairing selector mechanism	69
1.1 Installation position of selector mechanism	69
1.2 Removing and installing gear knob and cover	71
1.3 Removing and installing gaiter with gear knob and noise insulation, Golf	71
1.4 Removing and installing gaiter with selector lever knob and noise insulation, Passat	73
1.5 Repairing gear lever and selector housing (through 10.06)	74
1.6 Repairing gear lever and selector housing (from 11.06)	77
1.7 Assembly overview - removing and installing selector cables	81



1.8	Plastic relay lever	86
1.9	Removing and installing selector mechanism	87
1.10	Adjusting selector mechanism	90
2	Removing and installing gearbox, Golf	94
2.1	Removing gearbox	95
2.2	Installing gearbox	102
3	Removing and installing gearbox, Passat	111
3.1	Removing gearbox	112
3.2	Installing gearbox	120
4	Checking and topping up gear oil	129
4.1	Preparation	129
4.2	Draining gear oil	130
4.3	Fill with gear oil	131
5	Removing and installing bevel box	132
5.1	Removing bevel box	132
5.2	Installing bevel box	136
6	Checking or topping up gear oil in bevel box	140
6.1	Checking gear oil in bevel box	140
6.2	Topping up gear oil in bevel box	141
7	Dismantling and assembling gearbox	144
7.1	Overview - gearbox	144
7.2	Assembly overview	145
7.3	Removing and installing cover for gearbox housing and 5th and 6th gears	146
7.4	Removing and installing gearbox housing and shift mechanism	149
7.5	Removing and installing input shaft, output shaft, differential, selector forks and bevel box	150
7.6	Assembly sequence - Removing and installing cover for gearbox housing and 5th and 6th gear	151
7.7	Assembly sequence - Dismantling and assembling gearbox completely	157
8	Repairing gearbox housing and clutch housing	175
9	Repairing gearbox housing cover	180
10	Repairing selector unit	184
11	Dismantling and assembling selector forks	187
35 - Gears, shafts		192
1	Input shaft	192
1.1	Dismantling and assembling input shaft	192
1.2	Adjusting input shaft	200
2	Output shaft	205
2.1	Dismantling and assembling output shaft	205
2.2	Adjusting output shaft	218
3	Reverse shaft	223
3.1	Dismantling and assembling reverse shaft	223
39 - Final drive - front differential		226
1	Renewing flange shaft oil seals with gearbox and bevel box installed	226
1.1	Renewing oil seal for left flange shaft	226
1.2	Renewing seal for right flange shaft	227
2	Renewing seal between gearbox and bevel box with gearbox installed	231
3	Renewing seal between gearbox and bevel box with gearbox removed	233
4	Renewing bevel box output flange oil seal (bevel box removed)	235
5	Renewing polygon needle bearing and seal on right flange shaft	240
5.1	Removing	241



5.2	Installing	243
6	Adjustment overview	245
7	Differential	246
7.1	Dismantling and assembling differential	246
7.2	Adjusting differential	254