



Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine (Golf, Golf Plus, Eos, Scirocco)	3
1.1 Removing engine	3
1.2 Securing engine to assembly stand	11
1.3 Installing engine	11
1.4 Torque settings	14
1.5 Assembly mountings	14
1.6 Additional information and assembly work for vehicles with air conditioner	15
2 Removing and installing engine (Tiguan)	16
2.1 Removing engine	16
2.2 Securing engine to assembly stand	25
2.3 Installing engine	25
2.4 Torque settings	27
2.5 Assembly mountings	28
2.6 Additional information and assembly work for vehicles with air conditioner	29
3 Removing and installing engine (Passat)	30
3.1 Removing engine	30
3.2 Securing engine to assembly stand	41
3.3 Installing engine	41
3.4 Torque settings	44
3.5 Assembly mountings	44
3.6 Additional information and assembly work for vehicles with air conditioner	45
13 - Crankshaft group	46
1 Dismantling and assembling engine	46
1.1 Assembly overview - parts I and II	46
1.2 Assembly overview - part I, belt drive	48
1.3 Assembly overview - part II, cylinder block	49
1.4 Removing and installing poly-V belt	51
1.5 Removing and installing valve timing housing (Golf, Golf Plus, Eos, Scirocco)	52
1.6 Removing and installing valve timing housing (Tiguan)	57
1.7 Removing and installing valve timing housing (Passat)	61
1.8 Removing and installing bracket for ancillaries	66
2 Removing and installing sealing flanges and flywheel or drive plate	68
2.1 Assembly overview	68
2.2 Removing and installing engine speed sender G28	69
2.3 Renewing crankshaft oil seal - belt pulley end	70
2.4 Removing and installing crankshaft pulley	72
2.5 Renewing crankshaft sealing flange - flywheel end	75
3 Crankshaft	84
3.1 Assembly overview	84
3.2 Pulling needle bearing out of and driving into crankshaft	85
3.3 Crankshaft dimensions	87
4 Dismantling and assembling pistons and conrods	88
4.1 Assembly overview	88
4.2 Checking piston	90
4.3 Separating new conrod	91



4.4	Piston and cylinder dimensions	91
4.5	Removing and installing pistons	92
4.6	Removing and installing oil spray jets	93
15	- Cylinder head, valve gear	94
1	Cylinder head	94
1.1	Assembly overview	94
1.2	Checking valve timing	97
1.3	Adjusting valve timing	99
1.4	Checking timing chain	108
1.5	Removing and installing timing chain and chain drive for oil pump	114
1.6	Removing and installing camshaft housing	122
1.7	Removing and installing cylinder head	128
1.8	Checking compression	131
2	Repairing valve gear	134
2.1	Assembly overview	134
2.2	Checking camshaft axial clearance	136
2.3	Removing and installing camshaft	136
2.4	Reworking valve seats	137
2.5	Checking valve guides	138
2.6	Renewing valve stem seals	139
17	- Lubrication	141
1	Removing and installing parts of lubrication system	141
1.1	Engine oil, oil capacities, engine oil specification	141
1.2	Assembly overview (▶ model year 2008)	141
1.3	Assembly overview (model year 2009 ▶)	144
1.4	Removing and installing oil sump	146
1.5	Removing and installing oil pump	149
1.6	Checking oil pressure and oil pressure switch	151
19	- Cooling	154
1	Removing and installing parts of cooling system	154
1.1	Assembly overview - parts of cooling system, body side	155
1.2	Assembly overview - parts of cooling system, engine side	157
1.3	Coolant hose connection diagram	158
1.4	Draining and adding coolant	159
1.5	Removing and installing radiator fan V7 and radiator fan 2 V177 (Golf, Golf Plus, Eos, Scirocco)	162
1.6	Removing and installing radiator fan V7 and radiator fan 2 V177 (Tiguan, Passat)	163
1.7	Checking cooling system for leaks	164
1.8	Removing and installing radiator (Golf, Golf Plus, Scirocco, Eos)	165
1.9	Removing and installing radiator (Tiguan, Passat)	167
1.10	Removing and installing auxiliary radiator for charge air system (Tiguan, Passat)	169
1.11	Removing and installing coolant pump	173
1.12	Removing and installing coolant circulation pump V50	175
20	- Fuel supply system	178
1	Safety precautions	178
1.1	Safety regulations for working on fuel supply	178
1.2	Releasing pressure in high-pressure area	179
2	Separating plug-in connectors	180
3	Fuel tank (Golf, Golf Plus, Scirocco)	183
3.1	Assembly overview - fuel tank	183
3.2	Emptying fuel tank	184
3.3	Removing and installing fuel tank	187



4	Fuel tank (Passat)	189
4.1	Assembly overview - fuel tank	189
4.2	Emptying fuel tank	190
4.3	Removing and installing fuel tank	193
5	Fuel tank (Eos)	197
5.1	Assembly overview - fuel tank	197
5.2	Emptying fuel tank	199
5.3	Removing and installing fuel tank	201
6	Fuel tank (Tiguan)	204
6.1	Assembly overview - fuel tank (Tiguan)	204
6.2	Draining fuel tank (Tiguan)	206
6.3	Removing and installing fuel tank (Tiguan)	208
7	Repairing fuel supply system (Golf, Golf Plus, Scirocco, Eos)	213
7.1	Rules for cleanliness	213
7.2	Crash fuel shut-off	213
7.3	Removing and installing fuel delivery unit (Golf Plus, Golf, Scirocco, Eos)	214
7.4	Removing and installing fuel gauge sender G	216
7.5	Checking fuel pump	217
8	Repairing fuel supply (Passat)	229
8.1	Rules for cleanliness	229
8.2	Crash fuel shut-off	229
8.3	Removing and installing fuel delivery unit	230
8.4	Removing and installing fuel gauge sender G	233
8.5	Checking fuel pump	235
9	Repairing fuel supply (Tiguan)	244
9.1	Rules for cleanliness	244
9.2	Crash fuel shut-off	244
9.3	Removing and installing fuel delivery unit (Tiguan)	245
9.4	Removing and installing fuel gauge sender G (Tiguan)	247
9.5	Removing and installing suction-jet pump (Tiguan)	248
9.6	Removing and installing fuel gauge sender 2 G169 (Tiguan)	251
9.7	Removing and installing fuel pump control unit J538 (Tiguan)	251
9.8	Checking fuel pump (Tiguan)	253
10	Repairing electronic power control (EPC)	262
10.1	Assembly overview	262
10.2	Removing and installing accelerator pedal module	262
11	Activated charcoal filter system (Golf, Golf Plus, Eos, Scirocco)	264
11.1	Assembly overview (Golf, Golf Plus, Eos, Scirocco)	264
11.2	Checking fuel tank breather (Golf, Golf Plus, Eos, Scirocco)	265
11.3	Rules for cleanliness	265
12	Activated charcoal filter system (Passat)	267
12.1	Assembly overview	267
12.2	Checking fuel tank breather	268
12.3	Rules for cleanliness	269
13	Activated charcoal filter system (Tiguan)	270
13.1	Assembly overview (Tiguan)	270
13.2	Checking fuel tank breather (Tiguan)	271
13.3	Rules for cleanliness	272
21	Turbocharging/supercharging	273
1	Exhaust turbocharger	273
1.1	Assembly overview - turbocharger	273
1.2	Part I	275
1.3	Part II	276



1.4	Removing and installing turbocharger	277
1.5	Removing and installing compressor housing and turbine housing	282
1.6	Checking vacuum unit for turbocharger	286
1.7	Removing and installing vacuum unit for turbocharger	288
1.8	Adjusting vacuum unit for turbocharger	290
2	Charge air system	297
2.1	Assembly overview - charge air system	297
2.2	Removing and installing intake manifold charge air cooler	298
24	Mixture preparation - injection	300
1	Injection system	300
1.1	Assembly overview - parts I and II, intake manifold	300
1.2	Assembly overview - part I, intake manifold	302
1.3	Assembly overview - part II, intake manifold	303
1.4	Assembly overview - fuel rail with injectors	304
1.5	Assembly overview - air filter	304
1.6	Removing and installing air filter	305
1.7	Removing and installing throttle valve module J338	306
1.8	Cleaning throttle valve module J338	309
1.9	Removing and installing intake manifold	310
1.10	Assembly overview - high-pressure pump	311
1.11	Checking fuel pressure sender G247	312
1.12	Removing and installing high-pressure pump	315
1.13	Removing and installing injectors	319
1.14	Renewing Teflon seal and support washer on injector	322
1.15	Safety precautions	325
1.16	Rules for cleanliness	327
1.17	Technical data	327
2	Engine control unit J623	328
2.1	Removing and installing engine control unit J623 (Golf ▶ 2008, Eos)	328
2.2	Removing and installing anti-theft engine control unit J623 (Golf ▶ 2008, Eos ▶ 10.2008)	329
2.3	Removing and installing engine control unit J623 (Golf 2009 ▶)	331
2.4	Removing and installing anti-theft engine control unit J623 (Golf 2009 ▶, Eos 11.2008 ▶, Scirocco 10.2008▶, Passat 2011▶)	333
2.5	Removing and installing engine control unit J623 (Golf Plus)	335
2.6	Removing and installing anti-theft engine control unit J623 (Golf Plus)	336
2.7	Removing and installing engine control unit J623 (Passat 2006 ▶)	339
2.8	Removing and installing anti-theft engine control unit J623 (Passat 2006 ▶)	340
2.9	Removing and installing engine control unit J623 (Scirocco)	341
2.10	Removing and installing anti-theft engine control unit J623 (Scirocco ▶ 09.2008)	342
2.11	Removing and installing engine control unit J623 (Tiguan)	344
2.12	Removing and installing anti-theft engine control unit J623 (Tiguan)	345
26	Exhaust system	348
1	Removing and installing parts of exhaust system	348
1.1	Assembly overview - catalytic converter and attachments	348
1.2	Assembly overview - silencer with mountings (Golf, Golf Plus, Scirocco)	351
1.3	Assembly overview - silencer with mountings (Passat 2006 ▶)	352
1.4	Assembly overview - silencer with mountings (Passat 2011 ▶)	353
1.5	Assembly overview - silencer with mountings (Eos)	354
1.6	Assembly overview - silencer with mountings (Tiguan)	355
1.7	Removing and installing centre and rear silencers (Golf, Golf Plus, Scirocco, Eos)	355
1.8	Detaching centre and rear silencers (Passat)	357
1.9	Detaching centre and rear silencers (Tiguan)	359
1.10	Installation position and specified torque of clamp	360



28 - Ignition system	362
1 Repairing ignition system	362
1.1 Assembly overview - ignition system	362
1.2 Removing and installing ignition coils with output stage	363
1.3 Safety precautions	364
1.4 Test data, spark plugs	365