



Contents

| | |
|---|-----------|
| 00 - Technical data | 1 |
| 1 Technical data | 1 |
| 1.1 Engine number | 1 |
| 1.2 Engine data | 1 |
| 10 - Removing and installing engine | 2 |
| 1 Removing and installing engine (Golf, Golf Plus) | 2 |
| 1.1 Removing engine | 3 |
| 1.2 Securing engine to assembly stand | 8 |
| 1.3 Installing engine | 8 |
| 1.4 Specified torques | 9 |
| 1.5 Assembly mountings | 10 |
| 1.6 Additional information and assembly work for vehicles with air conditioner | 11 |
| 2 Removing and installing engine (Touran) | 12 |
| 2.1 Removing engine | 13 |
| 2.2 Securing engine to assembly stand | 16 |
| 2.3 Installing engine | 16 |
| 2.4 Specified torques | 18 |
| 2.5 Assembly mountings | 19 |
| 2.6 Additional information and assembly work for vehicles with air conditioner | 20 |
| 3 Removing and installing engine (Passat) | 21 |
| 3.1 Removing engine | 22 |
| 3.2 Securing engine to assembly stand | 26 |
| 3.3 Installing engine | 26 |
| 3.4 Specified torques | 27 |
| 3.5 Assembly mountings | 28 |
| 3.6 Notes on repairs to air conditioning system | 28 |
| 4 Removing and installing engine (Eos) | 30 |
| 4.1 Removing engine | 31 |
| 4.2 Securing engine to assembly stand | 35 |
| 4.3 Installing engine | 35 |
| 4.4 Assembly mountings | 38 |
| 13 - Crankshaft group | 40 |
| 1 Dismantling and assembling engine | 40 |
| 1.1 Assembly overview - parts I and II | 40 |
| 1.2 Assembly overview - part I, belt drive | 42 |
| 1.3 Assembly overview - part II, cylinder block | 43 |
| 1.4 Removing and installing poly-V belt | 45 |
| 1.5 Removing and installing valve timing housing (timing case) | 46 |
| 1.6 Removing and installing valve timing housing (Touran) | 50 |
| 2 Sealing flange and flywheel or drive plate | 55 |
| 2.1 Assembly overview | 56 |
| 2.2 Removing and installing engine speed sender G28 | 57 |
| 2.3 Renewing crankshaft oil seal - belt pulley end | 58 |
| 2.4 Poly V-belt pulley securing bolt tightening procedure | 61 |
| 2.5 Characteristics of the sealing flange and the assembly device T10017 and T10134 | 63 |
| 2.6 Renewing crankshaft sealing flange - flywheel end (assembly tool T10134) | 64 |
| 2.7 Renewing crankshaft sealing flange - flywheel end (assembly tool T10017) | 72 |
| 2.8 Renewing crankshaft sealing flange at flywheel end (Eos) | 80 |
| 2.9 Crankshaft dimensions | 88 |
| 3 Dismantling and assembling pistons and conrods | 89 |



| | | |
|-----------|--|------------|
| 3.1 | Assembly overview | 89 |
| 3.2 | Checking piston | 91 |
| 3.3 | Piston and cylinder dimensions | 92 |
| 15 | Cylinder head, valve gear | 93 |
| 1 | Cylinder head | 93 |
| 1.1 | Assembly overview | 93 |
| 1.2 | Checking valve timing | 96 |
| 1.3 | Adjusting valve timing | 97 |
| 1.4 | Removing and installing timing chain and chain drive for oil pump (engine codes BAG, BLP, BLF) | 102 |
| 1.5 | Removing and installing timing chain and chain drive for oil pump (engine codes BKG, BLN) | 109 |
| 1.6 | Removing and installing camshaft housing | 116 |
| 1.7 | Removing and installing cylinder head | 121 |
| 1.8 | Checking compression | 124 |
| 2 | Repairing valve gear | 127 |
| 2.1 | Assembly overview | 127 |
| 2.2 | Checking camshaft axial clearance | 129 |
| 2.3 | Reworking valve seats | 129 |
| 2.4 | Checking valve guides | 131 |
| 2.5 | Renewing valve stem seals | 131 |
| 17 | Lubrication | 134 |
| 1 | Removing and installing parts of lubrication system | 134 |
| 1.1 | Engine oil: | 134 |
| 1.2 | Assembly overview | 134 |
| 1.3 | Removing and installing sump | 137 |
| 1.4 | Removing and installing oil pump | 138 |
| 1.5 | Checking oil pressure and oil pressure switch | 140 |
| 19 | Cooling | 143 |
| 1 | Removing and installing parts of cooling system | 143 |
| 1.1 | Assembly overview - parts of cooling system, body side, radiator with two fans (Golf, Golf Plus) | 144 |
| 1.2 | Assembly overview - parts of cooling system, body side, radiator with one fan (Golf, Golf Plus) | 145 |
| 1.3 | Assembly overview - part of cooling system, body side, radiator with two fans (Touran) | 147 |
| 1.4 | Assembly overview - parts of cooling system, body side, radiator with two fans (Touran) | 148 |
| 1.5 | Assembly overview - parts of cooling system, body side, radiator with two fans (Passat, Eos) | 150 |
| 1.6 | Assembly overview - parts of cooling system, body side, radiator with one fan (Passat, Eos) | 151 |
| 1.7 | Assembly overview - parts of cooling system, engine side | 152 |
| 1.8 | Coolant hose connection diagram | 155 |
| 1.9 | Draining and adding coolant | 155 |
| 1.10 | Removing and installing radiator fan V7 and radiator fan 2 V177 | 159 |
| 1.11 | Removing and installing radiator | 160 |
| 1.12 | Removing and installing coolant pump | 162 |
| 1.13 | Checking cooling system for leaks | 163 |
| 20 | Fuel supply system | 166 |
| 1 | Safety precautions | 166 |
| 1.1 | Safety regulations for working on fuel supply | 166 |
| 1.2 | Releasing pressure in high-pressure area | 166 |
| 2 | Rules for cleanliness | 168 |



| | | |
|-----------|---|------------|
| 3 | Fuel tank (Golf, Golf Plus) | 169 |
| 3.1 | Fuel tank - assembly overview (Golf, Golf Plus) | 169 |
| 3.2 | Emptying fuel tank | 170 |
| 3.3 | Removing and installing fuel tank | 173 |
| 4 | Fuel tank (Touran) | 176 |
| 4.1 | Assembly overview - fuel tank | 176 |
| 4.2 | Emptying fuel tank | 178 |
| 4.3 | Removing and installing fuel tank | 180 |
| 5 | Fuel tank (Passat) | 183 |
| 5.1 | Assembly overview - fuel tank | 183 |
| 5.2 | Emptying fuel tank | 184 |
| 5.3 | Removing and installing fuel tank | 186 |
| 6 | Fuel tank (Eos) | 190 |
| 6.1 | Assembly overview - fuel tank | 190 |
| 6.2 | Emptying fuel tank | 192 |
| 6.3 | Removing and installing fuel tank | 194 |
| 7 | Repairing fuel supply system (Golf, Golf Plus, Eos) | 197 |
| 7.1 | Removing and installing fuel delivery unit | 197 |
| 7.2 | Removing and installing fuel gauge sender G | 200 |
| 7.3 | Crash fuel shut-off | 202 |
| 7.4 | Checking fuel pump | 202 |
| 8 | Repairing fuel supply (Touran) | 214 |
| 8.1 | Removing and installing fuel delivery unit | 214 |
| 8.2 | Removing and installing fuel gauge sender G | 216 |
| 8.3 | Crash fuel shut-off | 218 |
| 8.4 | Checking fuel pump | 218 |
| 9 | Repairing fuel supply (Passat) | 230 |
| 9.1 | Removing and installing fuel delivery unit | 230 |
| 9.2 | Removing and installing fuel gauge sender G | 233 |
| 9.3 | Checking fuel pump | 234 |
| 10 | Electronic power control; EPC (Golf, Golf Plus, Passat, Eos) | 244 |
| 10.1 | Assembly overview - accelerator module | 244 |
| 10.2 | Removing and installing accelerator pedal module | 244 |
| 11 | Electronic power control; EPC (Touran) | 247 |
| 11.1 | Assembly overview - accelerator module | 247 |
| 11.2 | Removing and installing accelerator pedal module | 247 |
| 12 | Activated charcoal filter system (Golf, Golf Plus, Eos) | 249 |
| 12.1 | Assembly overview - activated charcoal filter system | 249 |
| 12.2 | Checking fuel tank breather | 249 |
| 13 | Activated charcoal filter system (Touran) | 252 |
| 13.1 | Checking fuel tank breather | 252 |
| 14 | Activated charcoal filter system (Passat) | 254 |
| 14.1 | Assembly overview - activated charcoal filter system | 254 |
| 14.2 | Checking fuel tank breather | 254 |
| 24 | Mixture preparation - injection | 256 |
| 1 | Injection system | 256 |
| 1.1 | General notes on injection | 256 |
| 1.2 | Technical data | 257 |
| 1.3 | Assembly overview - air filter | 257 |
| 1.4 | Removing and installing air filter | 258 |
| 1.5 | Assembly overview - intake manifold (engine codes BAG, BKG) | 259 |
| 1.6 | Assembly overview - intake manifold (engine codes BLF, BLN, BLP) | 262 |
| 1.7 | Assembly overview - fuel rail with injectors | 264 |



| | | |
|-----------|--|------------|
| 1.8 | Cleaning throttle valve module J338 | 265 |
| 1.9 | Removing and installing high-pressure pump (engine codes BAG, BKG) | 265 |
| 1.10 | Removing and installing high-pressure pump (engine codes BLF, BLN, BLP) | 267 |
| 1.11 | Removing and installing injectors | 271 |
| 2 | Checking components | 276 |
| 2.1 | Checking function of intake manifold flap | 276 |
| 2.2 | Checking vacuum reservoir in intake manifold for leaks | 276 |
| 2.3 | Checking intake air preheating | 277 |
| 3 | Engine control unit J623 (Golf, Eos) | 278 |
| 3.1 | Removing and installing engine (motor) control unit J623 | 278 |
| 3.2 | Removing and installing engine (motor) control unit J623 with protective housing | 279 |
| 4 | Engine control unit J623 (Golf Plus, Touran) | 282 |
| 4.1 | Removing and installing engine (motor) control unit J623 | 282 |
| 4.2 | Removing and installing engine (motor) control unit J623 with protective housing | 283 |
| 5 | Engine control unit J623 (Passat) | 286 |
| 5.1 | Removing and installing engine (motor) control unit J623 | 286 |
| 5.2 | Removing and installing engine control unit J623 with locking plate | 287 |
| 5.3 | Removing and installing engine control unit J623 with locking clip | 290 |
| 26 | - Exhaust system | 292 |
| 1 | Parts of exhaust system (Golf, Golf Plus, Touran) | 292 |
| 1.1 | Assembly overview - catalytic converters and attachments, engine codes BAG, BKG | 292 |
| 1.2 | Assembly overview - catalytic converters and attachments, engine codes BLN, BLP, BLF | 294 |
| 1.3 | Assembly overview - silencers with mountings | 296 |
| 2 | Parts of exhaust system (Passat) | 297 |
| 2.1 | Assembly overview - catalytic converters and attachments | 297 |
| 2.2 | Assembly overview - silencers with mountings | 298 |
| 3 | Parts of exhaust system (Eos) | 300 |
| 3.1 | Assembly overview - catalytic converters and attachments | 300 |
| 3.2 | Assembly overview - silencers with mountings | 302 |
| 3.3 | Separating centre and rear silencers | 302 |
| 4 | Exhaust gas recirculation system | 304 |
| 4.1 | Assembly overview - exhaust gas recirculation system | 304 |
| 4.2 | Removing and installing exhaust gas recirculation valve N18 | 305 |
| 28 | - Ignition system | 307 |
| 1 | Repairing ignition system | 307 |
| 1.1 | General notes on ignition system | 307 |
| 1.2 | Safety precautions | 307 |
| 1.3 | Assembly overview - ignition system | 307 |
| 1.4 | Removing and installing ignition coils with output stage | 308 |
| 1.5 | Test data, spark plugs | 310 |