



Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	4
1.2 Installing engine	11
13 - Crankshaft group	16
1 Cylinder block attachments	16
1.1 Assembly overview - cylinder block attachments	16
1.2 Removing and installing poly-V belt	23
2 Sealing flange and flywheel or drive plate	24
2.1 Assembly overview - sealing flange	24
2.2 Renewing crankshaft oil seal - pulley end	25
2.3 Removing and installing sealing flange - pulley end	27
2.4 Removing and installing crankshaft sealing flange - flywheel end	30
2.5 Removing and installing flywheel	34
2.6 Removing and installing drive plate	35
3 Crankshaft	37
3.1 Assembly overview - crankshaft	37
3.2 Removing and installing sender wheel	38
3.3 Crankshaft dimensions	38
3.4 Identification of crankshaft upper bearing	38
4 Pistons and conrods	40
4.1 Assembly overview - pistons and conrods	40
4.2 Separating new conrod	41
4.3 Bearing shells - installation position	42
4.4 Checking pistons, piston rings and cylinder bores	42
4.5 Piston and cylinder dimensions	44
15 - Cylinder head, valve gear	45
1 Cylinder head	45
1.1 Assembly overview - cylinder head	45
1.2 Removing and installing cylinder head cover	47
1.3 Removing and installing cylinder head	48
1.4 Removing and installing toothed belt, vehicles without split toothed belt guard (Passat) ..	54
1.5 Removing and installing toothed belt, vehicles without split toothed belt guard (Eos) ..	63
1.6 Removing and installing toothed belt, vehicles with split toothed belt guard (Passat) ..	71
1.7 Removing and installing toothed belt, vehicles with split toothed belt guard (Eos) ..	80
1.8 Checking compression	89
2 Valve gear	92
2.1 Assembly overview - valve gear	92
2.2 Valve dimensions	94
2.3 Checking valve guides	94
2.4 Renewing valve stem seals	95
2.5 Renewing exhaust camshaft seal	99
2.6 Removing and installing camshaft adjuster	102
2.7 Removing and installing inlet camshaft control valve 1 N205	106
2.8 Removing and installing camshafts	107



17 - Lubrication	111
1 Parts of lubrication system	111
1.1 Engine oil:	111
1.2 Assembly overview - parts of lubrication system	112
1.3 Drain oiling filter housing	117
1.4 Removing and installing sump, engine codes BLX, BLY, BLR	118
1.5 Removing and installing sump, engine codes BVX, BVY, BVZ	120
1.6 Removing and installing oil pump with balance shaft gear assembly	123
1.7 Removing and installing oil filter bracket	128
1.8 Checking oil pressure and oil pressure switch	129
19 - Cooling	132
1 Parts of cooling system	132
1.1 Assembly overview - parts of cooling system, engine side, (engine codes BLX, BLY, BLR)	132
1.2 Assembly overview - parts of cooling system, engine side, (engine codes BVX, BVY, BVZ)	134
1.3 Assembly overview - parts of cooling system, body side	135
1.4 Coolant hose schematic diagram, (engine codes BLX, BLY, BLR)	136
1.5 Coolant hose schematic diagram, (engine codes BVX, BVY, BVZ)	137
1.6 Draining and adding coolant	138
1.7 Removing and installing coolant pump	142
1.8 Removing and installing coolant pipe	143
1.9 Mapped cooling, (engine codes BLX, BLY, BLR)	144
1.10 Removing and installing coolant distributor housing with thermostat	149
1.11 Removing and installing radiator fan V7 and radiator fan 2 V177	149
1.12 Removing and installing radiator	151
1.13 Checking cooling system for leaks	152
20 - Fuel supply system	155
1 Safety precautions	155
1.1 Safety regulations for working on fuel supply	155
1.2 Releasing pressure in high-pressure area	156
2 Fuel tank, vehicles with four-wheel drive (Passat)	158
2.1 Rules for cleanliness	158
2.2 Assembly overview - fuel tank	158
2.3 Emptying fuel tank	160
2.4 Removing and installing fuel tank (vehicles to 06/2007)	166
2.5 Removing and installing fuel tank (vehicles from 06/2007)	171
2.6 Removing and installing fuel gauge sender 2 G169	176
2.7 Removing and installing suction-jet pump	179
3 Fuel tank, vehicles with front-wheel drive (Passat)	181
3.1 Rules for cleanliness	181
3.2 Assembly overview - fuel tank	181
3.3 Emptying fuel tank	183
3.4 Removing and installing fuel tank	187
4 Fuel tank (Eos)	191
4.1 Rules for cleanliness	191
4.2 Assembly overview - fuel tank	191
4.3 Emptying fuel tank	193
4.4 Removing and installing fuel tank	197
5 Repairing fuel supply system (Passat)	201
5.1 Rules for cleanliness	201
5.2 Removing and installing fuel delivery unit	201
5.3 Removing and installing fuel gauge sender G	206



5.4	Checking fuel pump G6	207
6	Repairing fuel supply system (Eos)	217
6.1	Safety regulations for working on fuel supply	217
6.2	Rules for cleanliness	217
6.3	Removing and installing fuel delivery unit	218
6.4	Removing and installing fuel gauge sender G	221
6.5	Checking fuel pump G6	222
7	Electronic power control (EPC)	235
7.1	Function of EPC system	235
7.2	Assembly overview - accelerator module	235
7.3	Removing and installing accelerator pedal module	236
8	Activated charcoal filter system (Passat)	239
8.1	Function	239
8.2	Assembly overview - activated charcoal filter system	239
8.3	Checking fuel tank breather	240
9	Activated charcoal filter system (Eos)	242
9.1	Function	242
9.2	Assembly overview - activated charcoal filter system	242
9.3	Checking fuel tank breather	243
24 -	Mixture preparation - injection	246
1	Injection system	246
1.1	General notes on injection	246
1.2	Rules for cleanliness	247
1.3	Technical data	247
1.4	Assembly overview - intake manifold	247
1.5	Assembly overview - fuel rail with intake manifold flap motor V157 - (engine codes BLR, BLX, BLY)	251
1.6	Assembly overview - fuel rail with intake manifold flap motor V157 - (engine codes BVX, BVY, BVZ)	252
1.7	Assembly overview - air filter	254
1.8	Removing and installing intake manifold	255
1.9	Removing and installing fuel rail with intake manifold flaps	256
1.10	Assembly overview - high-pressure pump	258
1.11	Removing and installing high-pressure pump	259
1.12	Removing and installing fuel pressure sender G247	261
1.13	Checking fuel pressure sender G247	262
1.14	Removing and installing injectors	266
1.15	Renewing Teflon seal on injector	268
1.16	Cleaning throttle valve module J338	270
2	Checking components	272
3	Engine control unit J623 (Passat)	274
3.1	Removing and installing engine (motor) control unit J623	274
3.2	Removing and installing anti-theft engine control unit J623 (with locking plate)	275
3.3	Removing and installing anti-theft engine control unit J623 (with locking clip)	278
4	Engine control unit J623 (Eos)	281
4.1	Removing and installing engine (motor) control unit J623	281
4.2	Removing and installing anti-theft engine control unit J623	281
26 -	Exhaust system	284
1	Parts of exhaust system	284
1.1	Assembly overview - exhaust manifold with catalytic converter, (engine codes BLR, BLX, BVX)	284
1.2	Assembly overview - exhaust manifold with catalytic converter, (engine code BVY)	286
1.3	Assembly overview - exhaust manifold, (engine codes BLY, BVZ)	287



1.4	Removing and installing exhaust manifold	288
1.5	Assembly overview - exhaust system, engine codes BLR, BVY (Passat)	292
1.6	Assembly overview - exhaust system, engine codes BLX, BVX (Passat)	294
1.7	Assembly overview - exhaust system, engine codes BLY, BVZ (Passat)	296
1.8	Assembly overview - exhaust system, engine code BVY (Eos)	298
1.9	Assembly overview - exhaust system, engine code BVZ (Eos)	300
1.10	Removing and installing front exhaust pipe with catalytic converter	301
1.11	Separating centre and rear silencers	304
1.12	Aligning exhaust system free of stress	308
1.13	Installation position and specified torque of clamp	309
2	Exhaust gas recirculation system, (engine codes BLR, BLX, BVX and BVY)	311
2.1	Assembly overview - exhaust gas recirculation system	311
28	Ignition system	313
1	Repairing ignition system	313
1.1	General notes on ignition system	313
1.2	Safety precautions	313
1.3	Assembly overview - ignition system	313
1.4	Removing and installing ignition coils with output stage	314
1.5	Test data, spark plugs	315