



Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing engine	4
1.2 Securing engine on engine and gearbox support VAS 6095	10
1.3 Installing engine	11
1.4 Specified torques for assembly mounting	13
13 - Crankshaft group	15
1 Dismantling and assembling engine	15
1.1 Part I	16
1.2 Part II	19
1.3 Removing and installing vibration damper	20
1.4 Removing and installing ancillary bracket	22
1.5 Assembly overview - poly V-belt drive	22
1.6 Removing and installing poly V-belt	24
1.7 Removing and installing tensioner for poly V-belt	25
2 Sealing flange and flywheel or drive plate	26
2.1 Assembly overview - sealing flanges and flywheel	26
2.2 Assembly overview - sealing flanges and drive plate	27
2.3 Assembly overview - timing chain covers	28
2.4 Removing and installing crankshaft seal on gearbox side	29
2.5 Removing and installing sealing flange on gearbox side	30
2.6 Removing and installing flywheel	33
2.7 Removing and installing drive plate	34
2.8 Renewing crankshaft sealing flange -vibration damper side-	35
3 Assembly overview - crankshaft	38
3.1 Fitting sender wheel to crankshaft	39
3.2 Pulling needle bearing out of and driving into crankshaft	40
3.3 Allocation of main bearing shells	42
4 Pistons and conrods	47
4.1 Checking piston and cylinder	48
4.2 Piston and cylinder dimensions	52
15 - Cylinder head, valve gear	53
1 Cylinder head	53
1.1 Assembly overview - cylinder head	53
1.2 Removing and installing cylinder head	56
1.3 Checking valve timing	64
1.4 Removing and installing camshaft adjuster	70
1.5 Removing and installing chain drive for oil pump	83
1.6 Removing and installing camshaft drive timing chain, vehicles with vacuum pump	92
1.7 Removing and installing camshaft drive timing chain, vehicles with no vacuum pump	96
1.8 Removing and installing cylinder head cover	100
1.9 Assembly overview - mechanical vacuum pump	102
1.10 Removing and installing mechanical vacuum pump	103
1.11 Installing cover oil seals	105
1.12 Checking compression	106
2 Valve gear	110



2.1	Assembly overview - valve gear	110
2.2	Camshafts, checking axial clearance	112
2.3	Assembly overview - control housing	113
2.4	Removing and installing camshaft control valves	114
2.5	Removing and installing camshafts	118
2.6	Camshaft identification	125
2.7	Renewing valve stem seals	125
2.8	Valve dimensions	128
2.9	Checking valve guides	128
2.10	Reworking valve seats	129
17 - Lubrication	131	
1	Parts of lubrication system	131
1.1	Engine oil	131
1.2	Assembly overview - sump, oil pump and oil filter bracket	132
1.3	Removing and installing oil sump	134
1.4	Removing and installing oil pump	137
1.5	Assembly overview - oil filter housing	145
1.6	Checking oil pressure and oil pressure switch	147
19 - Cooling	150	
1	Parts of cooling system	150
1.1	Assembly overview - parts of cooling system, body side	151
1.2	Assembly overview - additional cooler	153
1.3	Assembly overview - cooling system, engine side	153
1.4	Coolant hose schematic diagram	156
1.5	Draining and filling coolant	157
1.6	Removing and installing fan support with fans	160
1.7	Removing and installing radiator	162
1.8	Removing and installing coolant pump	164
1.9	Removing and installing thermostat	167
1.10	Checking cooling system for leaks	168
20 - Fuel supply system	171	
1	Safety precautions and rules for cleanliness	171
1.1	Safety precautions when working on fuel supply system	171
1.2	Releasing pressure in high-pressure area	172
1.3	Rules for cleanliness	173
2	Fuel tank, vehicles with front-wheel drive	174
2.1	Assembly overview - fuel tank	174
2.2	Emptying fuel tank	176
2.3	Removing and installing fuel tank	180
2.4	Removing and installing fuel gauge sender G	183
3	Fuel tank, vehicles with four-wheel drive	185
3.1	Rules for cleanliness	185
3.2	Assembly overview - fuel tank (engine code AXZ)	185
3.3	Assembly overview - fuel tank (engine code BLV)	188
3.4	Emptying fuel tank	189
3.5	Removing and installing fuel tank (vehicles to 06/2007)	195
3.6	Removing and installing fuel tank (vehicles from 06/2007)	201
3.7	Removing and installing fuel gauge sender 2 G169	206
3.8	Removing and installing suction-jet pump	209
4	Repairing fuel supply	211
4.1	Rules for cleanliness	211
4.2	Removing and installing fuel delivery unit	211



4.3	Removing and installing fuel gauge sender G	216
4.4	Checking fuel pump	217
5	Electronic power control (EPC)	234
5.1	Assembly overview - accelerator module	234
5.2	Removing and installing accelerator module	234
6	Assembly overview - activated charcoal filter system (engine code BLV)	237
6.1	Function	237
6.2	Assembly overview - activated charcoal filter system	237
6.3	Checking fuel system for leaks	238
7	Activated charcoal filter system (engine code AXZ)	246
7.1	Function	246
7.2	Assembly overview - activated charcoal filter system	246
7.3	Checking fuel tank breather	247
24 - Mixture preparation - injection	249	
1	Injection system (vehicles with one-piece manifold)	249
1.1	General notes on the injection system	250
1.2	Rules for cleanliness	250
1.3	Technical data	251
1.4	Assembly overview - intake manifold	251
1.5	Checking vacuum reservoir in intake manifold for leaks	252
1.6	Checking vacuum unit for intake manifold flaps	253
1.7	Assembly overview - fuel rail with high-pressure pump (vehicles up to 07.2007)	255
1.8	Assembly overview - fuel rail with high-pressure pump (vehicles from 07.2007)	257
1.9	Assembly overview - air filter	260
1.10	Checking intake air preheating	261
1.11	Assembly overview - suction-jet pump	261
1.12	Removing and installing intake manifold	262
1.13	Removing and installing high-pressure pump	268
1.14	Checking fuel pressure sender G247	271
1.15	Removing and installing injectors	274
1.16	Renewing Teflon combustion chamber seal and support washer on injector	278
2	Injection system (vehicles with two-piece manifold)	282
2.1	General notes on the injection system	283
2.2	Rules for cleanliness	283
2.3	Technical data	284
2.4	Assembly overview - intake manifold	284
2.5	Assembly overview - fuel rail with high-pressure pump and injectors	285
2.6	Assembly overview - air filter	288
2.7	Checking intake air preheating	289
2.8	Removing and installing intake manifold upper part	289
2.9	Removing and installing intake manifold lower part with fuel rail	292
2.10	Removing and installing high-pressure pump	295
2.11	Checking fuel pressure sender G247	297
2.12	Removing and installing injectors	300
2.13	Renewing Teflon combustion chamber seal and support washer on injector	304
3	Engine control unit J623	308
3.1	Removing and installing engine control unit J623	308
3.2	Removing and installing anti-theft engine control unit J623 (with locking plate)	309
3.3	Removing and installing anti-theft engine control unit J623 (with locking clip)	313
26 - Exhaust system	315	
1	Exhaust system (engine code AXZ)	315
1.1	Assembly overview - exhaust manifold, front exhaust pipe with catalytic converters and front silencers	317



1.2	Removing and installing exhaust manifold	318
1.3	Removing and installing Lambda probe G39 and Lambda probe 2 G108	319
1.4	Removing and installing front exhaust pipes with catalytic converters and front silencers	321
1.5	Assembly overview - silencers with mountings	323
2	Exhaust system (engine code BLV)	327
2.1	Assembly overview - exhaust manifold, front exhaust pipe with catalytic converters and front silencers	329
2.2	Removing and installing exhaust manifold	331
2.3	Removing and installing Lambda probe G39 and Lambda probe 2 G108	332
2.4	Removing and installing front exhaust pipes with catalytic converters and front silencers (vehicles with four-wheel drive)	333
2.5	Removing and installing front exhaust pipes with catalytic converters and front silencers (vehicles with front-wheel drive)	335
2.6	Assembly overview - silencer with mountings (front-wheel drive)	338
2.7	Assembly overview - silencer with mountings (four-wheel drive)	340
28	- Ignition system	345
1	Ignition system	345
1.1	General notes on ignition system	345
1.2	Assembly overview - ignition system	345
1.3	Test data, spark plugs	347
1.4	Removing and installing ignition coils with output stage	347