



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	3
2.1 Safety precautions when working on fuel system	3
2.2 Safety precautions when using testers and measuring instruments during a road test	4
2.3 Safety measures when working on vehicles with a start/stop system	4
2.4 Safety precautions when working on the cooling system	4
2.5 Safety precautions when working on the SCR system	5
2.6 Safety precautions when working on exhaust system	5
3 Repair notes	7
3.1 Rules for cleanliness	7
3.2 Foreign objects in engine	7
3.3 Checking vacuum system	8
10 - Removing and installing engine	9
1 Removing and installing engine	9
1.1 Removing and installing engine	9
1.2 Securing engine on engine and gearbox support	22
1.3 Installing engine	23
2 Assembly mountings	27
2.1 Assembly overview - assembly mountings	27
2.2 Supporting engine in installation position	28
2.3 Adjusting assembly mountings	36
3 Engine cover panel	41
3.1 Removing and installing engine cover	41
13 - Crankshaft group	42
1 Cylinder block (pulley end)	42
1.1 Assembly overview - poly V-belt drive	42
1.2 Removing and installing poly-V belt	46
1.3 Removing and installing tensioner for poly V-belt	50
1.4 Removing and installing bracket for ancillaries	51
1.5 Removing and installing engine bracket	53
1.6 Assembly overview - cylinder block (pulley end)	63
1.7 Removing and installing sealing flange on pulley end	64
1.8 Renewing crankshaft oil seal - belt pulley end	66
2 Cylinder block, gearbox end	69
2.1 Assembly overview - cylinder block, gearbox end	69
2.2 Removing and installing sealing flange on gearbox side	70
3 Crankshaft	79
3.1 Assembly overview - crankshaft	79
3.2 Renewing needle bearing in crankshaft	79
3.3 Crankshaft dimensions	82
4 Pistons and conrods	83
4.1 Assembly overview - pistons and conrods	83
4.2 Measuring piston projection at TDC	86
4.3 Separating new conrod	87
15 - Cylinder head, valve gear	89
1 Cylinder head	89
1.1 Assembly overview - cylinder head	89



1.2	Removing and installing cylinder head	91
1.3	Assembly overview - cylinder head cover	100
1.4	Removing and installing cylinder head cover	101
1.5	Removing and installing vacuum pump	104
1.6	Checking compression	105
2	Toothed belt drive	107
2.1	Assembly overview - toothed belt	107
2.2	Removing and installing toothed belt	109
3	Valve gear	116
3.1	Assembly overview - valve gear	116
3.2	Removing and installing camshaft oil seal	117
3.3	Removing and installing camshaft	121
3.4	Removing and installing valve stem seals	128
4	Inlet and exhaust valves	133
4.1	Valve dimensions	133
4.2	Reworking valve seats	133
4.3	Checking valve guides	133
17 - Lubrication		134
1	Sump, oil pump	134
1.1	Assembly overview - sump/oil pump	134
1.2	Removing and installing oil sump	140
1.3	Removing and installing oil pump	143
1.4	Engine oil:	144
2	Engine oil cooler	146
2.1	Assembly overview - engine oil cooler	146
3	Oil filter, oil pressure switch	148
3.1	Assembly overview - oil filter/oil pressure switch	148
3.2	Removing and installing oil filter housing	149
3.3	Checking oil pressure and oil pressure switch	152
4	Oil circuit	154
4.1	Removing and installing oil supply line for turbocharger	154
5	Balancer shaft module	156
5.1	Assembly overview - balancer shaft module	156
5.2	Removing and installing balance shaft module	159
19 - Cooling		170
1	Cooling system/coolant	170
1.1	Coolant hose connection diagram	170
1.2	Checking cooling system for leaks	174
1.3	Draining and adding coolant	178
1.4	Assembly overview - engine preheater	182
2	Coolant pump, regulation of cooling system	186
2.1	Removing and installing coolant pump	186
2.2	Removing and installing thermostat	187
2.3	Removing and installing 4/2-way valve with thermostat	189
3	Coolant pipes	191
3.1	Assembly overview - coolant pipes	191
4	Radiator, radiator fan	195
4.1	Assembly overview - radiator/radiator fan	195
4.2	Removing and installing radiator	198
4.3	Removing and installing radiator cowl with radiator fan	199
21 - Turbocharging/supercharging		200



1	Exhaust turbocharger	200
1.1	Assembly overview - turbocharger	200
1.2	Removing and installing turbocharger	206
1.3	Renewing vacuum unit for turbocharger	210
2	Charge air system	218
2.1	Assembly overview - charge air system	218
2.2	Assembly overview - charge-air hose connections	220
2.3	Checking charge air system for leaks	221
23	- Mixture preparation - injection	224
1	Injection system	224
1.1	Schematic overview - fuel system	224
1.2	Assembly overview - fuel system	226
1.3	Filling/bleeding fuel system	229
1.4	Checking fuel system for leaks	230
2	Injectors/high-pressure accumulator (rail)	231
2.1	Check pressure retention valve in fuel return line	231
2.2	Removing and installing injectors	232
2.3	Removing and installing high-pressure lines	236
2.4	Removing and installing fuel rail	238
3	Vacuum system	242
3.1	Assembly overview - vacuum system	242
3.2	Checking vacuum system	243
4	Air filter	247
4.1	Assembly overview - air filter housing	247
4.2	Removing and installing air filter housing	249
4.3	Checking changeover flap for intake air preheating	250
4.4	Removing and installing changeover flap for intake air preheating	251
5	Intake manifold	254
5.1	Assembly overview - intake manifold	254
5.2	Removing and installing intake manifold	254
6	Senders and sensors	258
6.1	Checking fuel pressure regulating valve	258
6.2	Removing and installing fuel pressure regulating valve N276	259
6.3	Removing and installing fuel pressure sender	261
6.4	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound	262
7	High-pressure pump	265
7.1	Removing and installing high-pressure pump	265
8	Engine (motor) control unit	269
8.1	Removing and installing engine control unit	269
9	Lambda probe	287
9.1	Removing and installing lambda probe	287
26	- Exhaust system	291
1	Exhaust pipes and silencers	291
1.1	Assembly overview - silencers	291
1.2	Separating exhaust pipes from silencers	299
1.3	Aligning exhaust system free of stress	301
1.4	Check exhaust system for leaks	303
1.5	Installation position of clamp	304
2	Exhaust gas cleaning	306
2.1	Assembly overview - emission control	306
2.2	Removing and installing particulate filter	316



2.3	Removing and installing particulate filter with NOx storage catalytic converter	324
2.4	Removing and installing NOx storage catalytic converter	332
3	SCR system (selective catalytic reduction)	334
3.1	Assembly overview - tank for reducing agent	334
3.2	Draining reducing agent tank	335
3.3	Removing and installing reducing agent tank	338
3.4	Assembly overview - delivery module for reducing agent	340
3.5	Assembly overview - reducing agent delivery line	342
3.6	Removing and installing reducing agent supply line	343
3.7	Removing and installing injector for reducing agent	345
3.8	Removing and installing heater element (heater cup)	346
4	Exhaust gas recirculation	351
4.1	Assembly overview - exhaust gas recirculation	351
4.2	Removing and installing exhaust gas recirculation filter	354
4.3	Removing and installing exhaust gas recirculation cooler	356
4.4	Checking exhaust gas recirculation cooler for leaks	360
4.5	Removing and installing temperature sensor for exhaust gas recirculation	363
4.6	Cleaning exhaust gas recirculation system	367
28	Glow plug system	374
1	Glow plug system	374
1.1	Removing and installing automatic glow period control unit J179	374
1.2	Removing and installing glow plug	375
1.3	Removing and installing Hall sender	382
1.4	Removing and installing engine speed sender	386