



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Engine number	1
1.2 Engine data	1
<b>2 Safety instructions</b>	<b>3</b>
2.1 Safety precautions when working on fuel supply system	3
2.2 Safety precautions for when using test and measuring equipment during a road test	4
2.3 Safety precautions when working on cooling system	4
<b>3 General repair notes</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 Foreign objects in engine	5
<b>10 - Removing and installing engine</b>	<b>6</b>
<b>1 Removing and installing engine</b>	<b>6</b>
1.1 Removing engine (Golf, Golf Plus)	6
1.2 Removing engine (Touran)	11
1.3 Removing engine (Passat)	17
1.4 Securing engine to assembly stand	24
1.5 Notes on installing	25
1.6 Assembly mountings	27
<b>13 - Crankshaft group</b>	<b>29</b>
<b>1 Dismantling and assembling engine</b>	<b>29</b>
1.1 Assembly overview - poly V-belt drive	29
1.2 Assembly overview - toothed belt drive	32
1.3 Removing and installing engine support	34
1.4 Assembly overview - crankcase	36
<b>2 Removing and installing sealing flange and flywheel</b>	<b>38</b>
2.1 Assembly overview - sealing flanges and flywheel	38
2.2 Removing and installing dual-mass flywheel	39
2.3 Renewing crankshaft oil seal - pulley end	40
2.4 Removing and installing sealing flange - pulley end	42
2.5 Renewing crankshaft sealing flange - flywheel end	45
<b>3 Crankshaft</b>	<b>52</b>
3.1 Assembly overview - crankshaft	52
<b>4 Pistons and conrods</b>	<b>58</b>
4.1 Assembly overview - pistons and conrods	58
4.2 Separating new conrod	59
4.3 Checking piston projection at TDC	60
4.4 Piston and cylinder dimensions	61
4.5 Piston rings, cylinder bore and piston installation position	61
<b>15 - Cylinder head, valve gear</b>	<b>64</b>
<b>1 Cylinder head</b>	<b>64</b>
1.1 Assembly overview - cylinder head	64
1.2 Removing and installing cylinder head cover	67
1.3 Removing, installing and tensioning toothed belt	70
1.4 Removing and installing cylinder head	88
1.5 Checking compression	93
<b>2 Valve gear</b>	<b>96</b>
2.1 Assembly overview - valve gear	96
2.2 Checking valve guides	98



2.3	Renewing valve stem seals	99
2.4	Removing and installing camshaft	101
2.5	Removing and installing camshaft oil seal	105
<b>17</b>	<b>- Lubrication</b>	<b>108</b>
<b>1</b>	<b>Engine oil</b>	<b>108</b>
1.1	Oil capacities	108
1.2	Checking engine oil level, observing differences in dip sticks	108
<b>2</b>	<b>Parts of lubrication system</b>	<b>110</b>
2.1	Assembly overview - oil pump, sump	110
2.2	Removing and installing oil sump	111
<b>3</b>	<b>Oil filter bracket, oil pressure, engine oil cooler and oil supply line</b>	<b>115</b>
3.1	Assembly overview - oil filter bracket and engine oil cooler	115
3.2	Checking oil pressure and oil pressure switch	116
3.3	Assembly overview - oil supply line to turbocharger	117
3.4	Removing and installing oil supply line to turbocharger	118
<b>19</b>	<b>- Cooling</b>	<b>121</b>
<b>1</b>	<b>Parts of cooling system</b>	<b>121</b>
1.1	Coolant hoses	122
1.2	Draining and filling coolant	125
1.3	Coolant pump, regulation of cooling system	129
1.4	Parts of cooling system, body side (radiator with two fans)	133
1.5	Assembly overview - parts of cooling system, body side (radiator with one fan)	135
1.6	Removing and installing fan support with fans (Golf, Golf Plus, Touran)	135
1.7	Removing and installing fan support with fans (Passat)	137
1.8	Parts of cooling system - engine side	137
1.9	Removing and installing radiator (Golf, Golf Plus, Touran)	140
1.10	Removing and installing radiator (Passat)	141
1.11	Checking engine oil cooler for leaks	142
<b>20</b>	<b>- Fuel supply system</b>	<b>144</b>
<b>1</b>	<b>Safety precautions</b>	<b>144</b>
1.1	Safety precautions when working on fuel supply system	144
<b>2</b>	<b>Rules for cleanliness</b>	<b>145</b>
2.1	Rules for cleanliness when working on fuel supply system	145
<b>3</b>	<b>Parts of fuel supply system (Golf, Golf Plus)</b>	<b>146</b>
3.1	Fuel tank, vehicles with front-wheel drive	146
3.2	Fuel tank, vehicles with four-wheel drive	149
3.3	Emptying fuel tank	156
3.4	Removing and installing fuel delivery unit	158
3.5	Removing and installing fuel gauge sender	159
3.6	Checking fuel pump	160
3.7	Assembly overview - fuel filter	164
3.8	Removing and installing fuel cooler	166
<b>4</b>	<b>Parts of fuel supply system (Touran)</b>	<b>168</b>
4.1	Assembly overview - fuel tank with attachments	168
4.2	Emptying fuel tank	170
4.3	Removing and installing fuel tank	173
4.4	Assembly overview - fuel filter	174
4.5	Removing and installing fuel cooler	176
4.6	Removing and installing fuel delivery unit	176
4.7	Removing and installing fuel gauge sender	178
4.8	Checking fuel pump	179
<b>5</b>	<b>Parts of fuel supply system (Passat)</b>	<b>184</b>



5.1	Fuel tank, vehicles with front-wheel drive	184
5.2	Emptying fuel tank, vehicles with front-wheel drive	191
5.3	Checking fuel pump	193
5.4	Assembly overview - fuel filter	198
5.5	Removing and installing fuel cooler	200
<b>6</b>	<b>Accelerator mechanism</b>	<b>202</b>
6.1	Assembly overview - accelerator mechanism	202
<b>7</b>	<b>Tandem pump</b>	<b>204</b>
7.1	Checking tandem pump	204
7.2	Removing and installing tandem pump	207
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>210</b>
<b>1</b>	<b>Turbocharger</b>	<b>210</b>
1.1	Safety precautions	210
1.2	Rules for cleanliness	210
1.3	Assembly overview - turbocharger	211
1.4	Removing and installing turbocharger	224
1.5	Vacuum hose schematic diagram	226
<b>2</b>	<b>Charge air system</b>	<b>229</b>
2.1	Assembly overview - parts of charge air cooling	229
2.2	Hose connections	232
2.3	Checking charge air system for leaks	233
<b>23</b>	<b>Mixture preparation - injection</b>	<b>236</b>
<b>1</b>	<b>Injection system</b>	<b>236</b>
1.1	Safety precautions	236
1.2	Rules for cleanliness	237
1.3	Removing and installing pre-wired wiring harness for unit injectors and glow plugs	237
1.4	Assembly overview - unit injector	240
1.5	Removing and installing unit injector	241
1.6	Adjusting non-contact gap of unit injectors	243
1.7	Removing and installing O-rings for unit injector	244
<b>2</b>	<b>Air filter</b>	<b>246</b>
2.1	Assembly overview - air filter	246
<b>3</b>	<b>Intake manifold</b>	<b>247</b>
3.1	Assembly overview - intake manifold	247
<b>4</b>	<b>Engine control unit</b>	<b>251</b>
4.1	Reading and deleting engine control unit event memory	251
4.2	Adapting functions and components	252
4.3	Removing and installing engine control unit (Golf)	253
4.4	Removing and installing anti-theft engine control unit (Golf)	253
4.5	Removing and installing engine control unit (Golf Plus)	256
4.6	Removing and installing anti-theft engine control unit (Golf Plus)	256
4.7	Removing and installing engine control unit (Touran)	258
4.8	Removing and installing anti-theft engine control unit (Touran)	259
4.9	Engine control unit (Passat)	261
<b>26</b>	<b>Exhaust system</b>	<b>267</b>
<b>1</b>	<b>Exhaust system</b>	<b>267</b>
1.1	Assembly overview - front exhaust pipe with catalytic converter	267
1.2	Assembly overview - silencer with mountings (vehicles with front wheel drive)	268
1.3	Assembly overview - silencers (Passat)	270
1.4	Assembly overview - silencer with mountings (vehicles with four-wheel drive)	271
1.5	Aligning exhaust system free of stress	272
<b>2</b>	<b>Emission control</b>	<b>273</b>



2.1	Assembly overview - front exhaust pipe with particulate filter .....	273
<b>3</b>	<b>Exhaust gas recirculation</b> .....	<b>276</b>
3.1	Assembly overview - parts of exhaust gas recirculation .....	276
3.2	Checking mechanical exhaust gas recirculation valve .....	280
<b>28</b>	<b>Glow plug system</b> .....	<b>281</b>
<b>1</b>	<b>Glow plug system</b> .....	<b>281</b>
1.1	Removing, installing and checking glow plugs .....	281
1.2	Characteristics of ceramic glow plugs .....	282
1.3	Removing, installing and checking ceramic glow plugs .....	282
1.4	Removing and installing engine speed sender G28 .....	284