



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety precautions when working on a high-voltage system	1
1.3 Safety precautions when working in the vicinity of high-voltage components	2
2 Identification	3
2.1 Allocation of PR number - brakes	3
3 Technical data	4
3.1 Technical data for brakes	4
4 Brake test	5
4.1 General information	5
4.2 Checking vehicles with front-wheel drive	5
4.3 Checking parking brake	5
45 - Anti-lock brake system	7
1 General information	7
1.1 Repair instructions for repair work on ABS	7
2 Overview of fitting locations	10
2.1 Overview of fitting locations - ABS/ESP	10
3 Control unit and hydraulic unit	12
3.1 Assembly overview - control unit and hydraulic unit	12
3.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	19
3.3 Connecting brake lines to hydraulic unit	29
3.4 Separating control unit from hydraulic unit	31
3.5 Fitting control unit to hydraulic unit	33
4 Sensors	35
4.1 Assembly overview - speed sensor on front axle	35
4.2 Assembly overview - speed sensor on rear axle	36
4.3 Removing and installing ESP sensor unit G419	36
4.4 Removing and installing speed sensors on front axle G45 / G47	36
4.5 Checking ABS sensor ring	37
4.6 Removing and installing speed sensors on rear axle G44 / G46	38
4.7 Removing and installing steering angle sender G85	39
46 - Brakes - mechanism	40
1 Front brakes	40
1.1 Assembly overview - front brakes	40
1.2 Removing and installing brake pads/linings	41
1.3 Removing and installing brake caliper	44
2 Rear brakes	47
2.1 Assembly overview - rear brakes	47
2.2 Removing and installing brake pads/linings	49
2.3 Removing and installing brake caliper	53
3 Parking brake	58
3.1 Overview of fitting locations - parking brake	58
3.2 Removing and installing control unit for electromechanical parking brake J540	59
3.3 Removing and installing parking brake motor V282 / V283	59
4 Brake pedal	62
4.1 Assembly overview - brake pedal	62
4.2 Separating brake pedal from brake servo	65
4.3 Connecting brake pedal to brake servo	66



4.4	Removing and installing brake pedal	67
4.5	Removing and installing mounting bracket	68
47	Brakes - hydraulics	73
1	Front brake caliper	73
1.1	Assembly overview - front brake caliper	73
1.2	Removing and installing brake caliper piston	74
2	Rear brake caliper	77
2.1	Assembly overview - rear brake caliper	77
2.2	Removing and installing protective cap	77
3	Brake servo and brake master cylinder	81
3.1	Assembly overview - brake servo/brake master cylinder	81
3.2	Assembly overview – brake system pressure accumulator VX70	88
3.3	Removing and installing brake master cylinder	91
3.4	Removing and installing brake system pressure accumulator VX70	101
3.5	Removing and installing brake servo	111
4	Brake lines	125
4.1	Repairing brake lines	125
5	Hydraulic system	130
5.1	General notes on brake fluid	130
5.2	Bleeding hydraulic system following standard procedure	130
5.3	Subsequent bleeding of hydraulic system	132
5.4	Pre-bleeding brake system pressure accumulator VX70	133
5.5	Testing for leaks	133