



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when working on high-voltage system	1
1.3 Safety precautions when working in the vicinity of high-voltage components	2
1.4 Safety precautions when working on subframe	2
2 Repair instructions	3
2.1 Leaks at shock absorbers	3
2.2 Noises from shock absorbers	3
2.3 Checking shock absorbers when removed	4
2.4 Steering rack	4
2.5 Gaskets and seals	5
2.6 Nuts and bolts	5
2.7 Electrical components	5
2.8 Raising suspension to unladen position (vehicles with coil springs)	6
3 Evaluating accident vehicles	10
3.1 Check list for evaluating running gear on accident vehicles	10
4 Disposal	12
4.1 Releasing gas and draining front gas-filled shock absorbers	12
4.2 Releasing gas and draining rear gas-filled shock absorbers	14
40 - Front suspension	16
1 Front axle	16
1.1 Overview of fitting locations – front axle	16
2 Subframe	19
2.1 Assembly overview – subframe	19
2.2 Removing and installing subframe without steering rack	19
2.3 Removing and installing subframe with steering rack	25
2.4 Repairing subframe	33
2.5 Repairing thread in longitudinal member	46
2.6 Fixing subframe in position	46
2.7 Lowering subframe	50
3 Anti-roll bar	56
3.1 Assembly overview – anti-roll bar	56
3.2 Removing and installing anti-roll bar	56
3.3 Removing and installing coupling rod	62
4 Suspension strut, upper suspension link	64
4.1 Assembly overview - suspension strut, upper suspension link	64
4.2 Removing and installing suspension strut	65
4.3 Repairing suspension strut	76
5 Lower suspension link, swivel joint	81
5.1 Assembly overview - lower suspension link, swivel joint	81
5.2 Removing and installing lower suspension link	82
5.3 Checking swivel joint	96
5.4 Removing and installing swivel joint	96
5.5 Renewing front bonded rubber bush for lower suspension link	101
5.6 Renewing rear bonded rubber bush for lower suspension link	105
6 Wheel bearing	109
6.1 Assembly overview – wheel bearing assembly	109
6.2 Removing and installing wheel bearing housing	109
6.3 Removing and installing wheel bearing unit	116



7	Drive shaft	121
7.1	Overview - drive shaft	121
7.2	Assembly overview – drive shaft	122
7.3	Removing and installing drive shaft	128
7.4	Loosening and tightening threaded connections of drive shaft	150
7.5	Removing and installing drive shaft heat shield	151
7.6	Dismantling and assembling drive shaft	152
7.7	Checking outer constant velocity joint	176
7.8	Checking inner constant velocity joint	177
42	- Rear suspension	181
1	Rear axle	181
1.1	Overview – rear axle	181
1.2	Lowering rear axle	183
1.3	Removing and installing rear axle	193
1.4	Removing and installing shield for rear axle	207
2	Subframe	209
2.1	Assembly overview – subframe	209
2.2	Assembly overview - add-on parts for subframe	210
2.3	Fixing subframe in position	211
2.4	Repairing subframe	226
3	Anti-roll bar	241
3.1	Assembly overview – anti-roll bar	241
3.2	Removing and installing anti-roll bar	242
3.3	Removing and installing coupling rod	244
4	Suspension link, track rod	247
4.1	Assembly overview - transverse link	247
4.2	Assembly overview – track rod	251
4.3	Removing and installing upper transverse link	252
4.4	Removing and installing lower transverse link	253
4.5	Removing and installing track rod	255
5	Suspension strut, shock absorber, spring	258
5.1	Assembly overview - suspension strut, shock absorber, spring	258
5.2	Removing and installing shock absorber	259
5.3	Repairing shock absorber	263
5.4	Removing and installing spring	265
6	Wheel bearing assembly, trailing arm	273
6.1	Assembly overview – wheel bearing assembly	273
6.2	Assembly overview - trailing arm	275
6.3	Removing and installing wheel bearing housing	276
6.4	Removing and installing wheel bearing unit	288
6.5	Renewing bonded rubber bush for wheel bearing housing	296
6.6	Removing and installing trailing arm with mounting bracket	299
6.7	Repairing trailing arm	303
7	Drive shaft	314
7.1	Assembly overview – drive shaft	314
7.2	Loosening and tightening threaded connections of drive shaft	318
7.3	Removing and installing drive shaft	319
7.4	Dismantling and assembling drive shaft	327
7.5	Checking outer constant velocity joint	332
7.6	Checking inner constant velocity joint	334
43	- Self-levelling suspension	337
1	Electronic damping control	337
1.1	Overview of fitting locations - electronically controlled damping system	337



1.2	Removing and installing electronically controlled damping control unit J250	339
1.3	Removing and installing front body acceleration senders G341/G342	342
1.4	Removing and installing rear left body acceleration sender G699	344
2	Vehicle level sender	349
2.1	Assembly overview – front vehicle level senders	349
2.2	Assembly overview – rear vehicle level senders	350
2.3	Removing and installing front vehicle level senders G78/G289	351
2.4	Removing and installing rear vehicle level senders G76/G77	353
44	- Wheels, tyres, vehicle geometry	356
1	Wheel alignment	356
1.1	Notes for wheel alignment	356
1.2	Conditions for testing	357
1.3	Test preparations	357
1.4	Specifications for wheel alignment	359
1.5	Wheel alignment procedure	362
1.6	Necessity of wheel alignment	364
1.7	Vehicle data sticker	365
1.8	Adjusting camber at front wheels	365
1.9	Adjusting camber on rear axle	367
1.10	Adjusting toe at rear axle	369
1.11	Adjusting front axle toe	369
1.12	Wheel runout compensation	371
1.13	Checking maximum steering wheel angle	371
2	Adaptive cruise control	373
2.1	Calibrating adaptive cruise control	373
3	Front camera for assist systems	385
3.1	Calibrating front camera for driver assist systems	385
48	- Steering	393
1	Steering wheel	393
1.1	Assembly overview – steering wheel	393
1.2	Removing and installing steering wheel	393
2	Steering column	396
2.1	Assembly overview – steering column	396
2.2	Checking steering column for damage	397
2.3	Handling and transporting steering column	398
2.4	Removing and installing steering column	399
2.5	Removing and installing control unit for electronic steering column lock J764	409
3	Steering rack	412
3.1	Assembly overview – steering rack	412
3.2	Removing and installing steering rack	417
3.3	Removing and installing bellows	428
3.4	Removing and installing track rod	431
3.5	Removing and installing track rod ball joint	436
3.6	Repairing steering rack	438
4	Sensors	443
4.1	Removing and installing steering angle sender G85	443