



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 Repair instructions	2
2.1 Contact corrosion	2
2.2 Routing and attachment of lines	2
3 Battery	3
3.1 Battery - general notes	3
3.2 Types of battery	3
27 - Starter, current supply, CCS	4
1 Battery	4
1.1 Assembly overview – battery	4
1.2 Removing and installing battery	7
1.3 Disconnecting and connecting battery	14
1.4 Removing and installing battery tray	18
1.5 Checking battery	20
1.6 Charging battery	20
1.7 Removing and installing earth wire with battery monitor control unit J367	20
1.8 Adapting battery monitor control unit J367	23
2 Alternator	24
2.1 Assembly overview - alternator	24
2.2 Removing and installing alternator	26
2.3 Checking alternator	33
2.4 Removing and installing poly V-belt pulley	34
2.5 Removing and installing voltage regulator	43
3 Starter motor	47
3.1 Assembly overview – starter	47
3.2 Removing and installing starter	49
4 Cruise control system (CCS)	57
5 Start/stop system	58
5.1 General description - start/stop system	58
5.2 Overview of fitting locations - start/stop system	58
5.3 Removing and installing voltage stabiliser	59
6 Adaptive cruise control	61
6.1 Overview of fitting locations - adaptive cruise control	61
6.2 Removing and installing automatic distance control unit	62
6.3 Calibrating adaptive cruise control	63
90 - Gauges, instruments	65
1 Dash panel insert	65
1.1 Assembly overview - dash panel insert	65
1.2 Assembly overview - head-up display	67
1.3 Removing and installing dash panel insert KX2	69
1.4 Removing and installing control unit for head-up display	74
2 Clock	76
2.1 Removing and installing clock	76
3 Horn	77
3.1 Assembly overview - horn	77
3.2 Removing and installing treble horn H2 and bass horn H7	77



92 - Windscreen wash/wipe system	80
1 Windscreen wiper system	80
1.1 Assembly overview - windscreen wiper system	80
1.2 Moving wipers to service position	83
1.3 Removing and installing wiper blade	84
1.4 Removing and installing wiper arms	85
1.5 Adjusting wiper arms	87
1.6 Removing and installing wiper motor V	88
1.7 Renewing wiper motor	90
1.8 Deactivating APP function of wiper motor	92
1.9 Removing and installing rain and light sensor	93
2 Windscreen washer system	97
2.1 Assembly overview - windscreen washer system	97
2.2 Removing and installing washer fluid reservoir	103
2.3 Removing and installing windscreen washer fluid level sender	107
2.4 Removing and installing windscreen washer pump	109
2.5 Removing and installing spray jets	111
2.6 Adjusting spray jets	112
3 Rear window wiper system	114
3.1 Assembly overview - rear window wiper system	114
3.2 Removing and installing wiper blade	114
3.3 Removing and installing wiper arm	115
3.4 Adjusting wiper arm	116
3.5 Removing and installing rear window wiper motor V12	117
4 Rear window washer system	120
4.1 Assembly overview - rear window washer system	120
4.2 Removing and installing washer fluid reservoir	121
4.3 Removing and installing rear window washer pump	122
4.4 Removing and installing spray jet	122
4.5 Adjusting spray jet	122
5 Headlight washer system	123
5.1 Assembly overview - headlight washer system	123
5.2 Removing and installing washer fluid reservoir	124
5.3 Removing and installing headlight washer system pump V11	125
5.4 Removing and installing pop-up cylinder	126
5.5 Removing and installing spray jets	129
5.6 Adjusting spray jets	130
6 Washer fluid lines	131
6.1 Repairing washer fluid lines	131
94 - Lights, bulbs, switches - exterior	132
1 Headlights	133
1.1 Assembly overview – headlight	133
1.2 Removing and installing headlight	142
1.3 Adjusting headlights	146
1.4 Adjusting headlight installation position	146
1.5 Removing and installing front turn signal bulb M5/M7	148
1.6 Installing repair kit for headlight housing	149
1.7 Converting headlights from driving on right to driving on left	152
1.8 Converting headlights from driving on left to driving on right	152
1.9 Removing and installing headlight range control motor V48/V49	153
1.10 Removing and installing dipped-beam headlight bulb	160
1.11 Removing and installing headlight main beam bulb M30/M32	165
1.12 Removing and installing side light bulb M1/M3	172



1.13	Removing and installing daytime running light bulb L174/L175	174
1.14	Removing and installing LED modules for daytime running light and side light L176/L177	176
1.15	Removing and installing bulbs for cornering light L148/L149	178
1.16	Removing and installing headlight fan V407/V408	180
1.17	Removing and installing output module for headlight J667/J668	182
1.18	Removing and installing control unit for daytime running light and side light J860/J861	184
1.19	Removing and installing output module 1 for LED headlights A27/A31	186
1.20	Removing and installing control motor sender for VARILIS headlight G695/G696	189
1.21	Removing and installing control motor for VARILIS headlight V446/V447	189
1.22	Removing and installing swivel module position sensor G474/G475	190
1.23	Removing and installing dynamic cornering light control motor V318/V319	190
2	Fog lights	191
2.1	Assembly overview - fog lights	191
2.2	Removing and installing fog light	191
2.3	Removing and installing fog light bulb L22/L23	193
3	Lights in exterior mirror	195
3.1	Assembly overview - lights in exterior mirror	195
3.2	Removing and installing turn signal	197
3.3	Removing and installing entry light in exterior mirror	199
4	Tail light clusters	200
4.1	Assembly overview - tail light cluster in body	200
4.2	Assembly overview - tail lights in rear lid	201
4.3	Removing and installing tail light in rear lid	202
4.4	Adjusting installation position of tail light	204
4.5	Removing and installing tail light cluster	205
4.6	Removing and installing tail light bulb M2/M4	205
4.7	Removing and installing rear fog light bulb L46/L47	206
4.8	Removing and installing brake and tail light bulb M21/M22	206
4.9	Removing and installing reversing light bulb	206
4.10	Removing and installing turn signal bulb	206
5	High-level brake light	207
5.1	Assembly overview – high-level brake light	207
5.2	Removing and installing high-level brake light	208
6	Number plate light	212
6.1	Removing and installing number plate light X4/X5	212
6.2	Removing and installing bulb for number plate ligt X4/X5	214
7	Entry and start authorisation system	215
7.1	Overview of fitting locations - entry and start authorisation system	215
7.2	Overview of fitting locations - keyless entry system	217
7.3	Removing and installing interface for entry and start system J965	220
7.4	Removing and installing door exterior handle contact sensor G415/G416	222
7.5	Removing and installing contact sensor for rear exterior door handle G417/G418	222
7.6	Removing and installing interior aerial 1 for entry and start system R138	222
7.7	Removing and installing interior aerial 2 for entry and start system R139	223
7.8	Removing and installing driver side aerial for entry and start system R134	224
7.9	Removing and installing front passenger side aerial for entry and start system R135	224
7.10	Removing and installing rear bumper aerial for entry and start system R136	225
7.11	Removing and installing luggage compartment aerial for entry and start system R137	225
7.12	Removing and installing rear entry and start authorisation aerial R165/R166	226
7.13	Removing and installing rear lid power opening control unit J938	226
7.14	Removing and installing rear lid power opening sender G750/G760	227
8	Steering column switch module	228
8.1	Assembly overview - steering column switch module	228
8.2	Removing and installing steering column switch module	230
8.3	Removing and installing steering column electronics control unit J527	235



8.4	Removing and installing turn signal switch E2	241
8.5	Removing and installing intermittent wiper switch E22	244
8.6	Removing and installing immobiliser reader coil D2	244
8.7	Removing and installing base for steering column combination switch	244
9	Parking aid	246
9.1	Assembly overview – parking aid	246
9.2	Removing and installing parking aid control unit J446	250
9.3	Removing and installing front parking aid warning buzzer H22	253
9.4	Removing and installing rear parking aid warning buzzer H15	254
9.5	Removing and installing front parking aid senders	255
9.6	Removing and installing rear parking aid senders	256
10	Park assist steering	258
10.1	Assembly overview - park assist steering	258
10.2	Removing and installing park assist steering control unit J791	260
10.3	Removing and installing front senders	260
10.4	Removing and installing rear senders	261
11	Automatic headlight range control	263
11.1	Assembly overview - automatic headlight range control	263
11.2	Removing and installing cornering light and headlight range control unit J745	265
12	Towing bracket	268
12.1	Assembly overview - towing bracket socket	268
12.2	Trailer socket U10	268
12.3	Removing and installing trailer detector control unit J345	269
96 - Lights, bulbs, switches - interior	271	
1	Lights	272
1.1	Overview of fitting locations - lights in dash panel	273
1.2	Overview of fitting locations - lights in front doors	273
1.3	Overview of fitting locations - lights in rear doors	274
1.4	Overview of fitting locations - lights in centre console	275
1.5	Overview of fitting locations - lights in luggage compartment	276
1.6	Overview of fitting locations - lights in roof trim	278
1.7	Removing and installing glove compartment light W6	280
1.8	Replacing bulb for glove compartment light W6	281
1.9	Removing and installing front footwell light K268/K269	282
1.10	Removing and installing front footwell illumination bulb L151/L152	283
1.11	Removing and installing Central locking SAFELOCK function warning lamp K133	283
1.12	Removing and installing light 2 for front door background lighting L203/L204	284
1.13	Removing and installing front entry light W31/W32	285
1.14	Removing and installing door warning lamp W30/W36	287
1.15	Removing and installing light 1 for rear door background lighting L201/L202	287
1.16	Removing and installing rear entry light W33/W34	288
1.17	Removing and installing rear door warning lamp W37/W38	288
1.18	Removing and installing light 1 for front door background lighting L199/L200	288
1.19	Removing and installing bulb for background lighting in rear door L166/L167	289
1.20	Removing and installing interior door handle illumination bulb L146/L147	289
1.21	Removing and installing light for rear interior door handle illumination L221/L222	290
1.22	Removing and installing lights for dashboard background lighting L229/L230	290
1.23	Removing and installing selector lever position display Y26	290
1.24	Removing and installing luggage compartment light W3	291
1.25	Removing and installing illuminated vanity mirror W20/W14	293
1.26	Removing and installing bulb for front interior light W1	294
1.27	Removing and installing bulb for rear interior light W43	296
1.28	Removing and installing bulb for front reading light W13/W19	298
1.29	Removing and installing bulb for rear reading light W11/W12	298



1.30	Renewing bulb of rear interior light W47/W48	298
2	Controls	302
2.1	Overview of fitting locations - controls in dash panel	303
2.2	Overview of fitting locations - controls in front doors	305
2.3	Overview of fitting locations - controls in rear doors	306
2.4	Overview of fitting locations - controls in centre console	306
2.5	Overview of fitting locations - controls in luggage compartment	307
2.6	Overview of fitting locations - controls in roof trim	308
2.7	Removing and installing rotary light switch EX1	309
2.8	Removing and installing headlight range control regulator E102	311
2.9	Removing and installing rear roller blind switch E149	311
2.10	Removing and installing TCS and ESP button E256	311
2.11	Removing and installing parking aid button E266	311
2.12	Removing and installing steering wheel heater button E522	311
2.13	Removing and installing sport program button E541	312
2.14	Removing and installing park assist steering button E581	312
2.15	Removing and installing button for electric drive E656	312
2.16	Removing and installing Start/Stop operation button E693	312
2.17	Removing and installing driving mode selection button E735	312
2.18	Removing and installing centre switch module in dash panel EX22	312
2.19	Removing and installing switch module in centre console EX23/EX30	313
2.20	Removing and installing hazard warning light switch EX3	315
2.21	Removing and installing buttons for seat heating E653/E654	315
2.22	Removing and installing glove compartment light switch E26	315
2.23	Removing and installing exterior mirror adjuster EX11	316
2.24	Removing and installing operating unit for window regulator in driver door E512	317
2.25	Removing and installing front passenger side window regulator button E716	317
2.26	Removing and installing driver side interior locking button for central locking system E308	318
2.27	Removing and installing rear lid remote release button E233	319
2.28	Removing and installing fuel tank flap release button E319	320
2.29	Removing and installing button for deactivating interior monitoring and vehicle inclination sensor E616	320
2.30	Removing and installing door contact switch F2/F3	322
2.31	Removing and installing rear window regulator button E711/E713	322
2.32	Removing and installing rear door contact switches F10/F11	323
2.33	Removing and installing electromechanical parking brake button E538/auto-hold button E540	323
2.34	Removing and installing starter button E378	324
2.35	Removing and installing rear lid warning buzzer H32	324
2.36	Removing and installing rear lid contact switch	325
2.37	Removing and installing rear lid closure button E574	325
2.38	Removing and installing electric hinged tow coupling attachment button E474	326
2.39	Removing and installing vanity mirror contact switch F147/F148	328
2.40	Removing and installing sunroof button E325	328
2.41	Removing and installing front interior light WX1	329
2.42	Removing and installing rear interior light WX2	330
2.43	Removing and installing front right reading light button E634	332
3	Anti-theft alarm system	333
3.1	Assembly overview - interior monitor	333
3.2	Removing and installing alarm horn H12	334
3.3	Removing and installing anti-theft alarm sensor G578	335
4	Lane change assist	337
4.1	Assembly overview - lane change assist	337
4.2	Removing and installing lane change assist warning lamp in exterior mirror K311/K312	339
4.3	Removing and installing lane change assist control unit J769/J770	339
4.4	Calibrating lane change assist	341



5	Front camera for driver assist systems	350
5.1	Removing and installing front camera for driver assist systems	350
6	Cigarette lighter, socket	351
6.1	Assembly overview - DC/AC converter with socket, 12 V-230 V	351
6.2	Removing and installing cigarette lighter U1	352
6.3	Removing and installing socket illumination bulb L42	352
6.4	Removing and installing rear cigarette lighter illumination bulb L32	352
6.5	Removing and installing electric socket U	352
6.6	Removing and installing DC/AC converter with socket, 12 V-230 V U13	352
97 - Wiring	355
1	Relay carriers, fuse holders, electronics boxes	355
1.1	Overview of fitting locations - relay carriers, fuse holders, E-boxes	355
1.2	Removing and installing electronics box (E-box)	360
1.3	Removing and installing relay and fuse holder in electronics box	363
1.4	Removing and installing relay and fuse carrier behind dash panel	365
1.5	Removing and installing main fuse holder	368
2	Select Control units	372
2.1	Overview of fitting locations - control units	372
2.2	Assembly overview - control units	373
2.3	Assembly overview - data bus diagnostic interface	375
2.4	Assembly overview - special vehicle control unit and voltage stabiliser	376
2.5	Removing and installing onboard supply control unit J519	377
2.6	Removing and installing data bus diagnostic interface J533	381
2.7	Removing and installing bracket for onboard supply control unit J519	382
2.8	Renewing bracket for onboard supply control unit J519	385
2.9	Removing and installing parking aid control unit J446/park assist steering control unit J791	385
2.10	Removing and installing rear lid control unit J605	386
2.11	Removing and installing special vehicle control unit J608	388
2.12	Removing and installing bracket for special vehicle control unit J608	389
3	Connectors	391
3.1	Repairing electrical wiring harnesses and plug-in connections	391
4	Releasing and dismantling connector housings	392
5	Repairing aerial wires	393
6	Fibre optic cables	394
7	Vehicle diagnosis, testing and information systems	395