



Contents

00 - Technical data	1
1 Repair instructions	1
1.1 General repair instructions	1
1.2 Notes on repair of CAN bus wiring	1
1.3 Transmitting power and aerial fitting locations	1
91 - Communication	3
1 Infotainment system	4
1.1 Components of infotainment system	4
1.2 Overview of fitting locations - Infotainment system	14
1.3 Removing and installing infotainment system display	16
1.4 Removing and installing control unit 1 for information electronics J794	19
1.5 Renewing rotary knobs of display unit for front information display and operating unit control unit J685	20
2 Sound system	21
2.1 Components of sound system	21
2.2 Overview of fitting locations - sound system	22
2.3 Removing and installing digital sound package control unit/amplifier	23
2.4 Removing and installing front treble loudspeakers R20 / R22	26
2.5 Removing and installing rear treble loudspeakers R14 / R16	27
2.6 Removing and installing front mid-range loudspeakers	27
2.7 Removing and installing front bass loudspeakers R21 / R23	28
2.8 Removing and installing rear bass loudspeakers R15 / R17	29
2.9 Removing and installing subwoofer R211	30
2.10 Removing and installing centre loudspeaker	31
3 Aerial systems	33
3.1 Components of aerial systems	33
3.2 Overview of fitting locations - aerial systems	34
3.3 Removing and installing aerial amplifier	37
3.4 Removing and installing frequency modulation (FM) frequency filter in negative wire R178	39
3.5 Removing and installing frequency modulation (FM) frequency filter in positive wire R179	40
3.6 Removing and installing roof aerial	41
3.7 Removing and installing GSM aerial 2 R267	42
4 Radio	44
4.1 Components of radio system	44
4.2 Removing and installing radio	45
5 Telephone system	48
5.1 Mobile telephone preparation	48
5.2 Overview of fitting locations - telephone system	49
5.3 Removing and installing two-way signal amplifier for mobile telephone/data services J984	51
5.4 Removing and installing telephone microphone R38	53
5.5 Removing and installing storage compartment with interface for mobile telephone R265	54
6 Navigation system	55
6.1 Components of navigation system	55
6.2 Overview of fitting locations - navigation system	55
6.3 Removing and installing control unit for navigation system	56
7 TV system	57
7.1 Overview - TV system	57
7.2 Overview of fitting locations - TV system	58



7.3	Removing and installing TV tuner	58
8	Reversing camera system	60
8.1	Components of reversing camera system	60
8.2	Overview of fitting locations - reversing camera system	60
8.3	Assembly overview - reversing camera system	62
8.4	Removing and installing reversing camera R189	62
8.5	Calibrating reversing camera system	63
8.6	Removing and installing reversing camera system control unit J772	68
9	Multifunction steering wheel	69
9.1	Components of multifunction steering wheel	69
9.2	Assembly overview - multifunction steering wheel	69
9.3	Removing and installing steering wheel multifunction buttons E441 / E440	70
9.4	Removing and installing Tiptronic switch in steering wheel E439 / E438	73
10	Connection for external multimedia devices	75
10.1	Removing and installing connection for external multimedia devices	75
10.2	Removing and installing USB hub R293	77
11	Rear Seat Entertainment (RSE)	78
11.1	Assembly overview - mounting and bracket for Rear Seat Entertainment	78
11.2	Removing and installing mounting for Rear Seat Entertainment	78
11.3	Removing and installing bracket for Rear Seat Entertainment	79
12	Car-Net	81
12.1	General information	81
12.2	Overview of fitting locations - Car-Net services	81
12.3	Removing and installing emergency call module control unit and communication unit J949	82
12.4	Renewing control unit for emergency call module and communication unit J949	84
12.5	Renewing battery in emergency call module control unit and communication unit J949	84
12.6	Commissioning ERA Glonass	85
13	Overhead view camera	87
13.1	Overview - overhead view camera	87
13.2	Overview of fitting locations - overhead view camera	89
13.3	Removing and installing overhead view camera control unit J928	90
13.4	Removing and installing front overhead view camera R243	91
13.5	Removing and installing left overhead view camera R244	92
13.6	Removing and installing right overhead view camera R245	93
13.7	Removing and installing rear overhead view camera R246	93
13.8	Calibrating overhead view camera	93