



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety measures when working with pyrotechnic components	2
1.3 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	3
1.4 Additional safety regulations for side airbag	4
1.5 Additional safety instructions for curtain airbag	4
1.6 Safety regulations for crash sensors (pressure sensors) for front side airbags	5
1.7 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	5
1.8 Checking airbag securing parts after an accident	7
1.9 Accident without airbag triggering	7
1.10 Checking seat belts	7
1.11 Check belt webbing	8
1.12 Checking inertia reel (locking mechanism)	9
1.13 Visually checking belt buckle	10
1.14 Check operation of belt buckle	10
1.15 Checking belt relays, and buckle tongues	10
1.16 Checking securing parts and anchorage points after an accident	10
1.17 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific	11
1.18 Checking child seat anchors after an accident	11
1.19 Safety instructions for automatic anti-dazzle interior mirror	11
<b>2 Repair notes</b>	<b>12</b>
2.1 Contact corrosion	12
2.2 Pipe/wire routing and attachment	12
<b>68 - Interior equipment</b>	<b>13</b>
<b>1 Compartments/covers</b>	<b>13</b>
1.1 Overview of fitting locations – compartments/covers	13
1.2 Assembly overview – dash panel cover on driver side	14
1.3 Assembly overview - steering column trim	15
1.4 Assembly overview – glove compartment	16
1.5 Assembly overview - storage compartment in headliner	17
1.6 Removing and installing dash panel cover on driver side	18
1.7 Removing and installing upper steering column trim	21
1.8 Removing and installing lower steering column trim	22
1.9 Removing and installing footwell cover on front passenger side	23
1.10 Removing and installing glove compartment opener	23
1.11 Service position for glove compartment cover	25
1.12 Removing and installing restrictor for glove compartment cover	26
1.13 Removing and installing glove compartment	27
1.14 Removing and installing glove compartment cover	28
1.15 Removing and installing headliner storage compartment	29
<b>2 Equipment</b>	<b>31</b>
2.1 Assembly overview – net partition	31
2.2 Assembly overview – sun visors	33
2.3 Removing and installing net partition	34
2.4 Removing and installing net partition mounting	34
2.5 Removing and installing net partition bracket	35
2.6 Removing and installing net partition retainer	36
2.7 Removing and installing sun visor	38



2.8	Removing and installing sun visor centre mount	40
2.9	Removing and installing roof grab handle	41
2.10	Removing and installing grab handle bracket	44
<b>3</b>	<b>Centre console</b>	<b>46</b>
3.1	Removing and installing front ashtray	46
3.2	Removing and installing rear centre console trim	46
3.3	Removing and installing centre console trim in front footwell	48
3.4	Removing and installing trim for operating and display unit	49
3.5	Removing and installing front centre console storage compartment, Passat 2015▶ and Passat Estate 2015▶	50
3.6	Removing and installing centre console insert	51
3.7	Removing and installing centre console	57
3.8	Removing and installing centre console bracket	63
<b>4</b>	<b>Front centre armrest</b>	<b>65</b>
4.1	Removing and installing front centre armrest	65
<b>5</b>	<b>Interior mirror</b>	<b>67</b>
5.1	Assembly overview – interior mirror	67
5.2	Removing and installing interior mirror	70
<b>6</b>	<b>Bonding retaining plate for interior mirror</b>	<b>81</b>
6.1	Bonding retaining plate for interior mirror, basic version	81
6.2	Bonding retaining plate for interior mirror, optional equipment version	83
<b>69</b>	<b>Passenger protection</b>	<b>87</b>
<b>1</b>	<b>Seat belts</b>	<b>87</b>
1.1	Overview of fitting locations – seat belts and anchorage points	87
1.2	Assembly overview – front three-point seat belt	91
1.3	Assembly overview – rear outer three-point seat belt	93
1.4	Assembly overview – rear centre three-point seat belt	94
1.5	Assembly overview – front belt buckle	95
1.6	Assembly overview – rear belt buckle	96
1.7	Removing and installing front three-point seat belt	98
1.8	Removing and installing rear three-point seat belt	101
1.9	Removing and installing front belt guide	106
1.10	Removing and installing rear belt guide	107
1.11	Removing and installing front belt end fitting	108
1.12	Removing and installing rear outer belt end fitting	109
1.13	Removing and installing belt height adjuster	110
1.14	Removing and installing front belt buckle	111
1.15	Removing and installing rear belt buckle	113
<b>2</b>	<b>Child seat anchors</b>	<b>115</b>
2.1	Assembly overview – rear child seat anchors	115
2.2	Removing and installing guide for ISOFIX child seat anchor	116
2.3	Removing and installing cover for Top Tether child seat anchor	116
<b>3</b>	<b>Airbag system</b>	<b>118</b>
3.1	Overview of fitting locations – airbag system	118
<b>4</b>	<b>Airbag control unit</b>	<b>123</b>
4.1	Assembly overview – airbag control unit	123
4.2	Removing and installing airbag control unit J234	123
<b>5</b>	<b>Battery isolator igniter</b>	<b>126</b>
5.1	Assembly overview - battery isolator igniter	126
5.2	Removing and installing battery isolator igniter	126
<b>6</b>	<b>Front airbag</b>	<b>130</b>
6.1	Assembly overview – front airbag, driver side	130
6.2	Removing and installing airbag unit with igniter	132



6.3	Renewing connector on airbag	136
<b>7</b>	<b>Front passenger airbag</b>	<b>139</b>
7.1	Assembly overview – front passenger airbag	139
7.2	Removing and installing front passenger airbag unit with igniter	140
7.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	143
7.4	Removing and installing front passenger side airbag deactivated warning lamp K145	144
<b>8</b>	<b>Side airbags</b>	<b>146</b>
8.1	Assembly overview – front side airbag	146
8.2	Assembly overview - rear side airbag	146
8.3	Removing and installing front side airbag with igniter	147
8.4	Removing and installing rear side airbag with igniter	149
<b>9</b>	<b>Curtain airbags</b>	<b>151</b>
9.1	Assembly overview – curtain airbag	151
9.2	Removing and installing curtain airbag with igniter	151
<b>10</b>	<b>Knee airbags</b>	<b>161</b>
10.1	Assembly overview - knee airbag	161
10.2	Removing and installing knee airbag with igniter	162
<b>11</b>	<b>Airbag crash sensors</b>	<b>165</b>
11.1	Overview of fitting locations – airbag crash sensors	165
11.2	Removing and installing front airbag crash sensor, driver side G190	166
11.3	Removing and installing front side airbag crash sensor G179/G180	169
11.4	Removing and installing rear side airbag crash sensor G256/G257	172
<b>12</b>	<b>Seat belt verification</b>	<b>175</b>
12.1	Removing and installing Seat occupied sensor, front passenger side G128	175
<b>70 - Trim, insulation</b>		<b>178</b>
<b>1</b>	<b>Front door trims</b>	<b>178</b>
1.1	Assembly overview – front door trim	178
1.2	Removing and installing trim	180
1.3	Removing and installing front door trim	182
1.4	Removing and installing front armrest	187
<b>2</b>	<b>Rear door trims</b>	<b>188</b>
2.1	Assembly overview – rear door trim	188
2.2	Assembly overview - sun blind for door window	189
2.3	Removing and installing trim	190
2.4	Removing and installing rear door trim	192
2.5	Removing and installing rear arm rest	196
2.6	Removing and installing sun blind for door window	197
2.7	Removing and installing eyelet for sun blind	199
<b>3</b>	<b>Dash panel</b>	<b>200</b>
3.1	Assembly overview - dash panel	200
3.2	Assembly overview - cover and trim for head-up display	201
3.3	Removing and installing dash panel end cover	202
3.4	Removing and installing dash panel trim	204
3.5	Removing and installing radio/navigation system mounting frame	207
3.6	Removing and installing dash panel insert trim	208
3.7	Removing and installing dash panel	211
3.8	Removing and installing dash panel vents	220
3.9	Removing and installing trim for head-up display	222
3.10	Removing and installing cover for head-up display	223
<b>4</b>	<b>Central tube for dash panel</b>	<b>226</b>
4.1	Assembly overview - central tube for dash panel	226
4.2	Removing and installing crash bar	228
4.3	Removing and installing dash panel cross member	229



<b>5</b>	<b>Interior trims</b>	<b>235</b>
5.1	Overview of fitting locations – interior trims	235
5.2	Assembly overview – sill panel moulding	237
5.3	Assembly overview - A-pillar trim	238
5.4	Assembly overview – B-pillar trim	241
5.5	Assembly overview - C-pillar trim	242
5.6	Assembly overview - D-pillar trim	244
5.7	Assembly overview – wheel housing trim	245
5.8	Assembly overview – foot rest and floor covering	246
5.9	Assembly overview - rear shelf	248
5.10	Assembly overview - sun blind for rear window	250
5.11	Removing and installing sill panel moulding	251
5.12	Removing and installing A-pillar gap cover	253
5.13	Removing and installing A-pillar trim	254
5.14	Removing and installing B-pillar trim	261
5.15	Removing and installing C-pillar trim	265
5.16	Removing and installing D-pillar trim	269
5.17	Removing and installing wheel housing trims	270
5.18	Removing and installing foot rest	272
5.19	Removing and installing floor covering	275
5.20	Removing and installing rear shelf	276
5.21	Removing and installing sun blind for rear window	281
5.22	Removing and installing rear roller blind motor -V91-	281
5.23	Removing and installing rear roller blind control unit -J262-	282
<b>6</b>	<b>Luggage compartment trims</b>	<b>284</b>
6.1	Overview of fitting locations – luggage compartment trims	284
6.2	Assembly overview – luggage compartment side trim	286
6.3	Assembly overview – luggage compartment floor	288
6.4	Assembly overview – upper rear lid trim	291
6.5	Assembly overview - lower rear lid trim	292
6.6	Removing and installing luggage compartment cover	294
6.7	Removing and installing lock carrier trim	295
6.8	Removing and installing fastening rings	296
6.9	Removing and installing support for luggage compartment floor covering	298
6.10	Removing and installing luggage compartment side trim	302
6.11	Removing and installing upper rear lid trim	306
6.12	Removing and installing lower rear lid trim	307
<b>7</b>	<b>Roof trims</b>	<b>312</b>
7.1	Assembly overview – moulded headliner	312
7.2	Removing and installing roof end strip	314
7.3	Removing and installing moulded headliner	315
7.4	Installing roof reinforcement to body	321
<b>72</b>	<b>Seat frames</b>	<b>334</b>
<b>1</b>	<b>Overview of seat variants</b>	<b>334</b>
1.1	Overview of fitting locations – seat variants	334
<b>2</b>	<b>Front seats</b>	<b>336</b>
2.1	Overview of fitting locations – electrical and electronic components	336
2.2	Assembly overview – front seat	343
2.3	Assembly overview – front backrest	347
2.4	Assembly overview – seat pan	351
2.5	Assembly overview – seat height adjustment	356
2.6	Assembly overview – seat rake adjustment	358
2.7	Assembly overview – seat depth adjustment	360
2.8	Assembly overview – fire extinguisher	361



2.9	Removing and installing front seat	362
2.10	Removing front seat if seat longitudinal adjustment motor V28/V31 is defective	366
2.11	Connecting and disconnecting airbag adapter	369
2.12	Removing and installing seat trim on tunnel side	371
2.13	Removing and installing seat trim on sill side	372
2.14	Removing and installing bracket for seat trim	376
2.15	Removing and installing front backrest	378
2.16	Removing and installing manually adjustable lumbar support frame	379
2.17	Removing and installing seat depth adjuster	381
2.18	Removing and installing seat rake adjustment unit	386
2.19	Removing and installing seat height adjustment handle	388
2.20	Removing and installing seat height adjuster	390
2.21	Removing and installing lower seat pan frame with seat longitudinal adjustment motor V28/V31	394
2.22	Removing and installing backrest adjuster	395
2.23	Removing and installing lumbar support adjuster	400
2.24	Removing and installing head restraint	401
2.25	Removing and installing head restraint guide	402
2.26	Removing and installing lumbar support adjustment switch E176/E177	403
2.27	Removing and installing lumbar support adjustment motor V125/V126/V129/V130	404
2.28	Removing and installing seat adjustment operating unit E470/E471	405
2.29	Removing and installing massage control unit J740	406
2.30	Removing and installing seat and steering column adjustment control unit with memory J136	407
2.31	Removing and installing impact and stabbing protector in backrest	408
<b>3</b>	<b>Rear seats</b>	<b>410</b>
3.1	Assembly overview – bench seat/individual seats	410
3.2	Assembly overview – rear seat backrest	412
3.3	Assembly overview – locking mechanism	414
3.4	Assembly overview – centre armrest	414
3.5	Assembly overview - side padding	415
3.6	Assembly overview - remote release mechanism for rear seat backrest	416
3.7	Removing and installing bench seat/individual seats	418
3.8	Removing and installing integrated child seat	424
3.9	Removing and installing rear seat backrest	425
3.10	Removing and installing trim for locking mechanism	426
3.11	Removing and installing locking mechanism for rear seat backrest	428
3.12	Removing and installing trim frame for load-through hatch	428
3.13	Removing and installing flap for load-through hatch	431
3.14	Removing and installing centre armrest	432
3.15	Removing and installing head restraint	433
3.16	Removing and installing head restraint guide	434
3.17	Removing and installing side padding	435
3.18	Disconnecting and connecting Bowden cable for remote release mechanism of rear seat backrest	435
3.19	Removing and installing operating handle for remote release mechanism of rear seat backrest	437
3.20	Removing and installing Bowden cable for remote release mechanism of rear seat backrest	440
<b>74</b>	<b>Seat - padding, covers</b>	<b>444</b>
<b>1</b>	<b>Front seat covers and padding</b>	<b>444</b>
1.1	Assembly overview – seat pan cover and padding	444
1.2	Assembly overview – backrest cover and padding	446
1.3	Assembly overview – seat heating element	447
1.4	Removing and installing cover and padding in area of seat pan	448
1.5	Removing and installing backrest cover and backrest padding	451



1.6	Separating cover and padding in area of seat pan	456
1.7	Separating cover and padding on backrest	459
1.8	Removing and installing seat heating element Z6/Z8	463
1.9	Removing and installing backrest heating element Z7/Z9	464
<b>2</b>	<b>Rear seat covers and padding</b>	<b>466</b>
2.1	Assembly overview – bench seat cover and padding	466
2.2	Assembly overview - rear seat backrest cover and padding	467
2.3	Assembly overview – seat heating element	468
2.4	Removing and installing bench seat cover and padding	469
2.5	Removing and installing cover and padding of rear seat backrest	470
2.6	Removing and installing cover and padding for squab with integrated child seat	473
2.7	Removing and installing push button with trim for adjusting mechanism of child seat	476
2.8	Removing and installing intermediate padding, backrest with load-through hatch	477
2.9	Separating rear bench seat cover and padding	477
2.10	Separating cover and padding of rear seat backrest	478
2.11	Removing and installing seat heating element	479
2.12	Removing and installing backrest heating element	480