



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>50 - Body - front</b> .....	<b>2</b>
<b>1 Lock carrier</b> .....	<b>2</b>
1.1 Assembly overview – lock carrier .....	2
1.2 Removing and installing lock carrier .....	4
1.3 Moving to and back from service position .....	6
<b>2 Wings</b> .....	<b>11</b>
2.1 Assembly overview – wing .....	11
2.2 Removing and installing wing .....	11
<b>3 Bulkhead</b> .....	<b>15</b>
3.1 Assembly overview – bulkhead .....	15
3.2 Assembly overview – plenum chamber cover .....	15
3.3 Removing and installing bulkhead .....	16
3.4 Removing and installing plenum chamber cover .....	17
<b>55 - Bonnet, rear lid</b> .....	<b>21</b>
<b>1 Bonnet</b> .....	<b>21</b>
1.1 Assembly overview – bonnet .....	21
1.2 Assembly overview – Bowden cable .....	23
1.3 Assembly overview - gas strut .....	23
1.4 Removing and installing bonnet .....	24
1.5 Adjusting bonnet .....	26
1.6 Removing and installing rear lid lock .....	32
1.7 Removing and installing bonnet lock operating lever .....	37
1.8 Removing and installing striker pin .....	39
1.9 Removing and installing hinges .....	41
1.10 Removing and installing insulation .....	43
1.11 Removing and installing gas strut .....	45
1.12 Releasing gas from gas strut .....	47
1.13 Removing and installing Bowden cable .....	47
<b>2 Rear lid</b> .....	<b>51</b>
2.1 Assembly overview – rear lid .....	51
2.2 Removing and installing rear lid .....	54
2.3 Adjusting rear lid .....	57
2.4 Removing and installing rear lid lock .....	63
2.5 Removing and installing operating mechanism .....	75
2.6 Removing and installing hinges .....	80
2.7 Removing and installing striker pin .....	83
2.8 Removing and installing rear lid seal .....	84
2.9 Removing and installing gas strut .....	85
2.10 Releasing gas from gas strut .....	88
2.11 Removing and installing rear lid drive unit VX69 .....	88
<b>3 Tank flap unit</b> .....	<b>91</b>
3.1 Assembly overview – tank flap unit .....	91
3.2 Removing and installing tank flap unit .....	91
3.3 Removing and installing fuel tank flap .....	94
<b>57 - Front doors, door components, central locking</b> .....	<b>97</b>
<b>1 Door</b> .....	<b>97</b>
1.1 Assembly overview – door .....	97
1.2 Removing and installing inner door seal .....	100
1.3 Removing and installing outer door seal .....	103



1.4	Removing and installing door	105
1.5	Adjusting door	107
1.6	Adjusting striker pin	110
1.7	Removing and installing door arrester	112
<b>2</b>	<b>Door components</b>	<b>115</b>
2.1	Assembly overview – door components	115
2.2	Assembly overview – window regulator	117
2.3	Assembly overview – door handle and door lock	118
2.4	Removing and installing window regulator motor	119
2.5	Removing and installing window regulator	122
2.6	Removing and installing inner door cover	125
2.7	Removing and installing striker pin	127
2.8	Removing and installing cap for door handle	129
2.9	Removing and installing lock cylinder	135
2.10	Removing and installing door handle	139
2.11	Removing and installing mounting bracket	143
2.12	Removing and installing door lock	145
2.13	Removing and installing window channel	150
2.14	Removing and installing window slot outer seal	153
2.15	Removing and installing window slot inner seal	155
<b>3</b>	<b>Central locking</b>	<b>156</b>
3.1	Overview of fitting locations – central locking system	156
3.2	Assembly overview - ignition key	158
3.3	Removing and installing bonnet contact switch F266	159
3.4	Removing and installing driver door control unit J386 and front passenger door control unit J387	161
3.5	Removing and installing rear left door control unit J388 and rear right door control unit J389	163
3.6	Removing and installing tank filler flap locking motor V155	164
3.7	Removing and installing ignition key battery	165
3.8	Removing and installing cap on ignition key	166
<b>58</b>	<b>Rear doors, door components</b>	<b>168</b>
<b>1</b>	<b>Door</b>	<b>168</b>
1.1	Assembly overview – door	168
1.2	Removing and installing door	171
1.3	Adjusting door	173
1.4	Adjusting striker pin	176
1.5	Removing and installing door arrester	178
1.6	Removing and installing inner door seal	180
1.7	Removing and installing outer door seal	183
<b>2</b>	<b>Door components</b>	<b>186</b>
2.1	Assembly overview – door components	186
2.2	Assembly overview – window regulator	188
2.3	Assembly overview – door handle and door lock	188
2.4	Removing and installing window regulator motor	189
2.5	Removing and installing window regulator	192
2.6	Removing and installing inner door cover	195
2.7	Removing and installing striker pin	197
2.8	Removing and installing cap on door handle	199
2.9	Removing and installing door handle	204
2.10	Removing and installing mounting bracket	208
2.11	Removing and installing door lock	211
2.12	Removing and installing window channel	215
2.13	Removing and installing window slot outer seal	218
2.14	Removing and installing window slot inner seal	220



<b>60 - Sunroof</b>	<b>221</b>
<b>1 Sliding sunroof</b>	<b>221</b>
1.1 Assembly overview – sliding sunroof	221
1.2 Assembly overview – sunroof roller blind	223
1.3 Removing and installing sliding sunroof frame	224
1.4 Removing and installing wind deflector	234
1.5 Removing and installing glass panel	235
1.6 Adjusting sunroof panel	241
1.7 Removing and installing slotted guide	243
1.8 Removing and installing front trim for sliding sunroof	248
1.9 Removing and installing sliding sunroof motor V1	257
1.10 Removing and installing sliding sunroof adjustment control unit J245	261
1.11 Manual operation	265
1.12 Removing and installing sliding sunroof seals	267
1.13 Removing and installing sunroof roller blind	269
1.14 Programming sliding sunroof adjustment control unit J245	278
<b>2 Water drain hoses</b>	<b>280</b>
2.1 Assembly overview - water drain hoses	280
2.2 Cleaning water drain hoses	280
2.3 Removing and installing water drain hoses	282
<b>63 - Bumpers</b>	<b>283</b>
<b>1 Bumper, front</b>	<b>283</b>
1.1 Assembly overview – bumper cover	283
1.2 Assembly overview - add-on parts	286
1.3 Assembly overview – bumper carrier	293
1.4 Removing and installing bumper cover	294
1.5 Removing and installing add-on parts	298
1.6 Repairing bumper cover	314
1.7 Installing brackets for parking aid system	314
1.8 Installing brackets for park assist steering	318
<b>2 Bumper, rear</b>	<b>321</b>
2.1 Assembly overview – bumper cover	321
2.2 Assembly overview - bumper guides	323
2.3 Assembly overview - add-on parts	324
2.4 Assembly overview – bumper carrier	327
2.5 Removing and installing bumper cover	327
2.6 Removing and installing add-on parts	331
2.7 Removing and installing bumper carrier	340
2.8 Repairing bumper cover	342
2.9 Installing brackets for parking aid system	343
2.10 Installing brackets for park assist steering	347
<b>64 - Glazing</b>	<b>350</b>
<b>1 Repair notes</b>	<b>350</b>
1.1 Minimum drying times for bonded windows	350
1.2 Window repair	350
1.3 Installation instructions for bonded windows	351
1.4 Preparing old undamaged windows for installing	352
1.5 Preparing new windows for installing	353
1.6 Preparing body flange for installing	354
1.7 Cleaning off excess adhesive	355
<b>2 Windscreen</b>	<b>357</b>
2.1 Assembly overview – windscreen	357



2.2	Removing and installing windscreen	358
<b>3</b>	<b>Rear windscreen</b>	<b>366</b>
3.1	Assembly overview – rear window	366
3.2	Removing and installing rear window	367
<b>4</b>	<b>Door windows</b>	<b>374</b>
4.1	Assembly overview - front door window	374
4.2	Assembly overview - rear door window	374
4.3	Removing and installing front door window	375
4.4	Removing and installing rear door window	378
4.5	Removing and installing fixed front door window	380
4.6	Removing and installing fixed rear door window	382
<b>66</b>	<b>Exterior equipment</b>	<b>385</b>
<b>1</b>	<b>Radiator grille and front trim</b>	<b>385</b>
1.1	Assembly overview – radiator grille	385
1.2	Removing and installing radiator grille	388
1.3	Removing and installing radiator grille seal, R-Line models as of 07.2019	392
<b>2</b>	<b>Mouldings, trims, extensions</b>	<b>393</b>
2.1	Assembly overview - trim strip and covers	393
2.2	Assembly overview – side member trim	394
2.3	Assembly overview – water deflector	394
2.4	Assembly overview - heat shield	395
2.5	Removing and installing cover	396
2.6	Removing and installing side member trim	400
2.7	Removing and installing water deflector	402
2.8	Removing and installing B-pillar trim on door	404
2.9	Removing and installing trim strip	406
2.10	Removing and installing step moulding	412
2.11	Removing and installing underbody heat shield	416
<b>3</b>	<b>Noise insulation</b>	<b>421</b>
3.1	Assembly overview - noise insulation	421
<b>4</b>	<b>Underbody cladding</b>	<b>424</b>
4.1	Overview of fitting locations - underbody cladding	424
4.2	Assembly overview - bracing on underbody	429
4.3	Removing and installing underbody cladding	430
4.4	Removing and installing tunnel cross-piece	435
<b>5</b>	<b>Exterior mirror</b>	<b>438</b>
5.1	Assembly overview – exterior mirror	438
5.2	Removing and installing exterior mirror	440
5.3	Removing and installing mirror glass	441
5.4	Removing and installing mirror adjustment unit	443
5.5	Removing and installing mirror cover	445
5.6	Removing and installing mirror frame	446
<b>6</b>	<b>Wheel housing liner</b>	<b>448</b>
6.1	Assembly overview – front wheel housing liner	448
6.2	Assembly overview – rear wheel housing liner	449
6.3	Removing and installing front wheel housing liner	449
6.4	Removing and installing rear wheel housing liner	451
<b>7</b>	<b>Lettering and emblems</b>	<b>455</b>
7.1	Dimensions - lettering and emblems on rear	455
7.2	Dimensions – lettering and emblems on sides	460
7.3	Removing and installing badges at front	461
7.4	Renewing lettering and badges at rear	466
<b>8</b>	<b>Decorative film / protective film</b>	<b>468</b>



---

8.1	Removing and installing protective film .....	468
<b>9</b>	<b>Special add-on parts</b> .....	<b>471</b>
9.1	Assembly overview – special add-on parts .....	471
<b>10</b>	<b>Towing bracket</b> .....	<b>472</b>
10.1	Assembly overview – towing bracket .....	472
10.2	Removing and installing towing bracket .....	473
10.3	Removing and installing trigger unit .....	475