



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety precautions when working on air conditioning systems | 1 |
| 1.2 Safety precautions when working on high-voltage system | 2 |
| 1.3 Safety precautions when working in the vicinity of high-voltage components | 2 |
| 1.4 Safety precautions when tow-starting or towing | 3 |
| 2 Repair instructions | 4 |
| 2.1 Rules for cleanliness when working on high-voltage system | 4 |
| 3 General information on air conditioning | 5 |
| 3.1 Other reference material | 5 |
| 3.2 Basics of air conditioning technology | 5 |
| 3.3 Vapour pressure table for refrigerant R134a | 7 |
| 3.4 Refrigerant R134a | 8 |
| 3.5 Properties of refrigerant R134a | 9 |
| 3.6 Refrigerant oil | 11 |
| 3.7 Comfort | 12 |
| 3.8 How air conditioning works | 13 |
| 3.9 General work safety | 13 |
| 3.10 Safety measures when working on vehicles with air conditioning and when working with refrigerant R134a | 16 |
| 3.11 Basics for working on refrigerant circuit | 17 |
| 4 General information on refrigerant circuit | 20 |
| 4.1 Components of refrigerant circuit | 20 |
| 4.2 Design of refrigerant circuit | 31 |
| 4.3 Evacuation and charging valves for quick-release couplings of air conditioner service station on refrigerant circuit | 32 |
| 4.4 Switches and senders in refrigerant circuit and related connections | 34 |
| 4.5 Electrical components not installed in refrigerant circuit | 39 |
| 4.6 Pressures and temperatures in refrigerant circuit | 42 |
| 4.7 Refrigerant circuit with expansion valve | 42 |
| 4.8 Refrigerant circuit with restrictor and reservoir | 44 |
| 4.9 Test and measurement work that can be performed using a pressure gauge | 46 |
| 4.10 Air conditioner service and recycling equipment | 47 |
| 4.11 Notes to repairs on refrigerant circuit | 48 |
| 5 Laws and regulations | 49 |
| 5.1 Laws and regulations | 49 |
| 5.2 Recycling and refuse law | 54 |
| 5.3 Converting R12 refrigerant circuits to R134a refrigerant circuits and repairing them (retrofitting) | 55 |
| 5.4 Maintaining records on refrigerant | 55 |
| 6 Refrigerant circuit | 56 |
| 6.1 Important repair notes on air conditioning | 56 |
| 6.2 Converting refrigerant circuits from R12 refrigerant to R134a | 56 |
| 7 Working with the air conditioner service station | 57 |
| 7.1 Important instructions for working with the air conditioner service station | 57 |
| 7.2 Connecting a air conditioner service station for measuring and testing | 58 |
| 7.3 Drain the refrigerant circuit using the air conditioner service station. | 59 |
| 7.4 Evacuating refrigerant circuit using air conditioner service station | 59 |
| 7.5 Filling refrigerant circuit with air conditioner service station. | 61 |
| 7.6 Bringing air conditioning system into service after charging | 62 |
| 7.7 Charging the container in the air conditioning service station with refrigerant | 62 |
| 7.8 Emptying air conditioner service station | 63 |



| | | |
|-----------|--|------------|
| 8 | Detecting leaks in refrigerant circuit | 64 |
| 8.1 | Leak detection in refrigerant circuit using compressed air or nitrogen | 65 |
| 8.2 | Searching for leaks in refrigerant circuits using leak detector V.A.G 1796 | 66 |
| 8.3 | Detecting leaks in refrigerant circuit using leak detecting system VAS 6196 or leak detecting system VAS 6201 or a later model | 67 |
| 9 | Clearing refrigerant circuit of contaminants | 75 |
| 9.1 | Vehicles with high-voltage system (hybrid vehicles) | 75 |
| 9.2 | Blowing through refrigerant circuit with compressed air and nitrogen | 76 |
| 9.3 | Flushing refrigerant circuit with refrigerant R134a | 78 |
| 10 | Clearing refrigerant circuit of contaminants, commercial vehicles | 110 |
| 10.1 | Vehicles with high-voltage system | 110 |
| 10.2 | Flushing refrigerant circuit with refrigerant R134a | 111 |
| 10.3 | Adapters for setting up flushing circuits | 111 |
| 10.4 | Procedure for setting up and flushing refrigerant circuit, Amarok 2010 ▶ | 115 |
| 10.5 | Procedure for setting up and flushing refrigerant circuit, Caddy 2004 ▶ | 121 |
| 10.6 | Procedure for setting up and flushing refrigerant circuit, Crafter ▶2017 | 128 |
| 10.7 | Procedure for setting up and flushing refrigerant circuit, Crafter 2017 ▶ or MAN TGE ▶, Crafter Grand California ▶ | 145 |
| 10.8 | Procedure for setting up and flushing refrigerant circuit, Transporter 2016 ▶, Transporter 2020 ▶ | 162 |
| 11 | Complaints | 178 |
| 11.1 | Possible complaints about refrigerant circuit | 178 |
| 11.2 | Odours from heater and air conditioning unit | 179 |
| 12 | Connecting the air conditioning service station | 182 |
| 12.1 | For vehicles that have connections on both low-pressure and high-pressure sides of refrigerant circuit | 182 |
| 13 | Checking pressures on vehicles | 183 |
| 13.1 | Checking pressures in the refrigerant circuit (using a air conditioning service station) | 183 |
| 13.2 | Checking systems with a restrictor and collector (with internally regulated air conditioner compressor) | 187 |
| 13.3 | Checking systems with an expansion valve and reservoir (with internally regulated air conditioner compressor) | 191 |
| 13.4 | Checking systems with an expansion valve and reservoir (without regulated air conditioner compressor) | 196 |
| 13.5 | Checking systems with a restrictor and reservoir and air conditioner compressor regulating valve N280 (with externally regulated air conditioner compressor) | 197 |
| 13.6 | Checking systems with an expansion valve, receiver and air conditioner compressor regulating valve N280 (with externally regulated air conditioner compressor) | 202 |
| 13.7 | With expansion valve, receiver and electrical air conditioner compressor | 213 |
| 14 | Renewing components | 214 |
| 14.1 | In the event of leaking or damaged components (apart from the air conditioner compressor, receiver or reservoir) | 215 |
| 14.2 | Renew the air conditioner compressor | 217 |
| 14.3 | Replace receiver or reservoir and restrictor | 219 |
| 15 | Testing equipment and tools | 222 |
| 15.1 | List of test equipment, tools and materials | 222 |