



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on vehicles with start/stop system	1
1.2 All-wheel drive - notes on performance test	1
<b>2 Identification</b>	<b>2</b>
2.1 Gearbox identification	2
<b>3 Technical data</b>	<b>5</b>
3.1 Allocation gearbox - engine	5
3.2 Capacities	9
3.3 Calculation of gear ratios	9
<b>4 Overview - power transmission</b>	<b>10</b>
4.1 Overview - power transmission - front-wheel drive	10
4.2 Overview - power transmission - all-wheel drive	11
<b>5 Electrical components</b>	<b>14</b>
5.1 Overview of fitting locations - electrical components	14
<b>6 Repair instructions</b>	<b>16</b>
6.1 General repair instructions	16
<b>30 - Clutch</b>	<b>20</b>
<b>1 Clutch mechanism</b>	<b>20</b>
1.1 Overview of fitting locations – clutch mechanism	20
1.2 Assembly overview - pedal cluster	21
1.3 Assembly overview - clutch hydraulics	25
1.4 Assembly overview - clutch release mechanism	33
1.5 Removing and installing bearing bush	35
1.6 Checking clutch master cylinder and clutch slave cylinder	36
1.7 Removing and installing clutch position sender G476	38
1.8 Removing and installing return spring	42
1.9 Removing and installing over-centre spring	46
1.10 Removing and installing clutch pedal	51
1.11 Removing and installing mounting bracket	55
1.12 Removing and installing clutch master cylinder	65
1.13 Removing and installing bleeder	68
1.14 Removing and installing lines for clutch mechanism	72
1.15 Removing and installing clutch slave cylinder together with release bearing	75
1.16 Bleeding clutch mechanism	77
1.17 Repairing clutch release mechanism	78
<b>2 Clutch</b>	<b>81</b>
2.1 Determining make of clutch	81
2.2 Assembly overview - clutch	82
2.3 Removing and installing clutch	86
<b>34 - Controls, housing</b>	<b>107</b>
<b>1 Selector mechanism</b>	<b>107</b>
1.1 Installation position - selector mechanism	107
1.2 Assembly overview – gear knob and cover	108
1.3 Assembly overview - selector mechanism	111
1.4 Removing and installing gear knob	114
1.5 Removing and installing selector mechanism	119
1.6 Repairing selector mechanism	124
1.7 Adjusting selector mechanism	129
1.8 Checking selector mechanism	134



<b>2</b>	<b>Removing and installing gearbox</b>	<b>135</b>
2.1	Removing gearbox	135
2.2	Installing gearbox	245
2.3	Specified torques for gearbox	309
<b>3</b>	<b>Assembly mountings</b>	<b>311</b>
3.1	Assembly overview - assembly mountings	311
<b>4</b>	<b>Bevel box</b>	<b>315</b>
4.1	Assembly overview - bevel box	315
4.2	Distinguishing between different types of bevel boxes	317
4.3	Removing bevel box	317
4.4	Installing bevel box	325
<b>5</b>	<b>Transporting gearbox</b>	<b>332</b>
<b>6</b>	<b>Gear oil</b>	<b>333</b>
6.1	Distinguishing between different manual gearbox types when filling oil	333
6.2	Checking gear oil level	333
<b>7</b>	<b>Securing to engine and gearbox support</b>	<b>337</b>
7.1	Installing manual gearbox to engine and gearbox support	337
7.2	Installing bevel box to engine and gearbox support	338
<b>8</b>	<b>Dismantling and assembling gearbox</b>	<b>340</b>
8.1	Schematic overview - gearbox	340
8.2	Assembly overview - gearbox	342
8.3	Assembly overview - gearbox housing and selector mechanism	344
8.4	Assembly overview - selector unit	346
8.5	Assembly overview - shafts, differential, selector mechanism	347
8.6	Assembly overview - selector forks	351
8.7	Renewing selector shaft seal	352
8.8	Dismantling and assembling gearbox	354
<b>9</b>	<b>Gearbox housing, clutch housing</b>	<b>377</b>
9.1	Assembly overview - gearbox housing	377
9.2	Assembly overview - clutch housing	379
9.3	Repairing gearbox housing	381
9.4	Repairing clutch housing	392
<b>35 - Gears, shafts</b>		<b>395</b>
<b>1</b>	<b>Input shaft</b>	<b>395</b>
1.1	Assembly overview - input shaft	395
1.2	Dismantling and assembling input shaft	396
1.3	Renewing input shaft seal	402
<b>2</b>	<b>Output shaft</b>	<b>405</b>
2.1	Assembly overview - output shaft	405
2.2	Dismantling and assembling output shaft	412
2.3	Adjusting output shaft	442
<b>39 - Final drive - differential</b>		<b>454</b>
<b>1</b>	<b>Oil seals</b>	<b>454</b>
1.1	Overview of fitting locations - oil seals	454
1.2	Renewing left seal	456
1.3	Renewing right seal	460
<b>2</b>	<b>Differential</b>	<b>470</b>
2.1	Assembly overview - differential	470
2.2	Dismantling and assembling differential	474
2.3	Adjusting differential	491
<b>3</b>	<b>Adjustment overview</b>	<b>496</b>
<b>4</b>	<b>Components of bevel box</b>	<b>497</b>



---

4.1	Assembly overview - components of bevel box .....	497
4.2	Renewing bevel box seals .....	503
4.3	Renewing output flange and redetermining thickness of shim .....	529
4.4	Renewing needle bearing (polygon bearing) and oil seal for right flange shaft .....	530
<b>5</b>	<b>Gear oil</b> .....	<b>536</b>
5.1	Checking gear oil level .....	536