



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety information</b> .....	<b>1</b>
1.1 Safety measures when working on vehicles with start/stop system .....	1
<b>2 Identification</b> .....	<b>2</b>
2.1 Gearbox identification .....	2
<b>3 Technical data</b> .....	<b>3</b>
3.1 Allocation gearbox - engine .....	3
3.2 Capacities .....	7
3.3 Calculation of gear ratios .....	7
<b>4 Overview - power transmission</b> .....	<b>8</b>
<b>5 Electrical components</b> .....	<b>10</b>
5.1 Overview of fitting locations - electrical components .....	10
<b>6 Repair instructions</b> .....	<b>12</b>
6.1 General repair instructions .....	12
<b>30 - Clutch</b> .....	<b>15</b>
<b>1 Clutch mechanism</b> .....	<b>15</b>
1.1 Overview of fitting locations – clutch mechanism .....	15
1.2 Assembly overview - pedal cluster .....	17
1.3 Assembly overview - clutch hydraulics .....	21
1.4 Assembly overview - clutch release mechanism .....	27
1.5 Removing and installing bearing bush .....	28
1.6 Checking function of clutch master cylinder and clutch slave cylinder .....	29
1.7 Removing and installing clutch position sender G476 .....	30
1.8 Removing and installing return spring .....	33
1.9 Removing and installing over-centre spring .....	35
1.10 Removing and installing clutch pedal .....	39
1.11 Removing and installing mounting bracket .....	43
1.12 Removing and installing clutch master cylinder .....	51
1.13 Removing and installing clutch slave cylinder .....	53
1.14 Removing and installing lines for clutch mechanism .....	56
1.15 Bleeding clutch mechanism .....	59
1.16 Repairing clutch release mechanism .....	61
<b>2 Clutch</b> .....	<b>62</b>
2.1 Assembly overview - clutch .....	62
2.2 Removing and installing clutch .....	64
<b>34 - Controls, housing</b> .....	<b>79</b>
<b>1 Selector mechanism</b> .....	<b>79</b>
1.1 Installation position - selector mechanism .....	79
1.2 Assembly overview - gear knob and cover .....	81
1.3 Assembly overview - Gear lever and selector housing .....	84
1.4 Assembly overview - selector mechanism .....	85
1.5 Removing and installing gear knob .....	86
1.6 Removing and installing selector mechanism .....	91
1.7 Repairing selector mechanism .....	95
1.8 Adjusting selector mechanism .....	97
1.9 Checking selector mechanism .....	101
<b>2 Removing and installing gearbox</b> .....	<b>102</b>
2.1 Removing gearbox .....	102
2.2 Installing gearbox .....	162
2.3 Specified torques for gearbox .....	192



<b>3</b>	<b>Assembly mountings</b>	<b>194</b>
3.1	Assembly overview - assembly mountings	194
<b>4</b>	<b>Transporting gearbox</b>	<b>196</b>
<b>5</b>	<b>Gear oil</b>	<b>197</b>
5.1	Checking gear oil level	197
5.2	Draining and filling gear oil	197
<b>6</b>	<b>Securing to engine and gearbox support</b>	<b>200</b>
<b>7</b>	<b>Dismantling and assembling gearbox</b>	<b>204</b>
7.1	Schematic overview - gearbox	204
7.2	Assembly overview - gearbox	206
7.3	Assembly overview - cover for gearbox housing and 5th/6th gear	207
7.4	Assembly overview - gearbox housing and selector mechanism	209
7.5	Assembly overview - selector unit	211
7.6	Assembly overview - shafts, differential, selector mechanism	212
7.7	Assembly overview - selector forks	213
7.8	Repairing selector unit	216
7.9	Renewing selector shaft seal	217
7.10	Repairing selector forks	218
7.11	Removing cover for gearbox housing and 5th and 6th gears	221
7.12	Dismantling and assembling gearbox	226
7.13	Installing cover for gearbox housing and 5th and 6th gears	241
<b>8</b>	<b>Gearbox housing, clutch housing</b>	<b>249</b>
8.1	Assembly overview - gearbox housing and clutch housing	249
8.2	Assembly overview - gearbox housing cover	251
8.3	Repairing gearbox housing	252
8.4	Repairing clutch housing	257
8.5	Repairing gearbox housing cover	258
<b>35 - Gears, shafts</b>		<b>261</b>
<b>1</b>	<b>Input shaft</b>	<b>261</b>
1.1	Assembly overview - input shaft	261
1.2	Dismantling and assembling input shaft	263
1.3	Adjusting input shaft	268
1.4	Renewing input shaft seal	273
<b>2</b>	<b>Output shaft</b>	<b>275</b>
2.1	Assembly overview - output shaft	275
2.2	Dismantling and assembling output shaft	278
2.3	Adjusting output shaft	288
<b>3</b>	<b>Reverse shaft</b>	<b>293</b>
3.1	Assembly overview - reverse shaft	293
3.2	Dismantling and assembling reverse shaft	296
<b>39 - Final drive - differential</b>		<b>299</b>
<b>1</b>	<b>Oil seals</b>	<b>299</b>
1.1	Overview of fitting locations - seals	299
1.2	Renewing left seal	300
1.3	Renewing right oil seal	302
<b>2</b>	<b>Differential</b>	<b>306</b>
2.1	Assembly overview - differential	306
2.2	Dismantling and assembling differential	308
2.3	Adjusting differential	313
<b>3</b>	<b>Adjustment overview</b>	<b>317</b>