



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with high-voltage system	1
1.2 General safety provisions	5
1.3 Safety measures when working on vehicles with a start/stop system	6
1.4 Safety precautions when using testers and measuring instruments during a road test	6
1.5 Safety precautions when tow-starting or towing	6
2 Identification	7
2.1 Gearbox identification	7
3 Repair instructions	8
3.1 General information	8
3.2 Rules for cleanliness	9
3.3 General repair instructions	9
3.4 Safety functions of gearbox control unit	10
4 Technical data	12
4.1 Capacities	12
30 - Clutch	13
1 Clutch	13
1.1 Assembly overview - dual clutch	13
1.2 Renewing input shaft seal	13
2 Clutch mechanism	15
2.1 Removing and installing clutch engagement	15
34 - Controls, housing	17
1 Mechatronic unit	17
1.1 Assembly overview - mechatronic unit	17
1.2 Removing and installing sump	19
1.3 Removing and installing mechatronic unit	22
2 Selector mechanism	28
2.1 Assembly overview - selector mechanism	28
2.2 Manual release from position P	34
2.3 Removing and installing selector lever handle	36
2.4 Moving push-button in the handle to installation position	42
2.5 Removing and installing selector mechanism	44
2.6 Removing and installing gear selector cable	54
2.7 Checking selector mechanism	62
2.8 Checking and adjusting selector lever cable	65
2.9 Renewing selector shaft seal	68
3 Removing and installing gearbox	73
3.1 Removing gearbox	73
3.2 Installing gearbox	73
3.3 Specified torques for gearbox	74
4 Assembly mountings	76
4.1 Assembly overview - assembly mountings	76
5 Transporting gearbox	77
6 Gear oil circuit	79
6.1 Assembly overview - gear oil circuit	79
6.2 Removing and installing gear oil cooler	79
6.3 Removing and installing gear oil filter	82
7 Gear oil	84



7.1	Overview of fitting locations - oil drain and inspection plugs	84
7.2	Checking gear oil level	84
7.3	Draining and filling gear oil	91
7.4	Filling with gear oil after mechatronic unit has been renewed	96
8	Dismantling and assembling gearbox	100
8.1	System overview - gearbox	100
8.2	Assembly overview - gearbox	100
8.3	Assembly overview - hybrid module	102
8.4	Removing hybrid module	102
8.5	Renewing hybrid module	109
8.6	Installing hybrid module	115
8.7	Removing and installing rotor position sensor and temperature sender	119
8.8	Renewing sealing cap	123
35 - Gears, shafts		127
1	Dismantling and assembling gears and shafts	127
39 - Final drive - differential		128
1	Seals	128
1.1	Overview of fitting locations - oil seals	128
1.2	Renewing left seal	128