



## Contents

|  |            |
|--|------------|
| <b>00 - Technical data</b>   | <b>1</b>   |
| <b>1 Safety information</b>  | <b>1</b>   |
| 1.1 Safety regulations for working on fuel supply                                      | 1          |
| 1.2 Safety measures when working on vehicles with a start/stop system                  | 1          |
| 1.3 Safety precautions when using testers and measuring instruments during a road test | 2          |
| 1.4 Safety precautions when working on ignition system                                 | 2          |
| 1.5 Safety precautions when working on the cooling system                              | 2          |
| 1.6 Safety precautions when working on exhaust system                                  | 3          |
| <b>2 Identification</b>  | <b>4</b>   |
| 2.1 Engine number/engine data  | 4          |
| <b>3 Repair instructions</b>   | <b>7</b>   |
| 3.1 Rules for cleanliness  | 7          |
| 3.2 Foreign objects in engine  | 7          |
| 3.3 Contact corrosion  | 7          |
| 3.4 Routing and attachment of lines  | 7          |
| 3.5 Fitting radiator and condensers  | 8          |
| 3.6 Checking vacuum system   | 8          |
| <b>10 - Removing and installing engine</b>   | <b>9</b>   |
| <b>1 Removing and installing engine</b>  | <b>9</b>   |
| 1.1 Removing engine  | 9          |
| 1.2 Separating engine and gearbox  | 30         |
| 1.3 Securing engine on engine and gearbox support                                      | 40         |
| 1.4 Installing engine  | 43         |
| <b>2 Assembly mountings</b>  | <b>47</b>  |
| 2.1 Assembly overview - assembly mountings   | 47         |
| 2.2 Supporting engine in installation position   | 51         |
| 2.3 Removing and installing engine mounting  | 72         |
| 2.4 Removing and installing gearbox mounting   | 74         |
| 2.5 Removing and installing pendulum support   | 76         |
| 2.6 Checking adjustment of assembly mountings  | 77         |
| 2.7 Adjusting assembly mountings   | 78         |
| <b>3 Engine cover panel</b>  | <b>81</b>  |
| 3.1 Removing and installing engine cover   | 81         |
| <b>13 - Crankshaft group</b>   | <b>82</b>  |
| <b>1 Cylinder block (pulley end)</b>   | <b>82</b>  |
| 1.1 Assembly overview - cylinder block (pulley end)                                    | 82         |
| 1.2 Removing and installing poly-V belt  | 85         |
| 1.3 Removing and installing tensioner for poly V-belt                                  | 87         |
| 1.4 Removing and installing vibration damper   | 88         |
| 1.5 Removing and installing bracket for ancillaries                                    | 95         |
| 1.6 Removing and installing engine support   | 98         |
| 1.7 Renewing seal for vibration damper   | 100        |
| <b>2 Cylinder block, gearbox end</b>   | <b>103</b> |
| 2.1 Assembly overview - cylinder block, gearbox end                                    | 103        |
| 2.2 Removing and installing flywheel   | 104        |
| 2.3 Removing and installing sealing flange on gearbox side                             | 106        |
| <b>3 Crankshaft</b>  | <b>111</b> |
| 3.1 Assembly overview - crankshaft   | 111        |
| 3.2 Crankshaft dimensions  | 113        |
| 3.3 Allocation of main bearing shells  | 113        |



|           |   |            |
|-----------|---|------------|
| 3.4       | Renewing needle bearing in crankshaft                             | 115        |
| 3.5       | Measuring axial clearance of crankshaft                           | 117        |
| 3.6       | Measuring radial clearance of crankshaft                          | 118        |
| 3.7       | Removing and installing sender wheel                              | 119        |
| <b>4</b>  | <b>Balancer shaft</b>   | <b>121</b> |
| 4.1       | Assembly overview - balance shaft                                 | 121        |
| 4.2       | Removing and installing balance shaft                             | 123        |
| <b>5</b>  | <b>Pistons and conrods</b>  | <b>130</b> |
| 5.1       | Assembly overview - pistons and conrods                           | 130        |
| 5.2       | Removing and installing pistons                                   | 134        |
| 5.3       | Checking pistons and cylinder bores                               | 136        |
| 5.4       | Separating new conrod   | 139        |
| 5.5       | Checking radial clearance of conrods                              | 139        |
| 5.6       | Removing and installing oil spray jets                            | 140        |
| <b>15</b> | <b>- Cylinder head, valve gear</b>                                | <b>142</b> |
| <b>1</b>  | <b>Cylinder head</b>  | <b>142</b> |
| 1.1       | Assembly overview - cylinder head                                 | 142        |
| 1.2       | Removing and installing cylinder head                             | 145        |
| 1.3       | Removing and installing vacuum pump                               | 152        |
| 1.4       | Checking compression  | 154        |
| <b>2</b>  | <b>Cover for timing chain</b>                                     | <b>157</b> |
| 2.1       | Assembly overview - cover for timing chain                        | 157        |
| 2.2       | Removing and installing timing chain cover                        | 159        |
| <b>3</b>  | <b>Chain drive</b>  | <b>168</b> |
| 3.1       | Assembly overview - camshaft timing chains                        | 168        |
| 3.2       | Removing and installing camshaft timing chain                     | 171        |
| 3.3       | Assembly overview - drive chain for balance shaft                 | 187        |
| 3.4       | Removing and installing drive chain for balance shaft             | 190        |
| 3.5       | Checking timing chain   | 190        |
| 3.6       | Checking valve timing   | 191        |
| <b>4</b>  | <b>Valve gear</b>   | <b>194</b> |
| 4.1       | Assembly overview - valve gear                                    | 194        |
| 4.2       | Removing and installing camshaft                                  | 199        |
| 4.3       | Removing and installing camshaft control valve 1 N205             | 218        |
| 4.4       | Removing and installing exhaust camshaft control valve 1 N318     | 218        |
| 4.5       | Removing and installing valve stem seals                          | 218        |
| <b>5</b>  | <b>Inlet and exhaust valves</b>                                   | <b>230</b> |
| 5.1       | Checking valve guides   | 230        |
| 5.2       | Checking valves   | 231        |
| 5.3       | Valve dimensions  | 231        |
| <b>17</b> | <b>- Lubrication</b>  | <b>232</b> |
| <b>1</b>  | <b>Sump, oil pump</b>   | <b>232</b> |
| 1.1       | Assembly overview - sump/oil pump                                 | 232        |
| 1.2       | Removing and installing oil level and oil temperature sender G266 | 235        |
| 1.3       | Removing and installing lower part of sump                        | 236        |
| 1.4       | Removing and installing oil pump                                  | 242        |
| 1.5       | Removing and installing upper part of sump                        | 245        |
| 1.6       | Engine oil:   | 250        |
| <b>2</b>  | <b>Engine oil cooler</b>  | <b>251</b> |
| 2.1       | Assembly overview - engine oil cooler                             | 251        |
| 2.2       | Removing and installing engine oil cooler                         | 251        |
| <b>3</b>  | <b>Crankcase ventilation</b>                                      | <b>254</b> |



|           |  |            |
|-----------|--|------------|
| 3.1       | Assembly overview - crankcase breather system                                      | 254        |
| 3.2       | Removing and installing oil separator  | 255        |
| <b>4</b>  | <b>Oil filter, oil pressure switch</b>   | <b>256</b> |
| 4.1       | Assembly overview - oil filter   | 256        |
| 4.2       | Assembly overview - oil pressure switches/oil pressure control                     | 256        |
| 4.3       | Removing and installing piston cooling jet control valve N522                      | 258        |
| 4.4       | Removing and installing oil pressure regulating valve N428                         | 259        |
| 4.5       | Removing and installing oil pressure switch  | 260        |
| 4.6       | Checking oil pressure  | 264        |
| <b>19</b> | <b>Cooling</b>   | <b>268</b> |
| <b>1</b>  | <b>Cooling system/coolant</b>  | <b>268</b> |
| 1.1       | Connection diagram - coolant hoses   | 268        |
| 1.2       | Draining and adding coolant  | 278        |
| 1.3       | Checking cooling system for leaks  | 287        |
| 1.4       | Flushing cooling system  | 291        |
| <b>2</b>  | <b>Coolant pump, regulation of cooling system</b>                                  | <b>315</b> |
| 2.1       | Assembly overview - coolant pump, thermostat                                       | 315        |
| 2.2       | Assembly overview - electric coolant pump  | 317        |
| 2.3       | Assembly overview - coolant temperature sender                                     | 321        |
| 2.4       | Removing and installing toothed belt for coolant pump                              | 322        |
| 2.5       | Removing and installing coolant pump   | 324        |
| 2.6       | Removing and installing electric coolant pump                                      | 327        |
| 2.7       | Removing and installing coolant valves   | 330        |
| 2.8       | Removing and installing actuator for engine temperature regulation N493            | 337        |
| 2.9       | Removing and installing coolant temperature sender G62                             | 340        |
| 2.10      | Removing and installing radiator outlet coolant temperature sender G83             | 341        |
| <b>3</b>  | <b>Coolant pipes</b>   | <b>343</b> |
| 3.1       | Assembly overview - coolant pipes  | 343        |
| 3.2       | Removing and installing coolant pipes  | 343        |
| 3.3       | Removing and installing upper coolant pipes  | 345        |
| <b>4</b>  | <b>Radiator, radiator fan</b>  | <b>348</b> |
| 4.1       | Assembly overview - radiator   | 348        |
| 4.2       | Assembly overview - auxiliary radiator   | 352        |
| 4.3       | Assembly overview - radiator cowl and radiator fan                                 | 353        |
| 4.4       | Removing and installing radiator   | 356        |
| 4.5       | Removing and installing radiator cowl  | 364        |
| 4.6       | Removing and installing radiator fan   | 367        |
| 4.7       | Removing and installing auxiliary radiator   | 369        |
| <b>21</b> | <b>Turbocharging/supercharging</b>   | <b>374</b> |
| <b>1</b>  | <b>Turbocharger</b>  | <b>374</b> |
| 1.1       | Assembly overview - turbocharger   | 374        |
| 1.2       | Removing and installing turbocharger   | 380        |
| 1.3       | Removing and installing charge pressure positioner V465                            | 392        |
| 1.4       | Adjusting charge pressure positioner V465  | 393        |
| <b>2</b>  | <b>Charge air system</b>   | <b>397</b> |
| 2.1       | Assembly overview - charge air system  | 397        |
| 2.2       | Assembly overview - charge-air hose connections                                    | 401        |
| 2.3       | Removing and installing charge air cooler  | 401        |
| 2.4       | Removing and installing charge pressure sender G31                                 | 407        |
| 2.5       | Checking charge air system for leaks   | 407        |
| 2.6       | Removing and installing air intake pipe between turbocharger and charge air cooler | 410        |
| <b>24</b> | <b>Mixture preparation - injection</b>   | <b>412</b> |



|           |   |            |
|-----------|---|------------|
| <b>1</b>  | <b>Injection system</b>   | <b>412</b> |
| 1.1       | Overview of fitting locations - injection system  | 412        |
| <b>2</b>  | <b>Injectors</b>  | <b>424</b> |
| 2.1       | Assembly overview - fuel rail with injectors  | 424        |
| 2.2       | Removing and installing fuel rail   | 426        |
| 2.3       | Removing and installing injectors   | 427        |
| 2.4       | Renewing seals on injectors   | 435        |
| 2.5       | Cleaning injectors  | 438        |
| <b>3</b>  | <b>Air filter</b>   | <b>441</b> |
| 3.1       | Assembly overview - air filter housing  | 441        |
| 3.2       | Removing and installing air filter housing  | 443        |
| <b>4</b>  | <b>Intake manifold</b>  | <b>445</b> |
| 4.1       | Assembly overview - intake manifold   | 445        |
| 4.2       | Removing and installing intake manifold   | 447        |
| 4.3       | Removing and installing throttle valve module GX3   | 453        |
| 4.4       | Cleaning throttle valve module GX3  | 456        |
| <b>5</b>  | <b>Senders and sensors</b>  | <b>458</b> |
| 5.1       | Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound, Golf, Passat, Touran, Tiguan | 458        |
| 5.2       | Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound, Arteon                       | 459        |
| 5.3       | Removing and installing fuel pressure sender G247   | 460        |
| 5.4       | Checking fuel pressure sender G247  | 464        |
| 5.5       | Removing and installing fuel pressure sender for low-pressure G410  | 469        |
| 5.6       | Removing and installing intake manifold sender GX9  | 470        |
| 5.7       | Removing and installing pressure differential sender for particulate filter G1037   | 471        |
| <b>6</b>  | <b>Engine control unit</b>  | <b>473</b> |
| 6.1       | Removing and installing engine control unit J623  | 473        |
| 6.2       | Removing and installing engine (motor) control unit J623 with protective housing  | 477        |
| <b>7</b>  | <b>High-pressure pump</b>   | <b>486</b> |
| 7.1       | Assembly overview - high-pressure pump  | 486        |
| 7.2       | Removing and installing high-pressure pump  | 488        |
| 7.3       | Removing and installing high-pressure pipe  | 492        |
| <b>8</b>  | <b>Lambda probe</b>   | <b>496</b> |
| 8.1       | Assembly overview - Lambda probe  | 496        |
| 8.2       | Removing and installing Lambda probe  | 497        |
| <b>26</b> | <b>Exhaust system</b>   | <b>501</b> |
| <b>1</b>  | <b>Exhaust pipes and silencers</b>  | <b>501</b> |
| 1.1       | Assembly overview - silencers   | 501        |
| 1.2       | Removing and installing silencer  | 514        |
| 1.3       | Separating exhaust pipes from silencers   | 525        |
| 1.4       | Aligning exhaust system free of stress  | 532        |
| 1.5       | Checking exhaust system for leaks   | 533        |
| <b>2</b>  | <b>Emission control</b>   | <b>534</b> |
| 2.1       | Assembly overview - emission control  | 534        |
| 2.2       | Assembly overview - bracket and pipes for pressure differential sender for particulate filter G1037                             | 549        |
| 2.3       | Removing and installing catalytic converter   | 550        |
| 2.4       | Removing and installing holder of pressure differential sender for particulate filter G1037                                     | 567        |
| 2.5       | Removing and installing exhaust flap control unit J883/J945, Passat CJXA, Arteon  | 568        |
| <b>3</b>  | <b>Exhaust gas temperature regulation</b>   | <b>569</b> |
| 3.1       | Assembly overview - exhaust gas temperature regulation  | 569        |
| 3.2       | Removing and installing parts of exhaust gas temperature regulation   | 570        |



---

|           |  |            |
|-----------|--|------------|
| <b>4</b>  | <b>Secondary air system</b> .....                              | <b>575</b> |
| 4.1       | Assembly overview - secondary air system .....                 | 575        |
| 4.2       | Removing and installing secondary air pump motor V101 .....    | 576        |
| 4.3       | Renewing stop buffer for secondary air pump .....              | 576        |
| 4.4       | Removing and installing secondary air inlet valve N112 .....   | 577        |
| <b>28</b> | <b>Ignition system</b> .....                                   | <b>579</b> |
| <b>1</b>  | <b>Ignition system</b> .....                                   | <b>579</b> |
| 1.1       | Assembly overview - ignition system .....                      | 579        |
| 1.2       | Removing and installing ignition coils with output stage ..... | 581        |
| 1.3       | Removing and installing knock sensor 1 G61 .....               | 583        |
| 1.4       | Removing and installing Hall sender .....                      | 585        |
| 1.5       | Removing and installing engine speed sender G28 .....          | 586        |